

REVLON®



ONE-STEP VOLUMISER PLUS

Oval brush dryer and volumiser

RVDR5298E

CONTENTS

ENGLISH (GB)	2	Use and Care Instruction Manual
ČEŠTINA	5	Návod k použití a péči o přístroj
DEUTSCH	8	Gebrauchs- und Pflegeanleitung
DANSK	11	Brugsanvisning og vedligeholdelsesinstruktion
ESPAÑOL	14	Manual de instrucciones de uso y precauciones
SUOMI	17	Käyttö- ja hoito-ohje
FRANÇAIS	20	Manuel d'utilisation et d'entretien
ΕΛΛΗΝΙΚΑ	23	Οδηγίες χρήσης και φροντίδας
MAGYAR	26	Használati és karbantartási tanácsok
ITALIANO	29	Istruzioni per l'uso e la manutenzione
NEDERLANDS	32	Handleiding voor gebruik en verzorging
NORSK	35	Håndbok for bruk og stell av apparatet
POLSKI	38	Instrukcja użycia i konserwacji
PORTUGUÊS	41	Manual de instruções de utilização e cuidados
ROMÂNĂ	44	Manual de utilizare și întreținere
РУССКИЙ	47	Руководство по использованию и уходу
SVENSKA	50	Instruktioner för användning och underhåll
TÜRKÇE	53	Kullanım ve Bakım Kılavuzu
ENGLISH (ZA, KW)	56	Additional Important Safety Instructions

Oval Brush Dryer and Volumiser

Oválny horkovzdušný kartáč zvyšujúci objem vlasú
Haartrockner und Volumiser mit ovaler Bürste
Hårtørrer og volumiser med oval børste
Secador voluminizador con cepillo ovalado
Ovaali hiustenkuivaaja ja tuuhtuttava harja
Sèche-Cheveux Brosse ovale et volumisante
Οβάλ πιστολάκι μαλλιών - βούρτσα styling
Hajszárító és -dúsító ovális hajkefe
Asciugacapelli con spazzola ovale e volumizzante
Haardroger en Volumiser met ovale borstel
Oval varmluftsborste og volumborste

Ovalna suszarko-łokówka ze szczotką
Escova oval para secar e pentear
Perie ovală cu aer cald și funcție de volum
Овальная щетка-фен и волюмайзер
Oval borstfön och volymiserare
Oval Fırçalı Saç Kurutma Makinesi ve Hacimlendirici



KEEP THESE IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions before using this appliance. This appliance is intended for household use only.

These instructions are also available on our website. Please visit www.helenofroy.com/emea-en/



WARNING: Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

WARNING: When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.

For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30 mA is advisable in the electrical circuit supplying the bathroom. Ask your installer for advice.

This appliance can be used by children aged from 8 years and above, and by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

Children should be supervised to ensure that they do not play with the appliance.

Cleaning and user maintenance shall not be made by children without supervision.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING: Do not leave the appliance unattended. Do not allow bare skin or the eyes to come into contact with any heated surface on the appliance when in use. Do not place the appliance on any heat-sensitive surfaces when hot or plugged into the mains. Always unplug the appliance when not in use.

WARNING: Do not block the air inlet or outlet during use. When using the appliance, care must be taken to prevent hair entering the air inlet opening. The air outlet opening of this appliance will become hot during use, avoid touching the outlet or any accessories attached to the outlet.

NOTE: Use on towel-dried hair only.

WARNING: Should this product malfunction, do not attempt to repair it. This appliance has no user-serviceable parts or components.

One-Step Volumiser Plus

The revolutionary One-Step Volumiser Plus is designed to deliver gorgeous volume and brilliant shine in just ONE STEP. The unique shape features gently curved sides for smoothing the hair, while the round edges create volume at the roots and beautifully curled ends, resulting in gorgeous styles in less time.

Tourmaline Ionic Technology®

Reduce frizz for shiny, healthy-looking hair.

Ceramic Titanium Technology

Helps reduce damage and provides a smooth glide.

Styling Tips

- For faster results, towel dry hair to remove excess water, then run a comb through damp hair to detangle for best results.
- Plug the appliance into an electrical outlet and adjust the switch to the selected setting. Use the I setting on fine or thin hair, II setting for medium wavy hair, and the III setting on thick and coarse hair. Use the ✱ setting to lock in the style.
- Separate hair into manageable sections.
- For smooth blowouts, place the Volumiser close to the roots and brush down toward the ends. The mixed nylon charcoal infused pins with rounded tips quickly detangle, while tufted bristles gently grip hair to smooth and promote shine.
- For voluminous blow-dries, place the Volumiser under the hair close to the roots and roll outward to the ends. For Extra lift at the roots, hold the Volumiser for 2 to 3 seconds under the roots.
- To curl ends IN, place the Volumiser UNDER the ends and hold for 2 to 3 seconds before rotating inward. To curl ends OUT, place the Volumiser OVER the ends and hold for 2 to 3 seconds before rotating outward.
- Repeat on remaining sections until hair has been dried into luxurious, voluminous styles.
- Turn the appliance off when drying and styling is complete. Allow the unit to cool completely before storing.

Features:

See page 1.

- Air Inlets
- Handle with ergonomic design
- Release Button
- Detangler Pins
- Cool Tip
- 4-Position switch (Off, I, II, III, ✱)
- 2.5m tangle-free swivel cord

The appearance of this appliance may differ from the illustration.

Cleaning

Always unplug the appliance from the mains after use and allow it to cool before cleaning. Wipe the outer surface of the dryer with a slightly moist cloth, then wipe dry. Dust and lint can be removed from the air intake openings with a small brush or vacuum cleaner with a brush attachment.

Storage

Always unplug when not in use.

Allow the appliance to cool before storing. Always store in a dry location. Do not pull or twist the cord. Do not wrap the cord around the appliance, as this may cause the cord to wear prematurely and break. Regularly check the power cord for wear and damage (particularly where it enters the appliance and the plug).

Guarantee and Service

Your Revlon appliance is guaranteed against defects under normal use for 4 years from the original date of purchase. If your product does not perform satisfactorily because of defects in materials or manufacture, within the warranty period, it will be replaced. Please retain your till receipt or other proof of purchase for all claims within the warranty period. The guarantee becomes void if the proof of purchase is not presented. Simply take the appliance back to the retailer from where purchased, along with a valid till receipt, for exchange free of charge. This guarantee does not cover defects which have occurred due to misuse, abuse or are caused by failure to follow the instructions contained within this manual.

UK only: This does not affect your consumer statutory rights.

The manufacturing date is given by the 4 digit Batch Number marked on the rear of the product. The first 2 digits represent the week of manufacture, and the last 2 digits represent the year of manufacture. Example: 3420 - product manufactured week 34 of the year 2020.

For product support, please visit us at: www.helenofroy.com/emea-en/support

For product information, visit us at: www.revlonhairtools.co.uk

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!