

# Quick Start Guide

MODEL: PV12/PV112/DP203/FG110/MWV2003

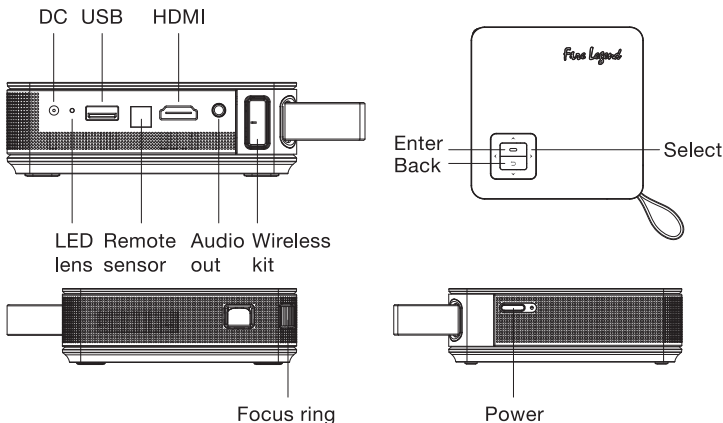 
## Precautions

### How to use the device properly:

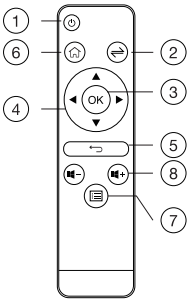 
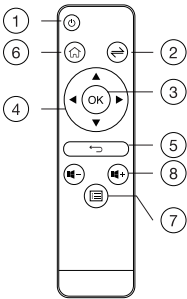 
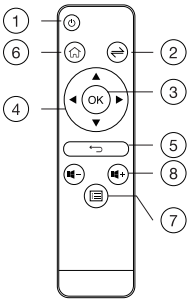 
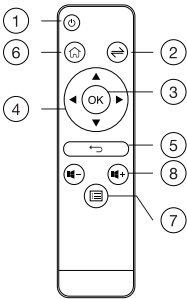 
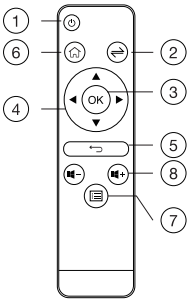 
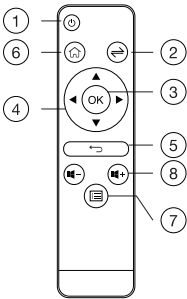 
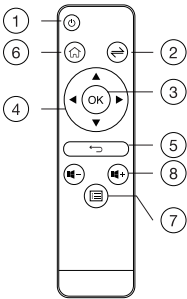 
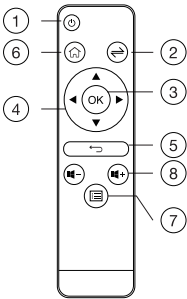 
- (1) Do not turn the lens toward human eyes when in operation, to avoid damaging the eyes caused by the high intensity light source.
- (2) Do not block the device ventilation to avoid damage to the internal electronic devices due to overheating.
- (3) The machine will automatically shut down after 5 seconds due to overheat temperature.
- (4) Please keep the device and its parts and accessories out of reach of children.
- (5) Please ensure that the device is operated in a dry and ventilated environment.
- (6) Do not store the device in extreme hot or cold conditions. High and low temperatures may shorten the lifespan of electronic devices. The normal operating environment is between 5°C~30°C.
- (7) Do not put the device into any drying equipment (such as dryer, microwave oven, etc.).
- (8) Do not squeeze or place heavy objects over the device to avoid damage to the device.
- (9) Do not throw, knock, or shake the device violently, which may damage the internal circuit boards.
- (10) Do not attempt to disassemble the device without permission. If there is any problem, please contact customer support.
- (11) Do not repair any product by yourself. If the device or any part does not work properly, you should consult customer support or return the device for repair.
- (12) Do not clean the devices or lens with chemicals, detergent or water. And do not expose them to rain, moisture and mineral containing liquids that may corrode the circuit board.
- (13) Improper cleaning will damage the lens. So please do not wipe the lens, or use detergent, any solvent to clean them. Damage caused by the improper cleaning is not within the scope of warranty.

As the device is a high intensity light source, do not stare or look directly at the lens during operation, which may damage your eyes. This warning applies to children as well.

## About Your Projector



## About Your Remote Controller

	No.	Function
	1	Power key to turn off projector
	2	Quick key to enter Bluetooth music mode
	3	Confirmation key
	4	4 direction keys
	5	Back key
	6	Quick key to enter home menu
	7	Quick menu key
	8	Volume up / down
Remark: 1. Batteries are not included. 2. Wi-Fi setting and advanced settings can be controlled by remote controller only.		

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!