



Marshall MINOR III True Wireless Earbuds User Manual

January 28, 2022 January 30, 2022

[Home](#) » [Marshall](#) » Marshall MINOR III True Wireless Earbuds User Manual 

Marshall

MINOR III – TRUE WIRELESS



FULL USER MANUAL

Contents [[hide](#)]

- 1 GETTING STARTED
- 2 TOUCH CONTROLS
- 3 CHARGING THE EARBUDS
- 4 CHARGING THE CASE
- 5 LED INDICATOR
- 6 PAIRING A NEW DEVICE
- 7 RESETTING THE EARBUDS
- 8 Documents / Resources
 - 8.1 Related Manuals / Resources

GETTING STARTED

1. Open the charging case.
2. Press and hold the button on the bottom of the case until the LED turns to a slow blue pulse.
3. Select MINOR III from your sound device's Bluetooth® list.



TOUCH CONTROLS

Touch the left or right earbud to control your music and phone calls.

- 1 touch to play/pause or receive/end a call
- 2 touches to skip forward or reject a call
- 3 touches to skip backward

CHARGING THE EARBUDS

Put your earbuds back in the case and close the lid to turn them off and begin charging.

CHARGING THE CASE

Use a wireless charger or plug the case into a USB power source to charge it. The case is fully charged when the front-facing LED is steady green.

To charge the case using a wireless charger, follow the instructions below.

1. Place the charging case with its back flat against the wireless charging pad.
2. Make sure that the front LED lights up to indicate that the case is charging.
3. Once the LED light has turned steady green the case is fully charged.

LED INDICATOR

The LED shows the case battery charge, from red through yellow to green (0–100%). It pulses blue while in Bluetooth pairing mode.

PAIRING A NEW DEVICE

Minor III remembers up to 6 previously paired devices and will try to reconnect with the last connected device.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the button on the bottom of the case until the LED turns to a slow blue pulse.
3. Select MINOR III from your sound device's Bluetooth list.

Note: Minor III can be connected with one sound device at a time. Make sure to disconnect from the current device before reconnecting with a different device.

RESETTING THE EARBUDS

If your earbuds become erratic or unresponsive, follow the instructions below.

1. Place the earbuds in the case and close the lid to restart the earbuds.

If the problem persists, perform a factory reset.

Note: This will delete all user settings and the earbuds will need to be paired again.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the Bluetooth pairing button for 10 seconds, until the LED turns purple, to reset the earbuds to factory settings.
3. Remove MINOR III from your sound device's Bluetooth list before pairing again.

If the problem persists, perform a hardware reset.

Note: This will delete all user settings and the earbuds will need to be paired again.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the Bluetooth pairing button for 15 seconds to reset the earbuds.
3. Remove MINOR III from your sound device's Bluetooth list before pairing again.

Marshall is a trademark of Marshall Amplification Plc. Permission granted. Design of product and packaging are intellectual properties of Zound Industries International AB, Centralplan 15 111 20 Stockholm, Sweden. © Zound Industries International AB. All Rights Reserved.

The Bluetooth® wordmark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Zound Industries International AB is under license.

Documents / Resources



[Marshall MINOR III True Wireless Earbuds](#) [pdf] User Manual
MINOR III, True Wireless Earbuds, MINOR III True Wireless Earbuds, Earbuds



[Marshall Minor III True Wireless Earbuds](#) [pdf] User Manual
Minor III True Wireless Earbuds, Minor III, True Wireless Earbuds

Related Manuals / Resources

[True Wireless Earbuds User Manual](#)

True Wireless Earbuds User Manual

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!