

DENON[®]

AVR-X2700H AVR-X2700H DAB

INTEGRATED NETWORK AV RECEIVER

Owner's Manual

[Front panel](#)[Display](#)[Rear panel](#)[Remote](#)[Index](#)

Accessories	9	Connecting a TV	52
Inserting the batteries	10	Connection 1 : TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel) / eARC (Enhanced Audio Return Channel)	53
Operating range of the remote control unit	10	Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC (Audio Return Channel) / eARC (Enhanced Audio Return Channel)	54
Features	11	Connection 3 : TV equipped without an HDMI connector	55
High quality sound	11	Connecting a playback device	56
High performance	12	Connecting a set-top box (Satellite tuner/cable TV)	57
Easy operation	16	Connecting a DVD player or Blu-ray Disc player	58
Part names and functions	17	Connecting a player device compatible with the 8K	59
Front panel	17	Connecting a video camcorder or game console	60
Display	20	Connecting a turntable	61
Rear panel	22	Connecting a USB memory device to the USB port	62
Remote control unit	26	Connecting FM/AM antennas (for FM/AM model only)	63
Connections		Connecting a DAB/FM antenna (for FM/DAB model only)	65
Speaker installation	30	Connecting to a home network (LAN)	66
Connecting speakers	37	Wired LAN	66
Before connecting speakers	37	Wireless LAN	67
Speaker configuration and “Amp Assign” settings	41	Connecting the power cord	68
Connecting 5.1-channel speakers	42		
Connecting 7.1-channel speakers	43		
Connecting 5.1-channel speakers: Bi-amp connection of front speaker	49		
Connecting 5.1-channel speakers: Second pair of front speaker	50		
Connecting multi-zone speakers	51		



Playback

Basic operation	70
Turning the power on	70
Selecting the input source	70
Adjusting the volume	71
Turning off the sound temporarily (Muting)	71
Playback a DVD player/Blu-ray Disc player	71
Playing a USB memory device	72
Playing files stored on USB memory devices	73
Listening to music on a Bluetooth device	76
Playing music from Bluetooth device	77
Pairing with other Bluetooth devices	78
Reconnecting to this unit from a Bluetooth device	79
Listening to audio on Bluetooth headphones	80
Listening to audio on Bluetooth headphones	81
Reconnecting to a Bluetooth headphones	82
Disconnecting Bluetooth headphones	82

Listening to FM/AM broadcasts (for FM/AM model only)	83
Listening to FM/AM broadcasts	84
Tuning in by entering the frequency (Direct Tune)	86
RDS Search	86
PTY Search	87
TP Search	88
Radio text	88
Changing the tune mode (Tune Mode)	89
Tuning in to stations and presetting them automatically (Auto Preset Memory)	89
Presetting the current broadcast station (Preset Memory)	90
Listening to preset stations	90
Specify a name for the preset broadcast station (Preset Name)	91
Skipping preset broadcast stations (Preset Skip)	92
Cancelling Preset Skip	93



Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!