


 **esperanza**[®]
creating space for your dreams

CONVECTION OVEN QUASAR



MANUAL
EK0003

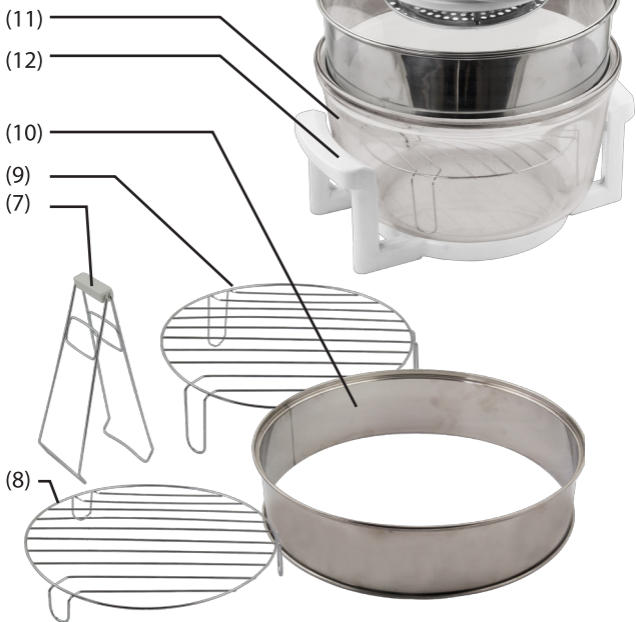

TECHNICAL SPECIFICATION

- Power supply: 230 V, 50 Hz
- Power consumption: 1200-1400W
- Gentle cooking with the application of hot circulating air
- Low content of fat and preservation of vitamins
- Versatile application: roasting / baking / frying / grilling / steaming / stewing / defrosting / heating
- Smooth thermostat adjustment from 0°C to 250°C
- Capacity: 18 litres
- 60-minute timer with acoustic termination signalling (buzzer)
- Halogen heater, prompt heating-up
- Savings in time and energy, it requires less (by up to 40%) energy than a conventional oven does
- Perfect for small kitchens and camping sites
- Glass bowl: Ø 33cm (diameter)
- The container made of shatter-proof glass and resistant to high temperature and scratching (it can be washed in a dishwasher)
- Operation and temperature indicators
- Safety switch, practical and safe handle
- Carrying handle with thermal insulation
- Accessories: grill grates (upper and lower), pliers, ring extension
- Dimensions: 380 * 330 * 205 mm (W*H*D)
- Weight: 5.9 kg
- Power cable: 3G 0.75 mm² length 1 m

GENERAL SAFETY RULES

Please read the operating instructions carefully prior to starting the appliance. Please keep it with the warranty, proof of purchase and, if possible, with the box with its internal packing. If you wish to pass the appliance to another person, do it with the operating instructions.


- Use the appliance for private purposes as intended only. This appliance is not intended for commercial use.
- Do not use the appliance outdoors. Please keep the appliance away from heat, direct sunlight, moisture (never dip it into any liquid) and sharp edges. Do not use the appliance with your wet hands. If the appliance is humid or wet, pull the plug immediately (pull the plug, not the cord).
- If you do not use the appliance or if you want to mount any accessories, clean it or in case of any defect, always turn the appliance off and unplug it.
- Do not let the running appliance be left unattended. Prior to leaving the room, always turn off and unplug the appliance.
- Regularly check if the appliance and the power cable are not damaged. In case of damage, stop using the appliance.
- In case of failure, do not repair the appliance by yourself, engage an authorised specialist instead. If the non-detachable power cable is damaged, replace it with a new one provided by the manufacturer or have it fixed at an authorised repair centre or by a qualified person in order to avoid danger.

- Use the original accessories only.
- Keep the following "Special guidelines on safe use" in your mind.

CHILDREN AND PEOPLE WITH DISABILITIES

- For the safety of children, do not leave unattended any freely accessible packaging parts (plastic bags, cardboard, polystyrene, etc.).
- Do not let children play with the foil. Danger of suffocation!
- The appliance may not be used by persons (including children) with reduced physical, motor or mental capacities or with no necessary experience and /or knowledge. The appliance may be used by such persons under the supervision of their guardian or upon getting guidance on its use only.
- Do not let children play with the appliance.

SPECIAL GUIDELINES ON SAFE USE OF THE APPLIANCE

 **WARNING:** Hot surface! Risk of burning!

When the appliance is in operation (and immediately afterwards) the temperature of its accessible surfaces may be very high.

- Do not touch hot parts of the appliance.
- Keep the appliance by its handles only. Moreover, wear gloves kitchen.
- Use the appliance with its plastic casing only.
- Always put the cover on the bowl prior to plugging in and turning on the appliance.
- Let the appliance cool down prior putting in or taking accessories out of the bowl.
- Let the appliance cool down, then clean and set aside (for later use).
- Do not move or lift the appliance when in use; you should turn it off and unplug it first. Always carry the

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!