

KURZWEIL®

KPI10

USER'S
MANUAL

HDC YOUNG CHANG
MUSIC

INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated DC adaptor to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the DC power adaptor when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth.

Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, remove the electric plug from the outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Contents

Panel & Display Description		
Front Panel.....	4	
Rear Panel.....	5	
LCD.....	5	
Setup		
Power Supply.....	6	
Setting a Music Stand.....	6	
Using Sustain Pedal.....	6	
Connections		
Connecting a pair of Headphones.....	7	
Connecting an Audio Equipment.....	7	
Connecting an MP3/CD Player.....	7	
Connecting a Computer.....	7	
Connecting a Microphone.....	7	
Power Switch and Master Volume.....	8	
Playing Demo Songs.....	8	
Playing Voices.....	9	
Playing Styles.....	9	
Playing Songs.....	10	
Record.....	10	
Playing Voices		
Selecting a Voice.....	11	
Playing two voices simultaneously-DUAL.....	11	
Playing Different Voices with Both hands-LOWER.....	11	
Touch.....	12	
Sustain.....	12	
Pitch Bend.....	12	
Transpose.....	12	
Octave.....	13	
Piano mode.....	13	
Metronome.....	13	
Auto Accompaniment		
Play Auto Accompaniment(rhythm track only).....	14	
Play Auto Accompaniment(all tracks).....	14	
Accompaniment Sections.....	15	
Playing Different Accompaniment Sections.....	15	
Fade.....	15	
Accompaniment Volume Control.....	16	
Chord Fingering.....	16	
Tempo.....	17	
One Touch Setting.....	17	
Harmony		
Play with harmony effect.....	18	
Performance Assistant		
What's the performance assistant?.....	18	
Enter the Performance Assistant.....	18	
Guitar Mode.....	19	
Playing in Guitar Mode.....	19	
Piano Mode.....	20	
Playing in Piano Mode.....	20	
Exit the Performance Assistant.....	20	
DSP.....	21	
Mixer.....	21	
Pedal Function.....	22	
Function Menu		
Tune.....	23	
KeySplit.....	23	
Beat Type.....	24	
Metronome Volume.....	24	
Pedal Type.....	24	
EQ Type.....	24	
Reverb Type.....	24	
Reverb Level.....	25	
Chorus Type.....	25	
Chorus Level.....	25	
Harmony Type.....	25	
MIDI IN.....	26	
MIDI OUT.....	26	
Auto Power Off.....	26	
Performance Beat.....	27	
Vocal Effects.....	27	
Vocal Effect Level.....	27	
Restore Factory Setting.....	27	
Register Memory		
Registering the Panel Setting.....	28	
Recalling the Registered Panel Settings.....	28	
Selecting a Registration Bank.....	28	
Song Album.....	28	
Record		
Start Recording.....	29	
Stop Recording.....	30	
Playback Recording.....	30	
Delete User Song.....	30	
Song		
Listen to the songs.....	31	
Song Control.....	31	
Smart Learning System		
Smart Learning.....	32	
Chord Dictionary		
DICT 1 (Chord Learning Mode).....	36	
DICT 2 (Chord Testing Mode).....	36	
MIDI		
What's MIDI?.....	37	
Upload/Download Data from the Computer.....	37	
Troubleshooting.....	38	
Specifications.....	39	
Appendices		
Voice List.....	40	
Style List.....	46	
Song List.....	49	
Demo List.....	51	
Album List.....	52	
MIDI Implementation Chart.....	55	

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!