



## OWNER'S MANUAL

# Magic Remote

---

Please read this manual carefully before using your remote and retain it for future reference.

Contents in this manual may be changed without prior notice due to upgrade of product functions.

MR22GN



\* M F L 7 1 8 5 7 8 0 2 2 1 1 2 R E V 0 1 \*

[www.lg.com](http://www.lg.com)

Copyright © 2022 LG Electronics Inc. All Rights Reserved.

## Accessories

- Magic Remote and Alkaline Batteries (AA)
- Owner's manual

(⊕ Depending on country)

## Installing Batteries

 
- Press the top of the battery cover, slide it back, and lift the cover as shown below.
- To replace batteries, open the battery cover, replace alkaline batteries (1.5 V, AA) matching ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the remote control at the remote control sensor on the TV.
- To remove the batteries, perform the installation actions in reverse. Don't mix old or used batteries with new ones. Close the cover securely.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.



## Register/Unregister the Magic Remote

- Turn on the TV and press the **Wheel (OK)** on the Magic remote for registration.
- Press and hold the **Home** button and **Back** button together for more than 5 seconds to disconnect the Magic Remote.
- Press and hold the **Home** button and **Q. Settings** button together for more than 5 seconds to disconnect and re-register the Magic Remote at the same time.

## Remote Description



**Power** Turns the TV on or off.



**Number buttons** Enters numbers.

Accesses the [Quick Help].



Accesses the [Guide].



**Dash** Inserts a — between numbers such as 2-1 and 2-2.



Accesses the saved channels or programmes list.



Accesses the [Edit Quick Access].

- [Edit Quick Access] is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.



**More actions** Displays more remote control functions.



**AD/SAP** Video/audio descriptions function will be enabled. (Depending on country)

SAP (Secondary Audio Program) feature can also be enabled by pressing the button. (Depending on country)



**Volume buttons** Adjusts the volume level.



**Mute** Mutes all sounds.



**Mute** Accesses the [Accessibility] menu.



**Channel buttons / Programme buttons** Scrolls through the saved channels or programmes.



**Home** Accesses the Home menu.



**Home** Launches the last used apps.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!