

BenQ

**MX850UST/MW851UST Digital Projector
User Manual**

Welcome

Table of contents

Important safety

instructions3

Introduction.....7

Projector features 7

Shipping contents..... 8

Projector exterior view..... 9

Controls and functions 10

Positioning your projector 14

Choosing a location..... 14

Obtaining a preferred projected image
size 15

Connection 17

Connecting video source devices..... 18

Playing sound through the projector . 19

Operation20

Starting up the projector 20

Adjusting the projected image 21

Using the menus..... 22

Securing the projector..... 23

Switching input signal..... 26

Magnifying and searching for details . 27

Selecting the aspect ratio..... 27

Optimizing the image..... 29

Setting the presentation timer 32

Remote paging operations 33

Freezing the image..... 33

Hiding the image 33

Locking control keys 33

Operating in a high altitude
environment 34

Creating your own startup screen 34

Adjusting the sound.....35

Controlling the projector through a LAN
environment35

Shutting down the projector39

Direct power off.....39

Menu operation 40

Maintenance.....50

Care of the projector.....50

Lamp information.....51

Troubleshooting57

Specifications58

Projector specifications.....58

Dimensions.....59

Wall mount installation.....60




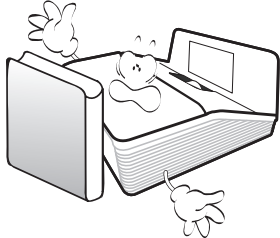

Timing chart.....63

Warranty and Copyright

information66

Important safety instructions

Your projector is designed and tested to meet the latest standards for safety of information technology equipment. However, to ensure safe use of this product, it is important that you follow the instructions mentioned in this manual and marked on the product.

Safety Instructions	
<p>1. Please read this manual before you operate your projector. Save it for future reference.</p>	<p>4. In some countries, the line voltage is NOT stable. This projector is designed to operate safely within a mains voltage between 100 to 240 volts AC, but could fail if power cuts or surges of ± 10 volts occur. In areas where the mains voltage may fluctuate or cut out, it is recommended that you connect your projector through a power stabilizer, surge protector or uninterruptible power supply (UPS).</p>
	
<p>2. Do not look straight at the projector lens during operation. The intense light beam may damage your eyes.</p>	<p>5. Do not block the projection lens with any objects as this could cause the objects to become heated and deformed or even cause a fire. To temporarily turn off the lamp, press ECO BLANK on the projector or remote control.</p>
	
<p>3. Refer servicing to qualified service personnel.</p>	
	

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!