



## Dear customer

Thank you for purchasing this product.  
For optimum performance and safety, please read these instructions carefully.  
These operating instructions fundamentally explain the operation of RX-D19.

### Supplied accessories

Please check and identify the supplied accessories.  
Use numbers indicated in parentheses when asking for replacement parts.


**AC mains lead** ..... 1pc.

For United Kingdom: (RJA0053-2X)

For Australia and New Zealand: (RJA0035-X)

For others: (RJA0019-2K)

**Remote control transmitter** **RX-D19 only** ..... 1pc.  
(EUR648258)

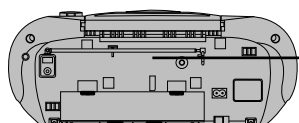

(Back of product)

CLASS 1  
LASER PRODUCT

LUOKAN 1 LASERLAITE  
KLASS 1 LASER APPARAT

DANGER	INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCK DEFEATED. AVOID DIRECT EXPOSURE TO BEAM.
ADVARSEL	USYNLIG LASERSTRÅLING VED ÅBNING, NÅR SIKKERHEDSAFBRYDERE ER UDE AF FUNKTION. UNDGÅ UDSÆTTELSE FOR STRÅLING.
VARO!	AVATTAESSA JA SUOJALUKITUS OHITETTAESSA OLET ALLTIINA NÄKYMÄTÖNÄ LASERSÄTEILYLLE. ÄLÄ KATSO SÄTEESEEN.
VARNING	OSYNLIG LASERSTRÅLNING NÄR DENNA DEL ÄR ÖPPNAD OCH SPÄRREN ÄR URKOPPLAD. BETRÄKTA EJ STRÅLEN.
ADVARSEL	USYNLIG LASERSTRÅLING NÅR DEKSEL ÅPNES OG SIKKERHEDSLÅS BRYTES. UNNGÅ EKSPONERING FOR STRÅLEN.
VORSICHT	UNSIICHTBARE LASERSTRAHLUNG, WENN ABDECKUNG GEOFFNET UND SICHERHEITSVERRIEGELUNG ÜBERBRÜCKT. NICHT DEM STRAHL AUSSETZEN.

Inside of the product  
Tuotteen sisällä  
Produktets innsida

Panasonic®

## Portable Stereo CD System

Operating Instructions

Model No. **RX-D19**  
**RX-D17**



The illustrations show RX-D19.



### Note:

"EB" on the packaging indicates the United Kingdom.

Before connecting, operating or adjusting this product, please read these instructions completely.  
Please keep this manual for future reference.


E EB GN

## Power sources

### Using a household AC outlet

**FOR UNITED KINGDOM ONLY**  
**READ THE CAUTION FOR THE AC MAINS LEAD ON PAGE 7 BEFORE CONNECTION.**

Connect the AC mains lead firmly to the unit and the outlet.

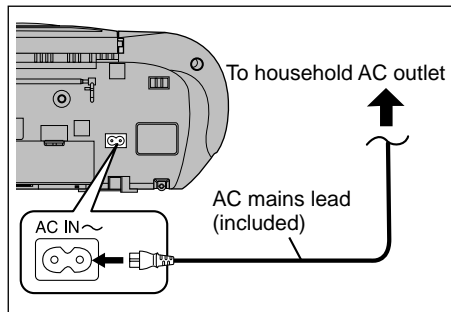


### Note

- The included AC mains lead is for use with this unit only. Do not use it with other equipment.
- The function selector switch does not separate entire unit from mains even if in "TAPE/OFF" position.

### Using batteries (not included)

The unit cannot be powered by batteries if the AC mains lead is connected.

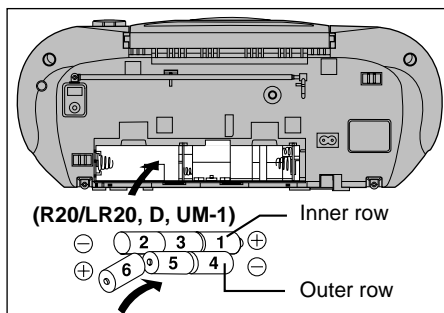


### When to change the batteries

Sound quality and operations are affected when the batteries are running low. Replace all six batteries. It is also a good idea to replace all the batteries before recording.

### Removing the batteries


Open the battery cover and insert your finger in the hole on the bottom of the unit and push out.

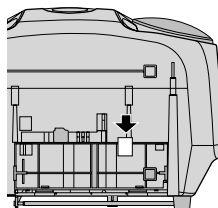

### Memory back-up

During power supply interruption, memory back-up batteries (not included) save CD programs and radio stations you have set.

These batteries do not power the unit.

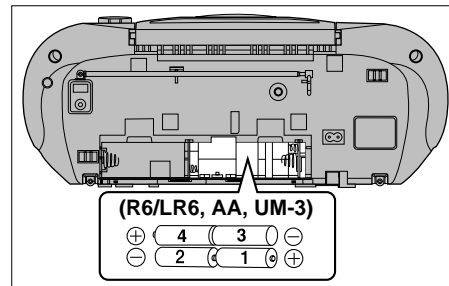

### When to change the batteries

The batteries last about a year. Connect the unit to AC power before replacing the batteries.

- Before connecting or disconnecting the AC mains lead, stop the tape and switch [SELECTOR] to "TAPE/OFF" to turn the unit off. The memory batteries are worn out faster if the cord is disconnected with the power still on.

### Removing the batteries


Press the negative end of the number 4 battery and remove the batteries. (Remove the power batteries first.)

RQT6341-B




## Controls

### Main unit:

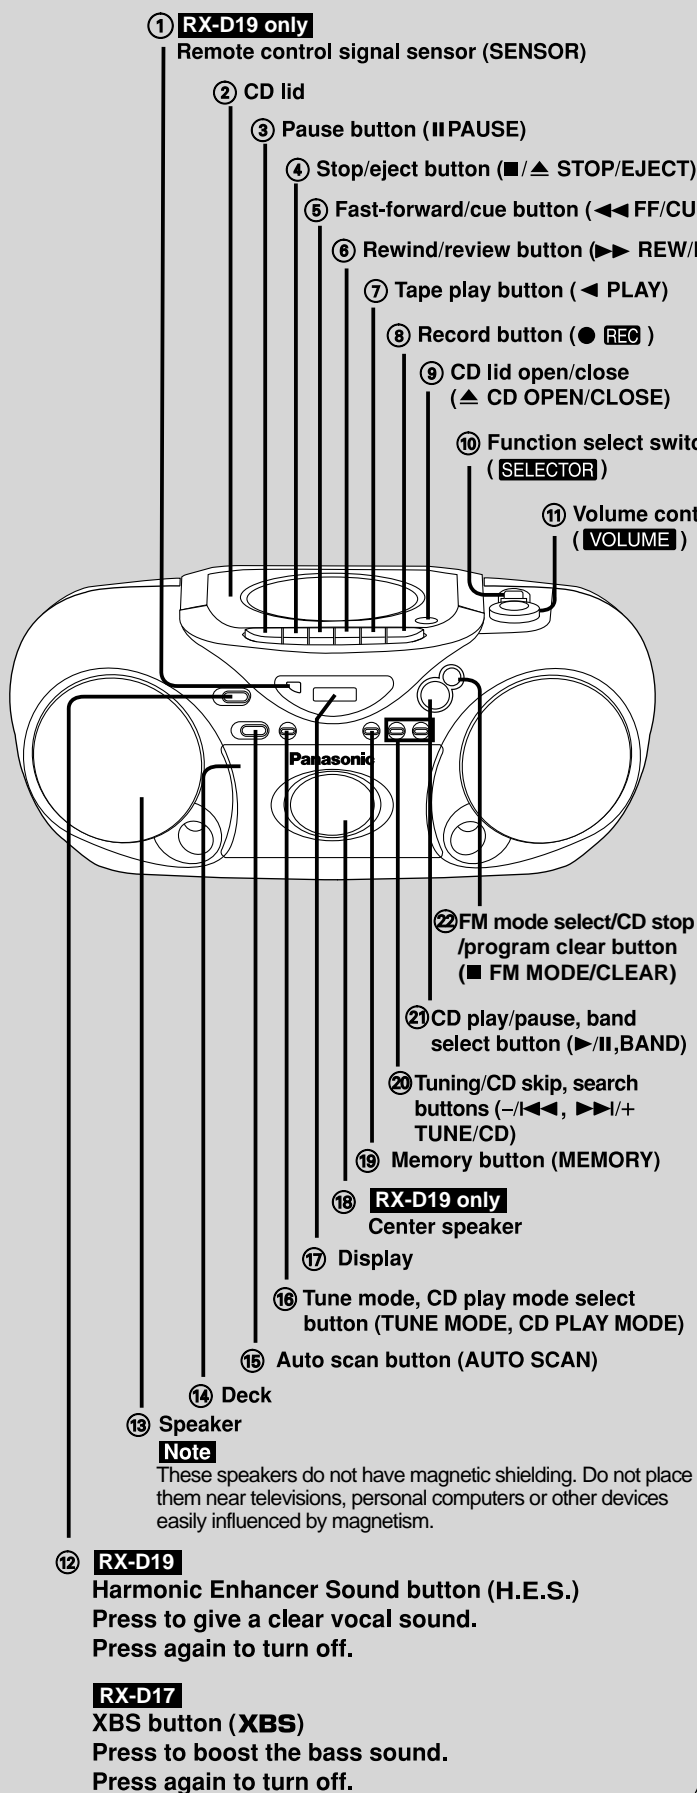

### Remote control **RX-D19 only**:

The functions of the buttons without descriptions are the same as on the main unit.

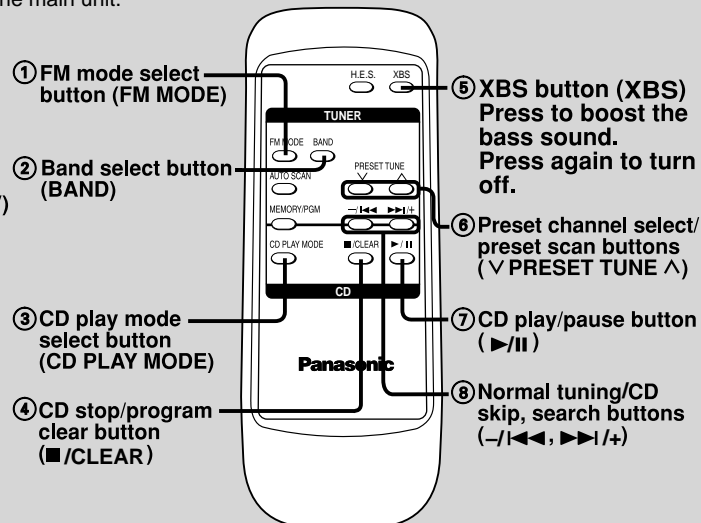


## Concerning the remote control


### **RX-D19 only**

### Battery installation

Insert the batteries (not included) observing the correct polarities (⊕, ⊖).

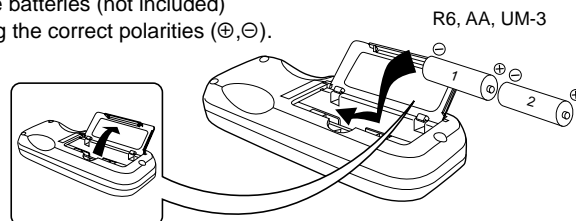

### Correct method of use

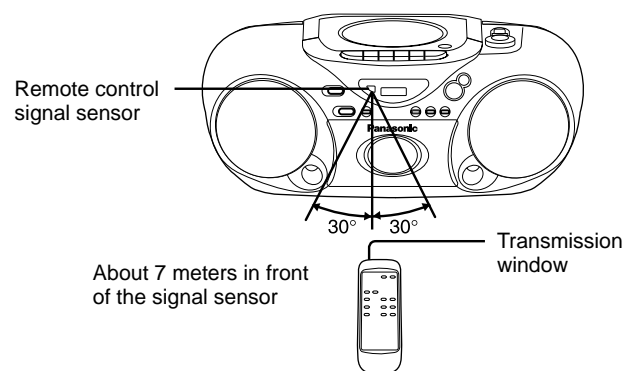

### Operation notes

- Do not place obstacles between the remote control signal sensor and the remote control unit.
- Do not expose the remote control signal sensor to direct sunlight or to the bright light of fluorescent light.
- Take care to keep the remote control signal sensor and end of the remote control unit free from dust.


### To prevent damage

- Never place heavy items on it.
- Do not disassemble or reconstruct it.
- Do not spill water or other liquids into it.



## The Radio


### Normal tuning

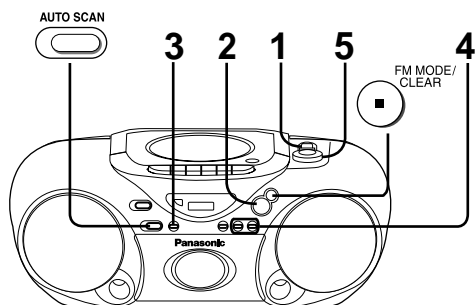

- 1 Switch [SELECTOR] to "TUNER".  
(Unit comes on.)


- 2 Press [BAND] to select "FM" or "AM".

 - 3 (Omit this step if using the remote control)  
If "PGM" is on the display, press [TUNE MODE] to clear it off.



- 4 Press [◀/I+] or [▶/I+] to tune to the desired station.

 The frequency changes one step each time a button is pressed.



"ST" lights when an FM stereo broadcast is being received.

#### Automatic tuning

Keep [◀/I+] or [▶/I+] depressed and release when the frequency display starts to change. A station with good reception is automatically selected and the process stops.

To stop automatic tuning, press [◀/I+] or [▶/I+] again.

#### Note

Automatic tuning may stop on a frequency where there is no station if there is interference. Press [◀/I+] and [▶/I+] to tune if this occurs.

 
- 5 Adjust the volume.

#### To use auto scan

You can search for a station by listening to all tuned-in stations for 8 seconds each.

Preparation: Switch [SELECTOR] to "TUNER".

1. Press [BAND] to select "FM" or "AM".
2. Press [AUTO SCAN].  
Auto scan starts.



3. Press [AUTO SCAN] when you find the desired station.

Auto scan ends when it reaches the original frequency again.  
To stop during the process, press [AUTO SCAN].


#### To improve reception

 FM: Extend the whip antenna and adjust its direction.

AM: Adjust facing of the unit.

#### If noise is excessive in the FM stereo mode

Press [FM MODE]. ("MONO" lights up.)




Sound will be produced in monaural, but this also reduces noise.

Press the button again to cancel. ("MONO" goes out.)

### Preset tuning


Preset the stations (twelve FM and twelve AM) to make tuning simpler.

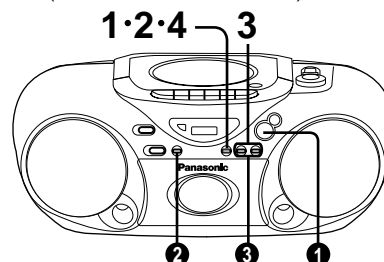


### How to preset

**Preparation:** Tune to the desired station.  
(Do steps 1–4 on the left.)

 - 1 Press [MEMORY].



 - 2 While "PGM" and the frequency are flashing  
Press [MEMORY].




Preset channel

- 3 While "PGM" and the preset channel are flashing  
Press [◀/I+] or [▶/I+] to select the desired channel.  
(Remote control: [V] or [A])



 - 4 Press [MEMORY].  
(This completes presetting.)



Repeat the above to preset other stations.

#### Note

If "PGM" goes off during presetting, return to step 1.

### To listen to preset channels

- 1 Press [BAND] to select "FM" or "AM".

- 2 (Omit this step if using the remote control)  
Press [TUNE MODE] to display "PGM".



- 3 Press [◀/I+] or [▶/I+] to select the desired channel (1–12).  
(Remote control: [V] or [A])



Preset channel

#### To use preset scan

You can search for a station by listening to all preset channels for 8 seconds each.

1. Do steps 1 to 2 above.

For remote control, replace [◀/I+] or [▶/I+] described below with [V] or [A].

2. Press and hold [◀/I+] or [▶/I+] until "PS" appears on the display.



3. Press [◀/I+] or [▶/I+] when you find the desired channel.

Preset scan ends after searching through each preset channel once.  
To stop during the process, press [◀/I+] or [▶/I+].

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.  
Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!