




**DAB - 48**  
**RADIO DAB/FM**  
**USER MANUAL**

**Product overview**

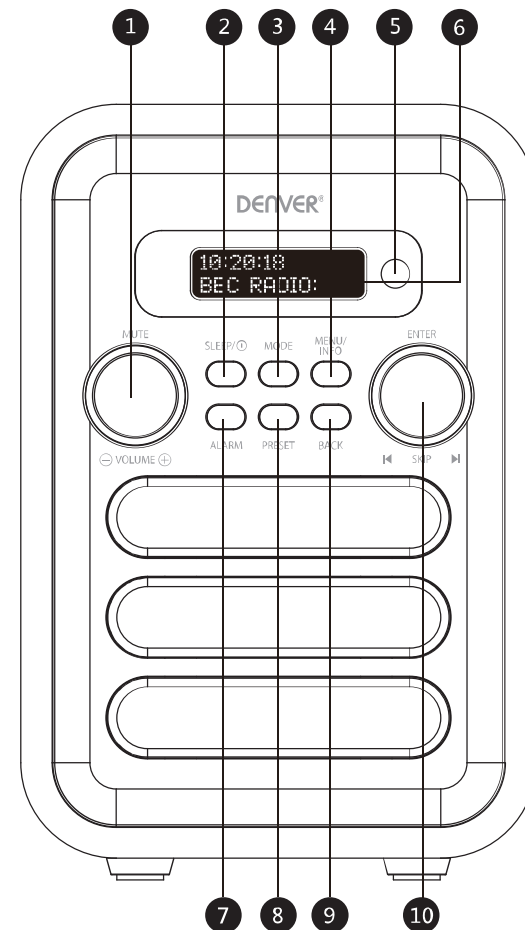

**1 Volume Knob:**

Turn clockwise to increase the volume, turn counter-clockwise to decrease the volume, press to mute/unmute the sound.

**2 Sleep Button:**

In operating mode, press the [SLEEP] button to enter and select the SLEEP time; press and hold the[SLEEP] button to toggle between operating modes.

**3 Mode Button:**

Press to change the mode; press and hold to adjust the display brightness.

**4 Info/Menu Button:**

In any mode, press to display messages. Press and hold to enter the settings menu.

**5 Remote Receiver Window:**

Direct the remote control towards the receiver window.

**6 LCD Display:**

Shows the corresponding content during operation.

**7 Alarm Button:**

Press to enter the alarm settings menu.

**8 Preset Button:**

In DAB/FM mode, press to call out a preset station; press and hold to save a station.


**9 Back Button:**

Press to return to the previous menu level.

**10 Rotary Knob:**

Turn clockwise to skip to NEXT title; turn counter-clockwise to skip to PREVIOUS title; press to use as ENTER / SCAN button.

**Product overview**

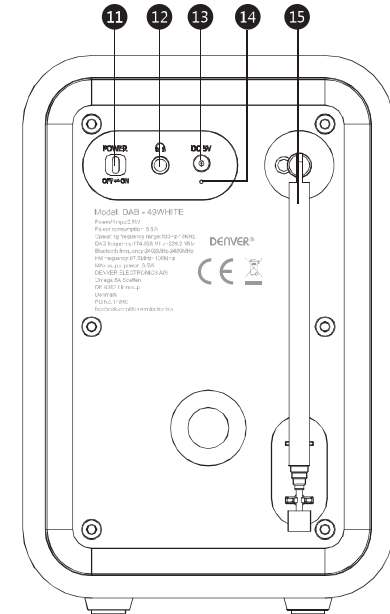

**11 Power Switch:**

Set to ON position to turn the radio on; set to OFF position to turn the radio off.

**12 Headphone jack:**

Supports standard 3.5 mm jack.

**13 DC-In:**

DC 5V power input.

**14 Power indicator:**

Lights up red when power is supplied via power adapter.

**15 Antenna:**

Extend carefully when listening to DAB/FM radio.

## Power On/Off

- ① Carefully extend the telescopic antenna when listening to DAB/FM radio.
- ② Set the power switch on the back of the radio to ON position to turn the radio on, and set the switch to OFF position to turn it off. The radio automatically enters DAB mode after being turned on.

### Setting Alarms

You can set 2 alarms by following the steps below:

- ① Press the [ALARM] button (3) to enter the alarm settings menu.
- ② Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to select alarm 1 or alarm 2 settings.
- ③ Then press the [ROTARY KNOB] to enter and turn the [ROTARY KNOB] [clockwise or counter-clockwise] to select the setting option On/Off/Time/Source/Repeat/Volume.

Alarm: Select On or Off.

Time: Select the time by rotating the [ROTARY KNOB] and press the [ROTARY KNOB] to confirm.

Source: Select FM, DAB or Buzzer.

Repeat: Select Once, Daily, Weekends or Workday.

Volume: Select the volume by turning the [VOLUME] knob clockwise or counter-clockwise, then press the [ROTARY KNOB] to confirm.

After setting all options, press [INFO/MENU] to exit the alarm settings menu.

When the alarm sounds, it gradually increases to the set volume. Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to adjust the snooze time and activate the snooze function. When the alarm sounds, press the [VOLUME] knob to mute the sound.

## System Settings

- ① In operating mode, press and hold the [INFO/MENU] button to enter the main menu. Turn the [ROTARY KNOB] (10) clockwise or counter-clockwise to select the corresponding function and press the [ROTARY KNOB] to enter the function.

## DAB Radio

- ① Switch your DAB-48 on, it will automatically enter DAB mode.
- ② When entering DAB mode for the first time, the radio will automatically search for radio stations. If stations have already been searched, press and hold the [ROTARY KNOB] to activate the automatic station search.
- ③ After searching the stations is completed, turn the [ROTARY KNOB] clockwise or counter-clockwise to cycle through the station list. Press the [ROTARY KNOB] to select a station. Rotate the [VOLUME] knob to adjust the volume; press the [VOLUME] knob to mute the sound and press the [VOLUME] knob again to unmute.
- ④ Press [INFO/MENU] to view information with regard to the current station: radio text, signal strength, program type, program name, channel number/frequency, signal error rate, bit rate, time and date are displayed.
- ⑤ Press and hold the [PRESETS] button to enter the radio presets, then rotate the [ROTARY KNOB] to cycle through the preset stations. Press the [ROTARY KNOB] to save the station under the current preset. To call up a preset station, press the [PRESETS] button and rotate the [ROTARY KNOB] to select the desired preset and press the [ROTARY KNOB] again to select.
- ⑥ Note: A total of 40 preset stations can be stored.
- ⑦ Press and hold the [INFO/MENU] button to enter the main menu, then rotate the [ROTARY KNOB] to select the corresponding function and press the [ROTARY KNOB] to enter. The following functions are available:

Note:

Station List: Display station list.

Scan: Automatically search for radio stations.

Manual Tune: Manually search for radio stations.

Prune Invalid: Delete stations that have become invalid.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!