

# CANDY

- FCP815X E0
- FCP602X E0
- FCP602X E0C
- FCP602X E0E
- FCXP825X E0
- FCXP645X E0
- FCP825XL E0
- FCS600X WIFI
- FCT600N WIFI
- FCXP645X E0/E
- FCXP825X E0/E
- FCP602X E0/E
- FCP602X E0C/E
- FCP602X E0E/E
- FCP815X E0/E
- FCP825XL E0/E
- FCS200X WIFI
- FCT615X WIFI
- FCXT600X WIFI
- FCT612X WIFI
- FCT825XL WIFI
- FCT615XNF WIFI

## USER INSTRUCTIONS

OVENS \_\_\_\_\_ EN 02

## KULLANIM KILAVUZU

FIRINLAR \_\_\_\_\_ TR 11

## NOTICE D'EMPLOI ET D'INSTALLATION

DES FOURS ENCASTRABLES \_\_\_\_\_ FR 22

## MANUALE D'ISTRUZIONI

FORNO \_\_\_\_\_ IT 31

## INSTRUCCIONES DE USO

HORNOS EMPOTRABLES \_\_\_\_\_ ES 40

## PIEKARNIKI DO ZABUDOWY

INSTRUKJA OBSŁUGI \_\_\_\_\_ PL 49

## FORNOS

MANUAL DE INSTRUÇÕES DE UTILIZAÇÃO \_\_\_\_\_ PT 58

## EINBAUBACKKÖFEN

BEDIENUNGSANLEITUNG \_\_\_\_\_ DE 67

## OVEN

GEBRUIKSAANWIJZING \_\_\_\_\_ NL 76

## POKYNY PRO UŽIVATELE

TROUBY \_\_\_\_\_ CZ 85

## PEČNICE

KORIŠTENJE PRIRUČNIK \_\_\_\_\_ HR 94

## NAVODILO ZA UPORABO

VEČNAMENSKE VGRADNE PEČICE \_\_\_\_\_ SL 103

## ΦΟΥΡΝΟΙ

ΟΔΗΓΙΕΣ ΧΡΗΣΗΣ \_\_\_\_\_ GR 112

## UPUTSTVA ZA KORISNIKE

RERNE \_\_\_\_\_ SRB 121

## HASZNALATI UTASITASA

SUTŐK \_\_\_\_\_ HU 130

## General Warnings

---

- During cooking, moisture may condense inside the oven cavity or on the glass of the door. This is a normal condition. To reduce this effect, wait 10-15 minutes after turning on the power before putting food inside the oven. In any case, the condensation disappears when the oven reaches the cooking temperature.
- Cook the vegetables in a container with a lid instead of an open tray.
- Avoid leaving food inside the oven after cooking for more than 15/20 minutes.
- **WARNING:** the appliance and accessible parts become hot during use. Be careful not to touch any hot parts.
- **WARNING:** the accessible parts can become hot when the oven is in use. Children must be kept at a safe distance.
- **WARNING:** ensure that the appliance is switched off before replacing the bulb, to avoid the possibility of electric shocks.
- **WARNING:** before initiating the automatic cleaning cycle:
  - Clean the oven door;
  - Remove large or coarse food residues from the inside of the oven using a damp sponge. Do not use detergents;
  - Remove all accessories and the sliding rack kit (where present);
  - Do not place tea towels
- In ovens with meat probe it is necessary, before making the cleaning cycle, close the hole with the nut provided. Always close the hole with the nut when the meat probe is not used.
- Children under 8 must be kept at a safe distance from the appliance if not continuously supervised.
- Children must not play with the appliance. The appliance can be used by those aged 8 or over and by those with limited physical, sensorial or mental capacities, without experience or knowledge of the product, only if supervised or provided with instruction as to the operation of the appliance, in a safe way with awareness of the possible risks.
- Cleaning and maintenance should not be carried out by unsupervised children.
- Do not use rough or abrasive materials or sharp metal scrapers to clean the oven door glasses, as they can scratch the surface and cause the glass to shatter.
- The oven must be switched off before removing the removable parts and, after cleaning, reassemble them according the instructions.
- Only use the meat probe recommended for this oven.
- Do not use a steam cleaner for cleaning operations.
- Connect a plug to the supply cable that is able to bear the voltage, current and load indicated on the tag and having the earth contact. The socket must be suitable for the load indicated on the tag and must be having the earth contact connected and in operation. The earth conductor is yellow-green in colour. This operation should be carried out by a suitably qualified professional. In case of incompatibility between the socket and the appliance plug, ask a qualified electrician to substitute the socket with another suitable type. The plug and the socket must be conformed to the current norms of the installation country. Connection to the power source can also be made by placing an omnipolar breaker between the appliance and the power source that can bear the maximum connected load and that is in line with current legislation. The yellow-green earth cable should not be interrupted by the breaker. The socket or omnipolar breaker used for the connection should be easily accessible when the appliance is installed.
  - The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules.
  - If the power cable is damaged, it must be substituted with a cable or special bundle available from the manufacturer or by contacting the customer service department.
  - The type of power cable must be H05V2V2-F.
  - Failure to comply with the above can compromise the safety of the appliance and invalidate the guarantee.
  - Any excess of spilled material should be removed before cleaning.
  - During the pyrolytic cleaning process, surfaces can heat up more than usual, children must therefore be kept at a safe distance.
  - The appliance must not be installed behind a decorative door in order to avoid overheating.
  - When you place the shelf inside, make sure that the stop is directed upwards and in the back of the cavity.  
The shelf must be inserted completely into the cavity
  - **WARNING:** Do not line the oven walls with aluminum foil or single-use protection available from stores. Aluminum foil or any other protection, in direct contact with the hot enamel, risk melting and deteriorating the enamel of the insides.
  - **WARNING:** Never remove the oven door seal.
  - No additional operation/setting is required in order to operate the appliance at the rated frequencies.

<b>General Instructions</b>	1.1 Safety indications 1.2 Electrical safety 1.3 Recommendations 1.4 Installation 1.5 Waste management 1.6 Declaration of compliance
-----------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------

4

<b>Product Description</b>	2.1 Overview 2.2 Accessories 2.3 First use
----------------------------	--------------------------------------------------

5

<b>Use of the Oven</b>	3.1 Display description 3.2 Cooking modes
------------------------	----------------------------------------------

6

<b>Oven Cleaning and Maintenance</b>	4.1 General notes on cleaning 4.2 Aquactiva Function 4.3 Maintenance <ul style="list-style-type: none"><li>• Removing and cleaning wire racks</li><li>• Removal of the oven window</li><li>• Removal and cleaning of the glass door</li><li>• Changing the bulb</li></ul>
--------------------------------------	---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

8

<b>Troubleshooting</b>	5.1 F.A.Q.
------------------------	------------

10

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!