



**THANK YOU FOR BUYING AN INDESIT PRODUCT**  
In order to receive a more complete assistance, please register your product on [www.indesit.com/register](http://www.indesit.com/register)



**Before using the appliance carefully read the Safety Instruction.**


## PRODUCT DESCRIPTION

### FIRST TIME USE

Wait at least two hours, after the installation, before connecting the appliance to the power supply.  
Connect the appliance to the power supply and turn the thermostat knob to switch on the appliance.

After turning the appliance on, you must wait for 4-6 hours for the correct storage temperature to be reached for a normally filled appliance. Position the antibacterial anti-odour filter in the fan as demonstrated in the filter packaging (if available).

### CONTROL PANEL

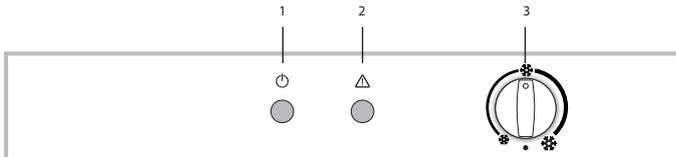

1. Power indicator light
2. Alarm indicator light
3. Temperature control knob

### FREEZING FRESH FOOD

Place fresh food to be frozen on the grid in the freezer compartment, avoiding direct contact with food that is already frozen.  
The quantity of fresh food that can be frozen in 24 hours is written on the rating plate.  
To freeze fresh food, place the freezer compartment grid in the upper position.

### FREEZER AND REFRIGERATOR COMPARTMENT TEMPERATURE

This Fridge/Freezer is switched on by means of the thermostat located inside the refrigerator compartment.

The temperature of both compartments is adjusted by turning the thermostat knob.

Thermostat set to ❄️ : **minimum refrigeration**


Thermostat set to ❄️❄️ : **medium refrigeration**

Thermostat set to ❄️❄️❄️ : **maximum refrigeration**


Thermostat set to • : **no refrigeration, no light**

Setting the thermostat knob to • turns the whole appliance off.

### FREEZER COMPARTMENT AND FOOD STORAGE

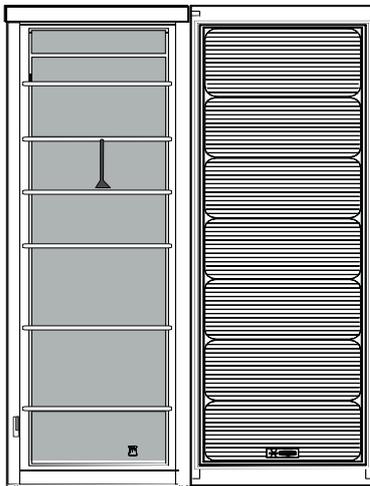

#### Legend

 

**FREEZING ZONE**  
All food items

# TROUBLESHOOTING

What to do if...	Possible reasons	Solutions
The appliance doesn't work.	<ul style="list-style-type: none"> <li>There may be an appliance power supply problem.</li> </ul>	<ul style="list-style-type: none"> <li>Make sure:               <ul style="list-style-type: none"> <li>there is not a power failure;</li> <li>the plug is properly inserted in the power socket and the double-pole switch (if present) is in the correct position (on);</li> <li>the household electrical system protection devices function;</li> <li>the power cable is not broken;</li> <li>the thermostat knob is not turned to "●".</li> </ul> </li> </ul>
The inside light does not work.	<ul style="list-style-type: none"> <li>It may be necessary to replace the light bulb.</li> </ul>	<ul style="list-style-type: none"> <li>Disconnect the appliance from the power supply and contact the Technical Assistance Service if you need a replacement.</li> </ul>
The internal temperature of the compartments is not cold enough.	<ul style="list-style-type: none"> <li>The reasons could vary (see "Solution") column.</li> </ul>	<ul style="list-style-type: none"> <li>Check that:               <ul style="list-style-type: none"> <li>the doors are closed properly;</li> <li>the appliance is not installed near a heat source;</li> <li>the temperature is appropriately set;</li> <li>the circulation of air through the ventilation grilles on the base of the appliance is not obstructed.</li> </ul> </li> </ul>
There is water on the bottom of the refrigerator compartment.	<ul style="list-style-type: none"> <li>The defrost water drain is blocked.</li> </ul>	<ul style="list-style-type: none"> <li>Clean the defrosting water drain (see section "Cleaning and Maintenance").</li> </ul>
Excessive amount of frost in the freezer compartment.	<ul style="list-style-type: none"> <li>The door to the freezer compartment is not closed properly.</li> </ul>	<ul style="list-style-type: none"> <li>Check that there is nothing preventing the door from closing properly.</li> <li>Defrost the freezer compartment.</li> <li>Make sure the appliance has been correctly installed.</li> </ul>
The front edge of the appliance that the door gaskets seal against is hot.	<ul style="list-style-type: none"> <li>This is not a problem. It prevents condensation from forming.</li> </ul>	<ul style="list-style-type: none"> <li>A solution is not needed.</li> </ul>
The temperature of the refrigerator compartment is too cold.	<ul style="list-style-type: none"> <li>The set temperature is too cold.</li> <li>A large amount of fresh food may have been placed in the freezer compartment.</li> </ul>	<ul style="list-style-type: none"> <li>Try to set a less cold temperature.</li> <li>If fresh food has been put in the freezer compartment, wait until the freezing has been completed.</li> <li>Turn off the fan (if present) described in the paragraph "FAN".</li> </ul>



You can download the Safety Instructions, User Manual, Product Fiche and Energy data by:

- Visiting our website [docs.indesit.eu](https://docs.indesit.eu)
- Using QR Code
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.





### DANKE, DASS SIE SICH FÜR EIN INDESIT PRODUKT ENTSCHEIDEN HABEN

Für eine umfassendere Unterstützung melden Sie Ihr Produkt bitte unter [www.indesit.com/register](http://www.indesit.com/register) an



Lesen Sie vor Gebrauch des Geräts die Sicherheitshinweise aufmerksam durch.


## PRODUKTBESCHREIBUNG

### ERSTER GEBRAUCH

Warten Sie mindestens zwei Stunden nach der Installation, bevor Sie das Gerät an das Stromnetz anschließen.  
Den Netzstecker in die Steckdose stecken und den Thermostatregler drehen, um das Gerät einzuschalten.

Nach dem Einschalten des Geräts müssen Sie 4-6 Stunden warten, bis die korrekte Lagertemperatur für ein normal befülltes Gerät erreicht ist. Platzieren Sie den antibakteriellen Geruchsfilter wie auf der Filterverpackung dargestellt im Lüfter (falls vorhanden).

### BEDIENTAFEL

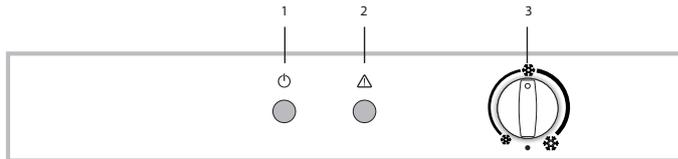

1. Betriebsanzeigeleuchte
2. Alarmanzeigeleuchte
3. Temperaturwahlknopf

### FRISCHE LEBENSMITTEL EINFRIEREN

Legen Sie die zu gefrierenden frischen Lebensmittel auf das Gitter in dem Gefrierfach und vermeiden Sie direkten Kontakt mit den Lebensmitteln, die bereits gefroren sind.  
Die Menge an Lebensmitteln, die pro 24 Stunden eingefroren werden kann, ist auf dem Typenschild angegeben.  
Um frische Lebensmittel einzufrieren, das Gitter des Gefrierfachs in die obere Position legen.

### TEMPERATUR IM GEFRIERER UND KÜHLRAUM


Dieser Kühlschrank/Gefrierfach wird mit dem Thermostat in dem Kühlfach eingeschaltet.

Die Temperatur beider Fächer wird durch Drehen des Thermostatknopfes eingestellt.

Thermostat auf ❄️ : **Minimales Kühlen**  
 Thermostat auf ❄️❄️ : **durchschnittliches Kühlen**  
 Thermostat auf ❄️❄️❄️ : **maximales Kühlen**  
 Thermostat auf • : **kein Kühlen, kein Licht**

Wenn Sie den Thermostatregler auf • drehen, schaltet das Gerät komplett ab.

### GEFRIERFACH UND LAGERUNG VON LEBENSMITTELN

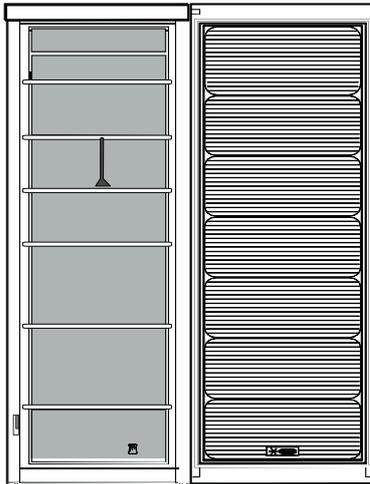

#### Legende



**GEFRIERBEREICH**  
Alle Lebensmittel

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!