



# KitchenAid™

## 6.9 L BOWL-LIFT STAND MIXER Instructions

English

**KÜCHENMASCHINE MIT SCHÜSSELHEBER UND 6,9-LITER-SCHÜSSEL**  
Bedienungsanleitung

**ROBOT SUR SOCLE À BOL RELEVABLE DE 6,9 LITRES**  
Instructions

**ROBOT DA CUCINA CON SOLLEVAMENTO CIOTOLA DA 6,9 L**  
Istruzioni

**6,9 L MULTIFUNCTIONELE MIXER/KEUKENROBOT  
MET IN DE HOOGTE VERSTELBARE KOM**  
Instructies

**BATIDORA DE PIE CON BOL ELEVABLE DE 6,9 L**  
Instrucciones

**BATEDEIRA COM SUPORTE PARA TAÇA DE 6,9 L**  
Instruções

**ΜΙΞΕΡ ΜΕ ΒΑΣΗ ΚΑΙ ΥΠΕΡΥΨΩΜΕΝΟ ΜΠΟΛ 6,9 L**  
Οδηγίες

**6,9 L KÖKSMASKIN MED SKÅL PÅ HÄVARM**  
Instruktioner

**6,9 L BOLLELØFTENDE KJØKKENMASKIN**  
Bruksanvisning

**6,9 L KULHONNOSTOMALLINEN YLEISKONE**  
Ohjeet

**6,9 L KØKKENMASKINE MED SKÅL-LØFT**  
Vejledning

**6,9 L BORDHRÆRIVÉL MED LYFTANLEGRI SKÁL**  
Leiðbeiningar

**СТАЦИОНАРНЫЙ МИКСЕР СО СЪЕМНОЙ ЧАШЕЙ 6,9 Л**  
Инструкции

**STOJĄCE WIELOFUNKCYJNE MIKSERY PLANETARNE,  
Z PODNOSZONĄ DZIEŻĄ O POJEMNOŚCI 6,9 L**  
Instrukcja obsługi

**KUCHYŇSKÝ ROBOT SE ZVEDACÍ MÍSOU O OBJEMU 6,9 L**  
Návod

**KUCHYNSKÝ ROBOT SO ZDVÍHACOU MISOU O OBJEME 6,9 L**  
Návod

**MIXER CU SOCLU ŞI BOL DE 6,9 L**  
Instrucţiuni

**6,9 L КУХНЕНСКИ РОБОТ С ПОВДИГАЩА СЕ КУПА**  
Инструкции

Model 5KSM7580

Model 5KSM7591





# Table of Contents

## STAND MIXER SAFETY

- Important Safeguards ..... 3
- Electrical Requirements ..... 4
- Electrical Waste Disposal ..... 4

## PARTS AND FEATURES

### SETTING UP YOUR STAND MIXER

- Assembling your Bowl-Lift Stand Mixer ..... 6
- Adjusting your Beater to Bowl Clearance ..... 7

### USING YOUR STAND MIXER

- Speed Control Guide - 10 Speed Stand Mixers ..... 8

## ATTACHMENTS

## CARE AND CLEANING

## TIPS FOR GREAT RESULTS

- Planetary Mixing Action ..... 10
- Mixing Time ..... 10
- Mixer Use ..... 10
- Mixing Tips ..... 10
- Whipping Tips for Egg Whites ..... 11
- Whipping Tips for Whipped Cream ..... 11
- Bread Making Tips ..... 12

## SERVICE AND WARRANTY

- When You Need Service ..... 13
- Household KitchenAid™ Bowl-Lift Stand Mixer Warranty ..... 13
- Service Centers ..... 14
- Customer Service ..... 14



## Stand Mixer Safety

English

### Your safety and the safety of others are very important.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages.



This is the safety alert symbol.

This symbol alerts you to potential hazards that can kill or hurt you and others.

All safety messages will follow the safety alert symbol and either the word "DANGER" or "WARNING." These words mean:

**! DANGER**

**You can be killed or seriously injured if you don't immediately follow instructions.**

**! WARNING**

**You can be killed or seriously injured if you don't follow instructions.**

All safety messages will tell you what the potential hazard is, tell you how to reduce the chance of injury, and tell you what can happen if the instructions are not followed.

## IMPORTANT SAFEGUARDS

**When using electrical appliances, basic safety precautions should always be followed, including the following:**

1. Read all instructions.
2. To avoid risk of electrical shock, do not put Stand Mixer in water or other liquid.
3. The appliance is not intended for use by young children or infirm persons without supervision.
4. Unplug Stand Mixer from outlet when not in use, before putting on or taking off parts, and before cleaning.
5. Avoid contacting moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils away from beater during operation to reduce the risk of injury to persons and/or damage to the Stand Mixer.
6. Do not operate Stand Mixer with a damaged cord or plug or after the Stand Mixer malfunctions, or is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
7. The use of attachments not recommended or sold by KitchenAid may cause fire, electrical shock, or injury.
8. Do not use the Stand Mixer outdoors.
9. Do not let the cord hang over edge of table or counter.
10. Remove Flat Beater, Stainless Steel Whip, or Spiral Dough Hook from Stand Mixer before washing.

## SAVE THESE INSTRUCTIONS

**THIS PRODUCT IS DESIGNED FOR HOUSEHOLD  
USE ONLY.**



# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!