



Manual

Paradiso

EN CZ
SK HU



۲۱



Thank you for purchasing our product.

Before using this unit, please read this manual in order to avoid improper handling and use of the device.

Safety instructions

The dehydrator can be used on heat resistant surfaces only (such as ceramic backing, tiles, etc.), as it operates at high temperatures. This will avoid the risk of fire.

- Do not leave the device in operation for more than 40 hours, the unit is heated and could cause fire. After 40 hours of use the device must be turned off (switch in „OFF“ position) and it must be disconnected from the power outlet until it cools down completely.
- Improper use of the device, or its use for purposes for which it was not designed can lead to damage of the device.
- Use the device according to this instruction manual.
- When the device is not in use for longer period of time, unplug it from the power outlet.
- Do not use the device in damp environments, near water or when the unit is wet.
- Do not use the device if it is damaged in any way. In such case always contact your dealer and / or service provider.
- The device is not intended for children, use of the device by children is prohibited.
- When unplugging from the wall outlet, do not pull the cable as it may lead to damage. Always grasp the plug directly.
- This device is not intended for commercial use.
- Do not cover during use.
- Do not leave the device turned on without supervision.
- Use only on a flat surface.

Device operation

WARNING! Before first use:

- Unpack the appliance thoroughly and remove all plastic and polystyrene.
- Before connecting the device into electric outlet, make sure the device is intended for use in your local power supply (see technical specifications).
- Wash the unit and its parts in warm water in combination with detergents for washing dishes. Do not put the unit base in the dishwasher and do not immerse it into water, just wipe it with a cloth! The base of the unit contains electrical components and it could cause short circuit.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!