



# ***hama***

00  
186448

**Radio Controlled Alarm Clock**

**Multi**

**Funkwecker**

**GB** Operating Instructions

**D** Bedienungsanleitung

**F** Mode d'emploi

**E** Instrucciones de uso

**NL** Gebruiksaanwijzing

Istruzioni per l'uso

Instrukcja obsługi

Használati útmutató

Manual de utilizare

Návod k použití

Návod na použitie

Manual de instruções

Bruksanvisning

Руководство по эксплуатации

Работна инструкция

Οδηγίες χρήσης

Käyttöohje

**I**

**PL**

**H**

**RO**

**CZ**

**SK**

**P**


**S**

**RUS**

**BG**

**GR**

**FIN**

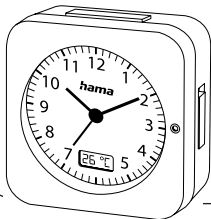

## 1. Explanation of warning symbols and notes

### Warning



This symbol is used to indicate safety instructions or to draw your attention to specific hazards and risks.

### Note



This symbol is used to indicate additional information or important notes.

## 2. Package contents

- „Multi“ Radio Alarm Clock
- 1 AA battery
- These operating instructions

## 3. Safety instructions

- The product is intended for private, non-commercial use only.
- Protect the product from dirt, moisture and overheating and use it in dry environments only.
- Do not use the product in areas in which electronic products are not permitted.
- Do not place the product near interference fields, metal frames, computers, TVs, etc. Electronic devices and window frames can negatively affect the product's functionality.
- Do not drop the product and do not expose it to any major shocks.
- Do not attempt to service or repair the product yourself. Leave any and all service work to qualified experts.
- Do not modify the product in any way. Doing so voids the warranty.
- Keep the packaging material out of the reach of children due to the risk of suffocation.
- Dispose of packaging material immediately in accordance with the locally applicable regulations.
- Use the product only for the intended purpose.
- Do not use the product in the immediate vicinity of heaters, other heat sources or in direct sunlight.
- Do not operate the product outside the power limits specified in the technical data.
- Do not open the device or continue to operate it if it becomes damaged.
- As with all electrical products, this device should be kept out of the reach of children.
- Only use the article under moderate climatic conditions.

### Warning - Batteries



- When inserting batteries, note the correct polarity (+ and - markings) and insert the batteries accordingly. Failure to do so could result in the batteries leaking or exploding.
- Only use batteries (or rechargeable batteries) that match the specified type.
- Before you insert the batteries, clean the battery contacts and the polarity contacts.
- Do not allow children to change batteries without supervision.

- 
- Do not mix old and new batteries, or batteries of different types or from different manufacturers.
  - Remove the batteries from products that are not being used for an extended period (unless these are being kept ready for an emergency).
  - Do not short-circuit batteries.
  - Do not charge batteries.
  - Do not burn batteries.
  - Keep batteries out of the reach of children.
  - Never open, damage or swallow batteries or allow them to enter the environment. They can contain toxic, environmentally harmful heavy metals.
  - Remove spent batteries from the product and dispose of them without delay.
  - Avoid storing, charging and using in extreme temperatures and at extremely low atmospheric pressures (such as at high altitudes).

#### 4. Getting started

Open the **battery compartment cover**, remove the contact interrupter and close the **battery compartment cover** again.

#### 5. Operation

##### 5.1. Automatic setting of the time according to the DCF signal

- After the contact interrupter is removed, the alarm clock automatically starts to search for a DCF signal.
- After around 5-10 minutes (depending on how quickly the radio signal is received), the hands on the clock will adjust to the correct time.

##### 5.2. Manual time setting

- If the correct time has not been set automatically after around 10 minutes, no DCF signal has been received.
- Press and hold the **SET** button to set the correct time manually. Once the required time is reached, release the **SET** button.
- The clock automatically continues to search for the DCF signal every day. Once the signal is received successfully, the manually set time and date are overridden.
- Change the location if necessary and avoid areas with sources of interference (cordless and mobile phones, radio loudspeakers, WLAN, etc.).

##### 5.3. Starting manual reception

- When the clock is running, press the **REC** button for 3 seconds. The hands move to the 12:00 position. The clock now starts to search for the DCF signal.
- If no signal has been received, the clock will show the time previously stored.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!