Panasonic

Operating Instructions

DAB-FM Radio



Thank you for purchasing this product.

For optimum performance and safety, please read these instructions carefully. Please keep this manual for future reference.



Safety precautions

WARNING

Unit

- To reduce the risk of fire, electric shock or product damage,
 - Do not let water or other liquids drip or splash inside the unit.
 - Do not expose accessories (battery pack, battery charger, AC adaptor, SD memory card, etc.) to rain, moisture, dripping or splashing.
 - Do not place objects filled with liquids, such as vases, on accessories.
 - Use the recommended accessories.
 - Do not remove covers.
 - Do not repair this unit by yourself.
 Refer servicing to gualified service personnel.

AC adaptor

- To reduce the risk of fire, electric shock or product damage,
 - Insert the mains plug fully into the socket outlet.
 - Do not pull, bend, or place heavy items on the lead.
 - Do not handle the plug with wet hands.
 - Hold onto the mains plug body when disconnecting the plug.
 - Do not use a damaged mains plug or socket outlet.
- The mains plug is the disconnecting device. Install this unit so that the mains plug can be unplugged from the socket outlet immediately.

CAUTION

Unit

- This unit may receive radio interference caused by mobile telephones during use. If such interference occurs, please increase separation between this unit and the mobile telephone.
- Be careful when adjusting the antenna or when handling the unit, always keep the antenna away from your face to avoid an injury.

Avoid use in the following conditions

- High or low extreme temperatures during use, storage or transportation.
- Replacement of a battery with an incorrect type.
- Disposal of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, that can result in an explosion.
- Extremely high temperature and/or extremely low air pressure that can result in an explosion or the leakage of flammable liquid or gas.

Battery

- Do not use rechargeable type batteries.
- Danger of explosion if battery is incorrectly replaced. Replace only with the type recommended by the manufacturer.
- Mishandling of batteries can cause electrolyte leakage and may cause a fire.
 - Remove the batteries if you do not intend to use the unit for a long period of time or if the unit is to be powered exclusively by AC power. Store in a cool, dark place.
 - Do not heat or expose to flame.
 - Do not leave the battery(ies) in a car exposed to direct sunlight for a long period of time with doors and windows closed.
 - Do not take apart or short circuit.
 - Do not recharge alkaline or manganese batteries.
- Do not use batteries if the covering has been peeled off.
- Do not mix old and new batteries.
- Do not use different types of batteries at the same time.
- When disposing of the batteries, please contact your local authorities or dealer and ask for the correct method of disposal.

Disposal of Old Equipment

Only for European Union and countries with recycling systems



This symbol on the products, packaging, and/or accompanying documents means that used electrical and electronic products must not be mixed with general household waste.

For proper treatment, recovery and recycling of old products, please take them to applicable collection points in accordance with your national legislation.

By disposing of them correctly, you will help to save valuable resources and prevent any potential negative effects on human health and the environment.

For more information about collection and recycling, please contact your local municipality.

Penalties may be applicable for incorrect disposal of this waste, in accordance with national legislation.

Contents

| Safety precautions | 2 |
|--|------|
| eatures | 3 |
| Control reference guide | 4 |
| Jsing the household mains socket | 5 |
| Jsing the batteries (not supplied) | |
| Basic Playback | 6-8 |
| Connection | 9 |
| About Bluetooth® | |
| icense | . 10 |
| Froubleshooting | . 11 |
| Specifications | |
| Product conformity information for customers in the UK | . 12 |
| Confirmation of Compliance with UK Regulations | . 12 |

Features

Thanks for your purchase of our product. Please read through this manual before making connections and operating this product.

Retain this manual for future reference.

- FM tuner
- DAB(digital audio broadcasting) tuner
- Bluetooth[®] Connection
- 4x R6/AA Batteries can be used for power (not included)

Package Contents:

Digital radio player x1 User manual x1 AC adaptor x1

The symbols on this product (including the accessories) represent the following:

| \sim | AC |
|--------|---|
| | DC |
| | Class II equipment (The construction of the product is double-insulated.) |
| | ON |
| Ċ | Standby |
| ⊙—€—↔ | Positiv polarity |
| | For indoor use only |



The lightning flash is intended to alert the user to the presence of dangerous voltage within the product's enclosure, and touching the internal components may result in a risk of electric shock to persons.

The exclamatory mark is intended to alert the user to the presence of important operating instructions.



To reduce the risk of electric shock or fire, do not open the cover. Refer servicing to qualified service personnel.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

 Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.

2) Pak jsou tady "roboti", kteří se přiživují na naší práci a "vysávají" výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!