

LEVENHUK ATOM DIGITAL DNM 100 NIGHT VISION MONOCULAR

EN User Manual

BG Ръководство за потребителя

CZ Návod k použití

DE Bedienungsanleitung

ES Guía del usuario

HU Használati útmutató

IT Guida all'utilizzo

PL Instrukcja obsługi

PT Manual do usuário

RU Инструкция по эксплуатации


TR Kullanım kılavuzu



www.levenhuk.com

Levenhuk Inc. (USA): 928 E 124th Ave. Ste D, Tampa, FL 33612, USA, +1-813-468-3001, contact_us@levenhuk.com
Levenhuk Optics s.r.o. (Europe): V Chotejně 700/7, 102 00 Prague 102, Czech Republic, +420 737-004-919, sales-info@levenhuk.cz
Levenhuk® is a registered trademark of Levenhuk, Inc.
© 2006–2022 Levenhuk, Inc. All rights reserved.
20221021

levenhuk
Zoom&Joy

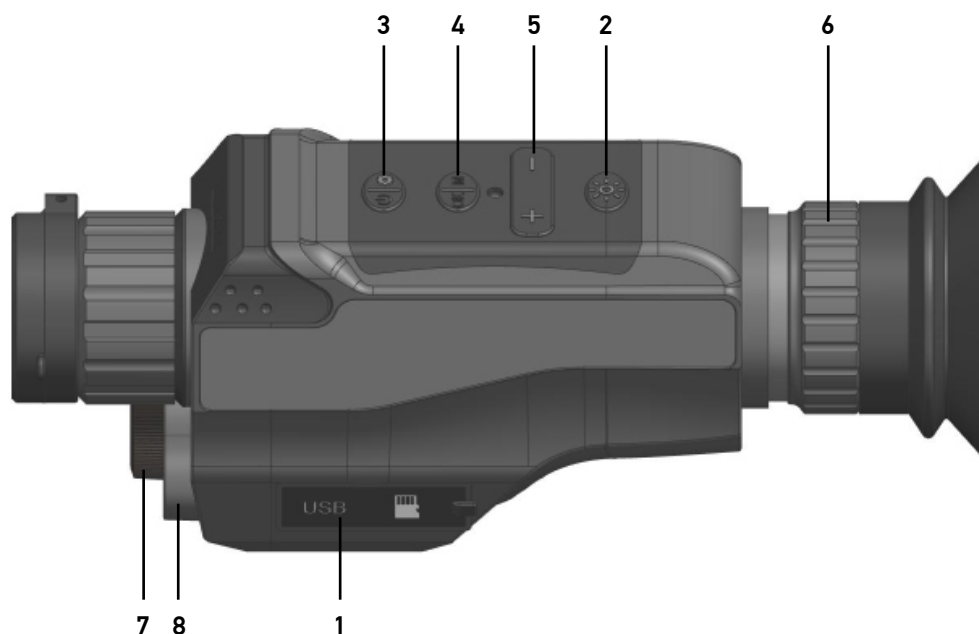

	EN	BG	CZ	DE	ES	HU
1	USB and microSD slots	USB и microSD слотове	Sloty USB a microSD	USB- und microSD-Steckplätze	Ranuras USB y microSD	USB és microSD foglalatok
2	IR button	Бутон IR	Tlačítko IR	IR-Taste	Botón IR	IR gomb
3	POWER button	Бутон POWER	Tlačítko POWER	POWER-Taste	Botón POWER	POWER gomb
4	MENU button	Бутон MENU	Tlačítko MENU	MENU-Taste	Botón MENU	MENU gomb
5	ZOOM IN/OUT button	Бутон ZOOM IN/OUT (Приближаване/Отдалечаване)	Tlačítko ZOOM IN/OUT (Přiblížení/Oddálení)	ZOOM IN/OUT-Taste (Vergrößerung ein/aus)	Botón ZOOM IN/OUT (Acercar/Alejar)	ZOOM IN/OUT (Nagyítás Be/Ki) gomb
6	Eyepiece	Окуляр	Okulár	Okular	Ocular	Szemlencse
7	Battery compartment	Батерийно отделение	Prostor pro baterie	Batteriefach	Compartimento para pilas	Elemtartó rekesz
8	IR filter	ИЧ филтър	IR filtr	IR-Filter	filtro IR	IR szűrő

	IT	PL	PT	RU	TR
1	Slot USB e microSD	Gniazda USB i karty pamięci MicroSD	Ranuras USB e microSD	Слоты USB и microSD	USB ve microSD yuvaları
2	Pulsante IR	Przycisk IR	Botão IR	Кнопка IR	IR düğmesi
3	Pulsante POWER	Przycisk POWER	Botão de POWER	Кнопка POWER	POWER düğmesi
4	Pulsante MENU	Przycisk MENU	Botão MENU	Кнопка MENU	MENU düğmesi
5	Pulsante ZOOM IN/OUT (Zoom avanti/indietro)	Przycisk ZOOM IN/OUT (Przybliżenie/Oddalenie)	Botão ZOOM IN/OUT (Aumentar/diminuir zoom)	Кнопка ZOOM IN/OUT (Приближение/Отдаление)	ZOOM IN/OUT (Yakınlaştır/Uzaklaştır) düğmesi
6	Oculare	Okular	Ocular	Окуляр	Oküler
7	Scomparto batterie	Komora baterii	Compartimento das pilhas	Батарейный отсек	Pil bölmesi
8	Filtro IR	Filtr IR	Filtro IR	ИК-фильтр	KÖ filtre

EN Levenhuk Atom Digital DNM100 Night Vision Monocular



Never, under any circumstances, look directly at the Sun, another bright source of light, or at a laser through this device, as it may cause PERMANENT RETINAL DAMAGE and may lead to BLINDNESS.

Specifications

Magnification, x	1–8 (digital), 4 (optical)
Objective lens diameter, mm	35
Field of view, °	10.4
Close focus, m/ft	10/32.8
Observation distance, m/ft	200 (in complete darkness) 3–1000 (in weak light) / 656 (in complete darkness) 9.8–3280 (in weak light)
Tripod adapter thread	1/4"
Operating temperature range, °C/°F	–20...+60 (operating), –30...+70 (storage) / +14...+140 (operating), –22...+158 (storage)
IR-illumination	IR LEDs 3W
IR wavelength, nm	850
Recording time with illumination (IR), h	3
Recording time without illumination (IR), h	5
Daytime recording without IR	color image
Recording at night (in the dark) with IR	black and white image
Power supply	16340 battery, 700 mA·h
Operation voltage	3.7V
Storage	class 10, microSD up to 128GB
Image format and resolution	JPEG, up to 4096x2160px
Video format and resolution	AVI, 1080P (1920x1080px@30fps)
Dimensions, mm/in	180x80x48 / 7x3.1x1.8
Weight, g/lb	262 / 0.6

Levenhuk reserves the right to make changes to the product range and specifications without prior notice.

Getting started

Install batteries

- Open the battery compartment cover and insert the battery according to the correct polarity marks. Close the cover.

Charging the device

- Connect the power cable to the device and the DC adapter (not included) via a USB plug and connect it to the AC power supply.
Attention! The device operates from the AC power supply, as the voltage of the computer's USB port is insufficient for the proper operation of the device.

Installing/removing the memory card

- The device supports memory cards class 10 up to 128GB.
- Insert the microSD card into the slot. Make sure the direction is right. Do not force the card in.
- Format the microSD card before starting, as it will improve its compatibility with the device.
- To remove the card from the slot, press the edge of the memory card in gently, and the card will pop out. Then, remove the card.

Note: If the memory card is not installed, a **No Card** icon will be displayed.

Button panel and device settings

A long press will turn the device on/off and zoom in/out the image. For the other functions, use a short press.

POWER button

Press and hold the **POWER** button for 3 seconds to turn the device on or off.

This button switches between 3 in-built modes: 1) photo mode; 2) video mode; and 3) playback mode.

The default mode is photo mode.

Turn the focusing wheel to adjust the focus.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!