

MAXXO Multimilk MM01

Multifunctional plant-based milk maker
INSTRUCTIONS MANUAL




IMPORTANT SAFETY INSTRUCTIONS

Thank you for purchasing Maxxo Multimilk. When using this appliance, it is necessary to observe safety precautions, including the following:

1. Read this manual carefully before using this appliance and keep it for future reference.
2. Do not use this appliance for other than the intended use.
3. Do not use this appliance if it has been dropped or if it shows signs of damage.
4. Never attempt to repair this appliance by yourself.
5. Before use, first connect the cable to the device and then plug it into an electrical outlet. To disconnect the device, unplug the power cord. When disconnecting, grasp the plug and pull it out of the socket; do not pull on the cord.
6. Avoid the following: Do not carry or pull on the power cord, use it as a handle, pin it in the door, or guide it around sharp edges or corners.
7. Prevent water from entering the electrical parts of the device. Before use, make sure that all parts of the device are dry.
8. Do not use this appliance outdoors or on a humid, unstable surface. This appliance is intended for domestic use only.
9. Do not use the appliance near hot gas appliances, ovens, electric heaters or other hot objects and surfaces.
10. This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities, without the supervision of an adult.
11. Do not touch or move hot surfaces during cooking cycles. It could cause burns.
12. Unplug the appliance when not in use and before cleaning. Allow the appliance to cool down before inserting or removing components and before cleaning.
13. Regularly and carefully clean the jug, knives, head, and water temperature probe. The blades are sharp and can cause injuries if mistreated.
14. Do not switch on the heated programs again if they have been running for a long time or have just been completed. There is a risk of burning or burning the food to the bottom of the kettle.
15. Do not put pieces of ice or frozen ingredients - this may damage the knife or the motor. Always use raw or pre-soaked ingredients.
16. The amount of ingredients and liquids must always be in the range of the indicated lines (900-1300 ml). If there is an excess or shortage of ingredients, the device will report an error.
17. If the food contains fiber, some food may remain stuck on the grinder, which is normal and does not interfere with the operation of the appliance.
18. After purchase, check the device and the contents of the package. Check that the appliance and the power cable are intact.

19. Before using the appliance for the first time, wash it with a standard dishwashing detergent.

DESCRIPTION AND FUNCTIONS

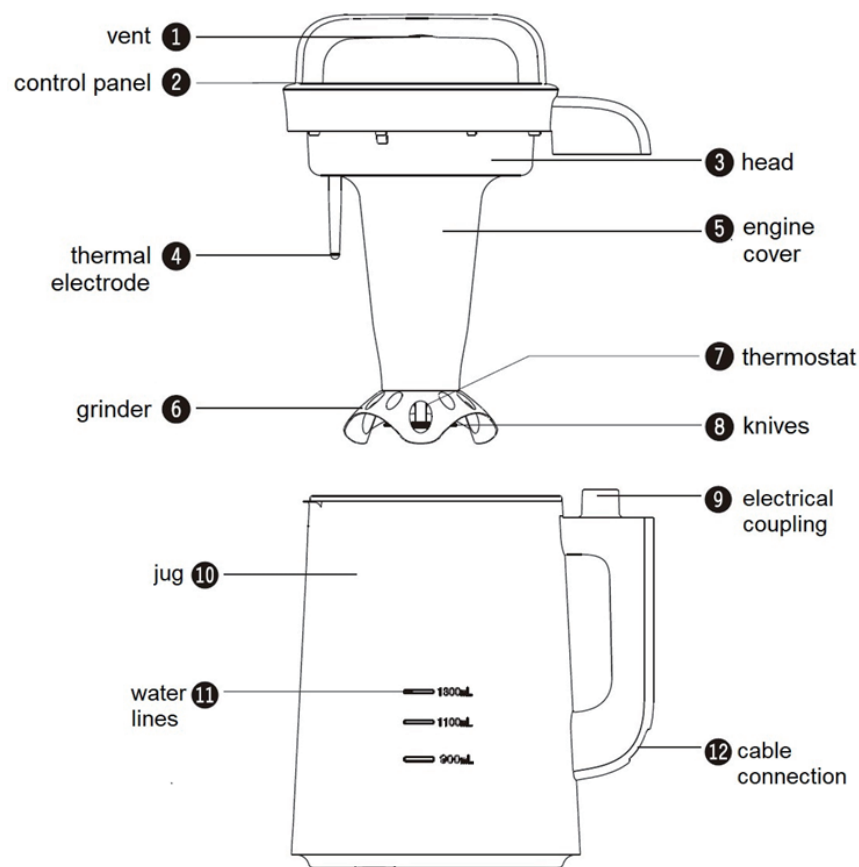


1. Vent: removes moisture. When washing, prevent water from entering this area.
2. Control panel: for selecting and launching programs.
3. Head: part with motor and internal computer panel.
4. Thermal electrode: prevents overheating of soy milk.
5. Engine cover
6. Grinder: Made of food standard stainless steel material. Together with knives, it is used to crush food.
7. Thermostat: for water temperature detection. As soon as the temperature reaches the set value, the motor starts running.
8. Knives: made of extra hard stainless-steel material of food standard.

9. Electrical coupling: power supply safety device. When you remove the head, the device switches off automatically.
10. Container
11. Water lines
12. Cable connection: Used to connect the power cord

CONTAINER COMPOSITION

Slide the handle into the slot in the direction of the dark arrow and push it firmly into place.

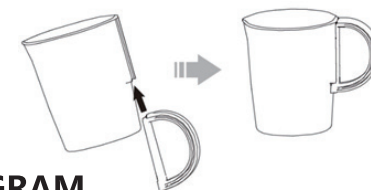

TURNING ON, SELECTING A PROGRAM

- Connect the cable to the device, then plug it into an electrical outlet.
- The device is turned on when it beeps and the buttons on the control panel light up.
- Remove the head, add all the ingredients and liquid and close again.
- Select the desired program by pressing the Select button. The icon of the selected program remains lit. Press the Start/Stop button to start the program.

If you do not press the Start/Stop button after selecting the program, it will start automatically after 1 min. After starting the program, you can within 1 min. turn off the program by pressing the Start/Stop button again. After 1 min. the program can only be canceled by disconnecting the device from the power.

TURNING OFF

- At the end of the program, the appliance will beep for 20 seconds and the program icon will be flashing.
- First unplug the cable from the electrical socket, then from the appliance.
- Open the head of the appliance, wash the stainless-steel part under running water or let it soak. Prevent water from entering the electrical part of the head as much as possible.
- After pouring the food, wash or let the other part of the appliance soak, in case of larger sediment at the bottom of the container use a milk sediment remover. Again, limit the ingress of water into the electrical part.

Be careful when handling the appliance, as food, the head and the container may be hot, and the head knives may cause injury.

CLEANING AND MAINTANANCE

- We recommend washing the appliance immediately after the end of the program.
- This appliance is not dishwasher safe!

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!