

REMINGTON®

Keratin Protect Auto Curler



CI8019

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe. Remove all packaging before use.

IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Warning - for additional protection the installation of a residual current device (RCD) with a rated residual operating current not exceeding 30mA is advisable in the electrical circuit supplying the bathroom. Ask an electrician for advice*.
- 3 *For UK household use only. Currently, the fitting in a bathroom of an electrical socket suitable or capable of operating the dryer/straightener is not permitted (see BS7671).
- 4 Always ensure the voltage to be used corresponds to the voltage stated on the unit before plugging the appliance into the mains socket.
- 5 Warning: do not use this appliance near bathtubs, showers or basins or other vessels containing water.
- 6 When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a hazard even when the appliance is switched off.
- 7 Do not wrap the cord around the unit. Check the cord regularly for any sign of damage.
- 8 If the supply cord of this unit becomes damaged, discontinue use immediately and return the appliance to your nearest authorised Remington service dealer for repair or replacement in order to avoid a hazard.
- 9 Do not use the appliance if it is damaged or malfunctions.
- 10 Avoid the mains cord from coming into contact with the hot parts of the appliance.
- 11 Do not allow any part of the appliance touch the face, neck or scalp, take care to only touch the handle.
- 12 Do not leave the appliance unattended while plugged in.
- 13 Do not plug or unplug the appliance with wet hands.
- 14 Do not use the appliance on wet hair.
- 15 Only set the appliance down on a heat-proof surface.
- 16 Do not place the appliance down on soft furnishings.

- 17 Do not cover the appliance with anything (e.g. a towel or clothing) when it is hot.
- 18 Do not insert metal objects into the openings, doing so could cause electric shock.
- 19 Keep the appliance away from flammable objects and materials when it is switched on.
- 20 This appliance is not intended for commercial or salon use.
- 21 Let the appliance cool down before cleaning and storing away.
- 22 **WARNING:** Contains traces of nuts.



KEY FEATURES

- | | |
|----------------------------|--------------------------------------|
| 1 On/Off button | 7 Curling temperature setting button |
| 2 LCD display screen | 8 Curling time button |
| 3 Curling button | 9 Swivel cord |
| 4 Curling chamber opening | 10 Chamber cleaning tool |
| 5 Rubber flap | |
| 6 Curling direction switch | |

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!