

EN • IMPORTANT SAFETY INSTRUCTIONS
FR • INSTRUCTIONS IMPORTANTES DE SECURITE
IT • ISTRUZIONI DI SICUREZZA IMPORTANTI
ES • INSTRUCCIONES IMPORTANTES DE SEGURIDAD
PT • INSTRUÇÕES DE SEGURANÇA IMPORTANTES
DE • WICHTIGE SICHERHEITSHINWEISE
NL • BELANGRIJKE VEILIGHEIDSVORSCHRIFTEN
CS • DŮLEŽITÉ BEZPEČNOSTNÍ POKYNY
PL • WAŻNE INSTRUKCJE DOTYCZĄCE BEZPIECZEŃSTWA
RO • INSTRUCȚIUNI IMPORTANTE PRIVIND SIGURANȚA
BG • ВАЖНИ ИНСТРУКЦИИ ЗА БЕЗОПАСНОСТ
HR • VAŽNE SIGURNOSNE UPUTE
ET • OLULISED OHUTUSJUHISED
HU • FONTOS BIZTONSÁGI ELŐÍRÁSOK
LV • SVARĪGI DROŠĪBAS NORĀDĪJUMI
LT • SVARBIOS SAUGOS INSTRUKCIJOS
SR • VAŽNA BEZBEDNOSNA UPUTSTVA
SK • DÔLEŽITÉ BEZPEČNOSTNÉ POKYNY
SL • POMEMBNA VARNOSTNA NAVODILA
RU • ВАЖНЫЕ ИНСТРУКЦИИ ПО ТЕХНИКЕ БЕЗОПАСНОСТИ
UK • ІНСТРУКЦІЇ З ТЕХНІКИ БЕЗПЕКИ
MS • ARAHAN PENTING KESELAMATAN
TH • คู่มือความปลอดภัยที่สำคัญ
AR • إرشادات هامة للسلامة
FA • دستورالعمل‌های مهم ایمنی
ZH • 重要安全指引

IMPORTANT SAFETY INSTRUCTIONS

- When using your appliance, basic precautions should always be followed, including the following:
- Read all instructions before using this product.
- This product has been designed for indoor, domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Always plug your appliance:
 - into a mains circuit with voltage between 220 V and 240 V.
 - into an earthed electrical socket.Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee.
If using a mains extension lead, ensure that it is correctly rated (16A) with an earth, and is fully extended.
- Completely unwind the power cord before plugging into an earthed socket.
- Use appliance for its intended use only.
- To reduce the risk of contact with hot water emitting from steam vents, check appliance before each use by holding it away from body and operating steam button.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical,

sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

- Never pull on the cord to disconnect the appliance from electrical outlet; instead, grasp plug and pull to disconnect on the plug to disconnect the appliance.
- Do not allow cord to touch hot surfaces or come into contact with rough or sharp edges. Let the appliance cool completely down before putting away. Loop cord loosely around appliance when storing.
- Always disconnect appliance from the electrical supply when filling with water or emptying when cleaning, when removing or refitting accessories and when not in use.
- Care should be taken when using the appliance due to the emission of steam.
- Do not operate appliance with a damaged cord or if appliance has been dropped or damaged. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance. Take it to the nearest approved service centre for examination and repair. Incorrect reassembly or repair could cause a risk of fire, electrical shock or injury to persons when the appliance is used.
- Close supervision is necessary for any appliance being used by or near children.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!