

# REMINGTON®

## PowerSeries Aqua



**PR1350**  
**PR1370**

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.


 
Remove all packaging before use.

---

## IMPORTANT SAFEGUARDS

---

**WARNING - TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:**

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- 3 Do not leave the appliance unattended while plugged in, except when charging.
- 4 Keep the power plug and cord away from heated surfaces.
- 5 Make sure the power plug and cord do not get wet.
- 6 Do not plug or unplug the appliance with wet hands.
- 7 Do not use the product with a damaged cord. A replacement adaptor can be obtained via our International Service Centres.
- 8 Do not twist or kink the cable, or wrap it around the appliance.
- 9 This appliance is not intended for commercial or salon use.
- 10 Suitable for use in a bath or shower. 
- 11  This appliance should be supplied with approved safety isolating adaptors PA-0510E (for Europe), PA-0510K (for United Kingdom) with the output capacity of 5 Vdc; 1A (adaptor output).



12



## 👁️ KEY FEATURES

- |                               |                                     |
|-------------------------------|-------------------------------------|
| 1 On/off switch               | 2 Pivoting head and cutter assembly |
| 3 Flexing heads               | 4 Hairpocket                        |
| 5 Charging indicator light    | 6 Low/Full/Charging indicator light |
| 7 Detail trimmer              | 8 Trimmer release button            |
| 9 Power port                  | 10 Adaptor (not shown)              |
| 11 Cleaning brush (not shown) | 12 Head guard                       |

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!