

CLASSIC

| | | | |
|---------|---------|---------|---------|
| ZY1431T | ZY1704T | ZY0804T | ZY0814T |
| ZY1432T | ZY1705T | ZY0805T | ZY0815T |
| ZY1433T | ZY1428T | ZY0806T | ZY0816T |
| ZY1434T | ZY1429T | ZY0807T | ZY0817T |
| ZY1701T | ZY0801T | ZY0811T | |
| ZY1702T | ZY0802T | ZY0812T | |
| ZY1703T | ZY0803T | ZY0813T | |



| | |
|--------------------|-----------------------------------|
| GB | Christmas LED Lights |
| CZ | Vánoční LED osvětlení |
| SK | Vianočné LED osvetlenie |
| PL | Oświetlenie choinkowe LED |
| HU | Karácsonyi LED fényfüzér |
| SI | LED božična okrasna razsvetljava |
| RS HR BA ME | Novogodišnje LED osvjetljenje |
| DE | LED-Weihnachtsbeleuchtung |
| UA | Різдв'яне світлодіодне освітлення |
| RO | Iluminație de crăciun cu LED |
| LT | Kalėdinė šviesos diodų girlianda |
| LV | Ziemassvētku LED apgaismojums |
| EE | LED-jõuluvalgusti |
| BG | Коледни LED Лампички |



www.emos.eu

**Type / Typ / Typ / Typ / Típus / Nasvet / Tip / Typ / тип / Tip
/ Tipas / Tips / Tüüp / Тип**

| | | | |
|----------------|---------|---------|---------|
| CLASSIC | ZY1431T | ZY1428T | ZY0811T |
| | ZY1432T | ZY1429T | ZY0812T |
| | ZY1433T | ZY0801T | ZY0813T |
| | ZY1434T | ZY0802T | ZY0814T |
| | ZY1701T | ZY0803T | ZY0815T |
| | ZY1702T | ZY0804T | ZY0816T |
| | ZY1703T | ZY0805T | ZY0817T |
| | ZY1704T | ZY0806T | |
| | ZY1705T | ZY0807T | |

GB Christmas LED Lights

Do not connect the chain to power supply if it is in packaging.

Light sources are not replaceable.

Do not connect another Christmas light.

When handling, disconnect from the power network.

In case of malfunction, do not remove bulbs and do not repair the chain!

Do not interfere with the connection.

Use only with the power source supplied with the product.

Suited for both indoor and outdoor use.

Should the light source rupture or become damaged, do not use the light chain or leave it connected to the power supply. Instead, dispose of it in a safe, environment-friendly way. „WARNING – THIS LIGHT CHAIN MUST NOT BE USED WITHOUT THE APPROPRIATE GASKETS” The product is designed for decorative lighting. The product is not a toy; do not put it in the hands of children!

Timer (T)

The light chain has a built-in timer on the body of the transformer (adapter).

After the first connection, the chain will be constantly lit. After the second connection (a green light will light up), the timer will be set to 6 hours. Afterwards, it turns off automatically and will remain off for 18 hours. The timer will operate automatically in these intervals (6 hours on/18 hours off) until turned off by making a third contact.

Example:

The chain will turn on on 1 December at 18 o'clock. It will remain lit until midnight, then turns off automatically. On 2 December, it will turn on automatically at 18 o'clock and turn off again at midnight. That means that the chain only has to be turned on once, and it will automatically keep lighting in this fashion until you turn it off.

Changing the timer settings

If you wish to change the time when the chain automatically turns on and off (e.g. 19 o'clock until 1 o'clock), all you need to do is turn off the chain at the desired time (if it is turned on) and then turn it on again.

Note:

The timer may deviate by a few minutes per month. If you want to adjust the turn-on timer back to the original time, set the timer again.

Emos spol s.r.o. declares that the Christmas LED Lights is in compliance with the essential requirements and other relevant provisions of Directive. The device can be freely operated in the EU. The Declaration of Conformity can be found at <http://www.emos.eu/download>.



Do not dispose with domestic waste. Use special collection points for sorted waste. Contact local authorities for information about collection points. If the electronic devices would be disposed on landfills, dangerous substances may reach groundwater and subsequently food chain, where it could affect human health.

CZ Vánoční LED osvětlení

Nepřipojujte řetěz k napájení, pokud je v obalu.

Světelné zdroje nejsou vyměnitelné.

Nenapojujte další vánoční svítidlo.

Při manipulaci odpojte z elektrické sítě.

V případě poruchy nevytahujte žárovky a řetěz neopravujte!

Nezasahujte do zapojení.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!