

REMINGTON®


Rechargeable Ladyshaver



WDF5030

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.
- 2 The appliance should be charged with the adaptor HK28G-3.6-100 (for Europe) and HK28B-3.6-100 (for UK) and the base supplied with the product.
- 3 Make sure the adaptor does not get wet.
- 4 Warning: detach the appliance from the power supply before cleaning any of the heads with water.
- 5 Suitable for use in a bath or shower. 
- 6 Do not immerse the charging stand in water or any other liquid, nor rinse it under the tap.
- 7 For hygiene reasons do not share this appliance with other persons.
- 8 Do not plug or unplug the appliance with wet hands.
- 9 Do not use the appliance, adaptor, charging stand or any other part if it is damaged, as this may cause injury. Always replace a damaged adaptor or charging stand with one of the original type.
- 10 Do not use attachments other than those we supply.
- 11 Always put the protection cap on the product to protect the cutting heads when you are travelling.
- 12 This appliance is not intended for commercial or salon use.
- 13 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington.
- 14 When switched on, the appliance must never come into contact with the hair on your head, eyelashes, ribbons etc. to prevent any danger of injury as well as to prevent blockage or damage to the appliance.



KEY FEATURES

- 1 Shaving head
- 2 Foil holder
- 3 Foil holder release buttons
- 4 Shaving head release button
- 5 2 hypoallergenic flexing anti-clog shaver foils
- 6 Flexible trimmer
- 7 Bikini trimmer comb guard
- 8 Massage strip with almond oil
- 9 Soft touch anti-slip grip
- 10 On/off button
- 11 Charging indicator light
- 12 Charging stand
- 13 Charging adapter (not shown)
- 14 Beauty bag (not shown)
- 15 Cleaning brush (not shown)

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!