

# ROVUS®


## ARCTIC AIR ULTRA FILTER

### USER MANUAL


EN.....	2	KS.....	12	RO.....	24
AL.....	3	KZ.....	14	RS.....	25
BG.....	4	LT.....	15	RU.....	26
BIH.....	6	LV.....	17	SI.....	28
CZ.....	7	MD.....	18	SK.....	29
EE.....	8	ME.....	19	UA.....	31
HR.....	10	MK.....	21		
HU.....	11	PL.....	22		

(EN) PICTURES / (AL) FOTOGRAFIN / (BG) ИЛЮСТРАЦИИ / (BIH) SLIKE / (CZ) OBRÁZKY / (EE) JOONISED / (HR) SLIKE / (HU) KÉPEK / (KS) FOTOGRAFIN / (KZ) СУПЕТЕР / (LT) PAVEIKSLIAUKAI / (LV) ATTĒLI / (MD) IMAGINI / (ME) SLIKE / (MK) СЛИКИ / (PL) RYSUNKI / (RO) IMAGINI / (RS) SLIKE / (RU) РИСУНКИ / (SI) SLIKE / (SK) OBRÁZKY / (UA) МАЛЮНКИ

 
Picture 1

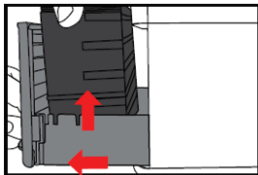


Picture 2

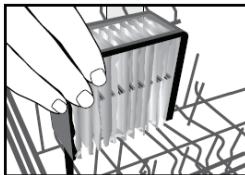 

Picture 3

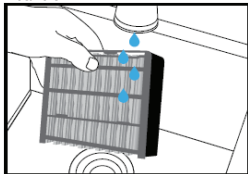 

Picture 4

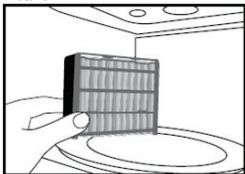 

Please read this manual thoroughly before using and save it for future reference.

## WARNINGS

1. This product is not a toy and should not be used by children or stored accessible to them.
2. A replaceable water filter is designed specifically for this product. Do not use any other filter or try to modify this one.
3. Always unplug Rovus Arctic Air Ultra from power supply when cleaning, removing/replacing filter or moving the device.
4. Do not touch the power supply or power cord with wet hands.
5. Rovus Arctic Air Ultra Filter must be kept on a level surface during use; tilting the unit may cause water to leak out of the base.
6. Check the internal reservoir before refilling - adding water too early will cause the reservoir to overflow and water will leak from the base.
7. If moving Rovus Arctic Air Ultra, unplug the unit and take care not to spill any water from the reservoir. Make sure the reservoir is completely empty before moving.
8. Use very cold water - the cooler the water used to fill Rovus Arctic Air Ultra, the cooler the air that it produces.
9. Although the product has been checked its usage and consequences are strictly user responsibility.

### CONTENTS

1 x Rovus Arctic Air Ultra Filter

### REPLACING THE FILTER (See Picture 1)

The water filter should be changed every 6 months, or when you feel Rovus Arctic Cooler is not performing as it should be

1. Unplug Rovus Arctic Air Ultra from the power supply.
2. Use the Filter Drawer Tab to pull out the filter drawer.
3. Grab onto filter, gently lift it and carefully slide out of unit completely.
4. For best results, lightly pre-soak under cold, running water.
5. Place new filter in Rovus Arctic Air Ultra as shown on filter.
6. Close the door.

**NOTE: When you remove the front grill, the unit fan and power will turn off and the water tank LED will blink red until the grill is put back in place. This is a safety function!**

### MAINTENANCE

We recommend cleaning the water tank and inside of the unit once weekly. Use only a non-abrasive cloth and mild dish soap when needed. For best-continued results, we recommend changing the filter every 6 months.

**DISHWASHER:** Place the filter on any rack except the bottom one and run normal washing cycle. Remove and let air dry (See Picture 2).

**HAND WASH:** Hand wash gently with warm water & soap. Shake out excess water & let air dry (See Picture 3).

**MICROWAVE:** Between washes, sanitize your filter by placing in microwave on low setting for up to 30 second. Let sit until cool (See Picture 4).

**NOTE:** If you see mold on the filter or notice a musty smell, stop and clean the filter before further use. Fully submerge the filter in a pot or

bowl filled with equal parts clean water and white vinegar - allow to soak for 45-60 minutes. Rinse with warm water, wring out and let air dry.  
**NOTE:** To prolong the lifetime expectancy of the filter avoid drying or using on direct sunlight.

#### **ROVUS ARCTIC AIR ULTRA FILTER**

- ID: 110030791
- ORT no. and Production date can be found on the packaging.
- Manufacturer with address: Chuzhou Donlim Electrical Appliances Co., Ltd., No. 1777, Yangzi East Road, Chuzhou City, Anhui Province, P.R.C.
- Rovus trademark owner/Importer to EU/Distributor for Studio Moderna: TOP SHOP INTERNATIONAL SA, VIA AL MULINO 22, CH-6814 CADEMPINO, SWITZERLAND
- Country of origin: P.R.C.

# EAC

**EAC** EN/ Conformity with Technical regulation of the Customs Union (Russia, Kazakhstan and Belarus)./AL/E konfirmuar dhe per vendet CU (Rusia, Kazakistani dhe Bjellorusia). /BA/ Suglasnost za zemlje Carinske unije (Rusija, Kazahstan, Bjelorusija). /BG/Съответствие със страните от Митническия съюз (Русия, Казахстан и Беларус). /CZ/Shoda pre krajiny CU (Rusko, Kazachstán a Bělorusko). /EE/Vastab Venemaa Föderatsiooni, Valgevene ja Kasahstani tolliliidu nõuetele. /HR/Suglasnost za zemlje Carinske unije (Rusija, Kazahstan, Bjelorusija). /HU/Megfelel az eurázsiai vámunió országainak (Oroszország, Kazahsztán és Fehéroroszország)./KS/Konformiteti me vendet e CU (Rusia, Kazakistani dhe Bjellorusia). /LT/Gaminy atitinka Eurazijos Sąjungos šalių reikalavimus. /MD/Conformitate pentru țările CU (Rusia, Kazahstanși Belarus). /ME/Saglasnost za zemlje Carinske unije (Rusija, Kazahstan, Bjelorusija). /MK/Согласност за землите од ЦУ (Русија, Казахстан и Белорусија). /PL/Zgodność z przepisami krajów CU (Rosja, Kazachstan i Białoruś). /RO/Conformitate pentru țările CU (Rusia, Kazahstanși Belarus)./RS/Usaglašenost sa CU zemljama (Rusija, Kazahstan i Belorusija). /SI/skladnost za države CU (Russia, Kazakhstan and Belarus). /SK/Zhoda pre krajiny CU (Rusko, Kazachstan a Bielorusko). /UA/Декларація виробника стосовно того, що прилад відповідає діючим директивам ЄС.

**AL**

#### **ROVUS ARCTIC AIR ULTRA FILTER**

#### **MANUALI I PËRDORUESIT**

Ju lutemi lexoni këtë manual tërësisht para përdorimit dhe ruajeni atë për referencë në të ardhmen.

#### **PARALAJMËRIME**

1. Ky produkt nuk është një lodër dhe nuk duhet të përdoret nga fëmijët ose të ruhet në dispozicion të tyre.
2. Një filtër i zë uji është projektuar posaçërisht për këtë produkt. Mos përdorni ndonjë filtër tjetër ose të përipien për të ndryshuar këtë.
3. Gjithmonë stakoj Rovus Arktik Air Ultra nga furnizimi me energji elektrike, kur pastrimi, duke hequr / zëvendësuar filtër ose duke lëvizur pajisjen.
4. Mos e prekni furnizimin me energji elektrike apo kablo të energjisë me duar të lagura.
5. Rovus Arctic Air Ultra Filter duhet të mbahen në një sipërfaqe nivel gjatë përdorimit; tilting njësi mund të shkaktojë ujë të mjedhje jashtë bazës.
6. Kontrolloni rezervuarin e brendshme para refilling - duke shtuar ujë shumë herët do të shkaktojë

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!