



# BLADE 2

DD778



- EN** Instruction Manual | 2-in-1 Handheld vacuum cleaner with rechargeable battery | 12
- DE** Bedienungsanleitung | 2in1 Akku-Handstaubsauger | 18
- FR** Mode d'emploi | Aspirateur balai multifonction | 27
- ES** Manual de instrucciones | Aspiradora inalámbrica de mano 2en1 | 36
- IT** Istruzioni per l'uso | Aspirapolvere manuale a batteria 2 in 1 | 45
- PT** Instruções de utilização | Aspirador de pó manual sem fios 2em1 | 54
- NL** Bedieningshandleiding | 2in1 accu-handstofzuiger | 63
- PL** Instrukcja obsługi | Ręczny odkurzacz akumulatorowy 2w1 | 72
- CZ** Návod k obsluze | Ruční akumulátorový vysavač 2v1 | 81
- HU** Használati utasítás | 2 az 1-ben akkumulátoros kézi porszívó | 90
- TR** Kullanım kılavuzu | 2si1 arada şarjlı el süpürgesi | 99
- FI** Käyttöohje | Akkukäyttöinen 2in1-käsihölynimuri | 108
- SE** Bruksanvisning | Batteridrivnen 2-i-1-handdammsugare | 117
- DK** Betjeningsvejledning | 2-i-1 batteridrevet håndstøvsuger | 126
- SK** Návod na obsluhu | Ručný akumulátorový vysávač 2v1 | 135
- NO** Bruksanvisning | 2-i-1 batteridrevet håndstøvsuger | 144
- GR** Οδηγίες χρήσης | Επαναφορτιζόμενη σκούπα χειρός 2 σε 1 | 153
- RO** Instrucțiuni de utilizare | Aspirator manual cu acumulator, 2 în 1 | 162
- BG** Упътване за обслужване | Аккумуляторна ръчна прахосмукачка 2в1 | 171
- HR** Upute za rukovanje | 2-u-1 ručni usisavač za prašinu s punjivom baterijom | 180
- LT** Naudojimo instrukcija | įkraunamas rankinis dulkių siurblys "du viename" | 189
- LV** Lietošanas rokasgrāmata | Akumulatora rokas putekļsūcējs "divi vienā" | 198
- EE** Kasutusjuhend | Kaks ühes akutoitega käsitolmuimeja | 207
- SI** Navodila za uporabo | 2v1 ročni akumulatorski sesalnik | 216

## SAFETY INFORMATION

### About this user guide

Read this user guide completely before using the machine. Keep this user guide for reference. If you pass your machine on to third parties, it must be accompanied with this user guide. Failure to adhere to this user guide can lead to serious injuries or damage to the machine. We assume no liability for damage caused as a result of failure to adhere to this user guide. Important information not included in this chapter is indicated as follows:



**WARNING:** Warns of health hazards and identifies possible risks of injury.



**CAUTION:** Indicates possible dangers to the machine or other objects.

**NOTE** Highlights tips and information.

### General usage

This stick vac is intended for household use only and NOT for commercial or industrial use.

- Only use the stick vac indoors on dry surfaces and keep the area you're cleaning well lit.
- Don't vacuum up hard or sharp objects such as glass, nails, screws, coins, etc.
- Don't vacuum up hot coals, cigarette butts, matches, or items that are burning or smoking.
- Don't use in an area that is wet or where there may be harmful fluids (chlorine, bleach and ammonia drain cleaner).
- Don't attempt to remove blockages with sharp objects as this may cause damage to your stick vac.

- Only Dirt Devil recommended charger, tools and accessories should be used with this stick vac and always check the floorhead and accessories are free from damage, dirt and debris before use.

- Always turn off or unplug the stick vac from the charger before carrying out any maintenance. Please refer to the appropriate section in the user guide to review necessary precautions.

- Always make sure the separator and filters are fitted correctly before using your stick vac.

- Keep all openings clear and free from debris as this may affect the airflow/suction.

- Take extra care when using the stick vac on the stairs.



**WARNING:** Always switch off the stick vac and unplug from the charger and mains before carrying out any maintenance or troubleshooting.



**CAUTION:** Don't over fill the dirt container to avoid blocking the air flow through the stick vac. For best cleaning results, empty the dirt container after every use. Filters should be tapped over a bin every 4-6 uses to remove dirt and debris and washed every 3 months. Filters should be replaced every 6-9 months depending on the level of use.

### Safety

- This stick vac can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the stick vac in a safe way and understand the hazards involved. Children must not play with the stick vac.

Cleaning and user maintenance must not be made by children without supervision.

- Keep fingers, hair and loose clothing away from moving parts and openings whilst using the stick vac.
- Don't use the stick vac if it has been dropped, damaged, immersed in water or left outdoors.
- Don't handle the charger plug or use the stick vac with wet hands.
- Don't use the stick vac charger if the charger cord or plug is damaged.
- Don't unplug the charger by pulling on the charger cord.

### Power supply

- Don't charge the stick vac outdoors, or leave the charger connected to the mains when not in use.
- Don't use the stick vac with the incorrect charger as this may result in damage or injury to the user. The correct charger information is listed on the ratings label.
- Always use the charger supplied with the stick vac. If charging the stick vac through an extension cord, use only CE approved 13amp extension cords, non-approved extension cords may overheat. Care should be taken to arrange the extension cord as it can be a trip hazard.

### Brushbar



**WARNING:** The brushbar in the powered head constantly rotates when switched on. Never use the powered head on one spot for an extended period of time as the brushbar may damage the floor surface. Always turn the powered head brushbar off when cleaning hard floors. To prevent any damage being sustained, test on an inconspicuous area of the flooring first.



**CAUTION:** If the brushbar in the powered head has been obstructed, the brushbar motor protection sensor may have been activated. The brushbar will stop and the light on the powered head will illuminate red. To reset switch the brushbar and stick vac off, remove the powered head from the reach wand/handheld and clear any obstruction. Wait 1 minute before refitting the powered head tool, switch the stick vac on and press the brushbar ON/OFF button.

### Storage

- Store your stick vac in a cool, dry area. If filters have been cleaned as per user guide instructions ensure they are thoroughly dry before storing away. This stick vac does not stay upright without constant support. Between uses, lie flat on the floor in a suitable location so that it does not become a trip hazard or can be stepped on.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!