

mesko



MS 6508 MS 6509

(GB) user manual	3	(BIH) upute za rad	38
(D) bedienungsanweisung	6	(H) felhasználói kézikönyv	42
(F) mode d'emploi	10	(FIN) käyttöopas	46
(E) manual de uso	14	(NL) handleiding	49
(P) manual de serviço	18	(HR) upute za uporabu	53
(LT) naudojimo instrukcija	73	(RUS) инструкция обслуживания	57
(LV) lietošanas instrukcija	76	(SLO) navodila za uporabo	84
(EST) kasutusjuhend	91	(I) istruzioni per l'uso	62
(CZ) návod k obsluze	26	(DK) brugsanvisning	95
(RO) Instrucțiunea de deservire	22	(UA) інструкція з експлуатації	80
(GR) οδηγίες χρήσεως	29	(SR) korisničko uputstvo	88
(SK) použivateľská príručka	69	(S) instruktionsbok	65
(MK) упатство за корисникот	34	(PL) instrukcja obsługi	101

MS 6508



MS 6509



SAFETY CONDITIONS IMPORTANT INSTRUCTIONS ON SAFETY OF USE PLEASE
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE

Dear Customer

Thank you for buying MESKO products.

MS6508/MS6509 is an appliance intended to warm up or prepare meals.

ATTENTION:

This appliance is intended for household use only.

This appliance is NOT intended for commercial/professional use.

This appliance MUST NOT be used outdoor.

Attention! Before using this appliance carefully read this manual to avoid the risk of accidents and to ensure proper use of the appliance. Keep and store the manual so as to ensure easy reference in the future. The manufacturer shall not be held reliable for damage caused by misuse or improper operation of the appliance.

I. INSTRUCTIONS FOR SAFE USE

1. Before using the appliance check if the voltage indicated in the data plate corresponds to the local power supply parameters. Remember that AC stands for “alternating current” while DC stands for “direct current”.

2. Unwind and straighten the power cord

3. Make sure that the power cord and the plug have no visible signs of damage

4. Make sure that, before and during use, the power cord is not routed above naked flames or other source of heat or hung over sharp edges which might damage the cable insulation.

5. Periodically check the condition of the power cord. If damaged the power cord should be replaced by an authorized repair facility to avoid danger.

6. Before the first use remove all the packaging elements. Attention! Where the casing is composed of metal parts, such parts may be covered with a protection film which is hardly visible. The film should be removed too.

7. This appliance is not intended for use by children or persons with reduced physical, sensory or mental capabilities unless they have been given supervision of authorized or experienced persons always in accordance with this manual

8. The appliance is intended for operation with external time switches or separate remote control systems.

9. The appliance can only be connected to an earthed 220-240V ~50/60Hz socket

CAUTION: This appliance is not intended for use by children under the age of 8 or persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge of the equipment, unless they have been given supervision or instruction concerning the use of the equipment and the related hazards by a person responsible for their safety and they are aware of the danger related to the operation of the equipment. Children should not play with the equipment. The equipment must not be cleaned or maintained by the children unless they are not under the age of 8 and the activities are supervised

10. Do not leave the appliance unattended when in use.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!