


GP *PowerBank*
Instruction Manual
U421



GP PowerBank Charger



USB to Micro USB
Charging Cable
(Input)

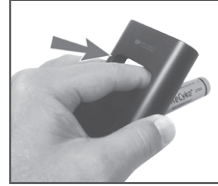

Push to release batteries

Charging Time* (1 to 4 AA or AAA)

GP NiMH	Size	Capacity (mAh/series)	Charging Time (mins)
	AA	2000mAh	40 - 160
AAA	800mAh		

* Charging time is subjected to the power rating of the USB adaptor with 5V DC output

Specifications

Input Rating	LED Indicator
DC 5.0V / 1.0A-2.1A	Total number of independent channels : 4 Input : DC5.0V 2.1A Per channel charging : 1xAA-DC1.4V 3600mA 2xAA-DC1.4V 1800mA 3xAA-DC1.4V 1200mA 4xAA-DC1.4V 900mA 1xAAA-DC1.4V 1500mA 2xAAA-DC1.4V 770mA 3xAAA-DC1.4V 510mA 4xAAA-DC1.4V 380mA

LED Indications

Condition		LED Indicator	
Battery Check (First 10 Seconds)	Bad / Primary battery inserted	Red (Flashing)	
	Remain battery capacity	≥90%	Green
		50-90%	Amber
		10-50%	Amber (Flashing)
	<10%	Red	
Battery Charging Stage	No battery inserted	OFF	
	Charging in progress	Green (Flashing)	
	When charging is finished and then switch to trickle charge	Green	

Charger Features

- * Charge 1 to 4 AA or AAA NiMH rechargeable batteries
- * Equipped with 4 individual charging channels
- * Termination methods:
 - Individual minus delta voltage (-dV)
 - Individual temperature sensor
 - Individual safety timer
- * Over-temperature protection
- * Reverse polarity protection
- * Primary and damaged batteries detection
- * Bad battery detection
- * Easy check LED icons
- * Safety guaranteed
- * Powered by computer, smartphone charger or any standard USB charger with micro USB plug
- * USB to Micro USB cable for recharging batteries

**Read the instruction manual thoroughly before use.
Keep the manual for future reference.**

Charging Instructions

1. Charge 1 to 4 AA or AAA NiMH batteries in any combination. Each charging slot can only charge 1 battery (either AA or AAA).
2. Connect the end of micro USB charging cable to GP ReCyko[®] USB charger and the other end of USB charging cable to the USB port of an operating computer* / a standard USB port / a compatible device adaptor. LED indicator lights on when charging starts. For best results recharge with GP ReCyko[®] batteries.
 - * Regarding the capacity of power supply by the computer, read its instruction manual to avoid potential damage to computer. Connection to other USB ports of computer by various devices concurrently may not be recommended during battery charging as the required power supply from computer may exceed its capacity. Charging time may vary when standby mode of the computer is on during charging. In case of abnormalities, disconnect the charger from the computer.
3. When charging completes, LED indicator remains light on. Disconnect GP ReCyko[®] USB charger from the port and remove batteries from the charger.

For best performance and optimal safety, charge GP NiMH batteries with GP ReCyko[®] USB charger

Importance

1. It is normal for batteries to become heated during charging and they will gradually cool down to room temperature after fully charged.
2. Do not re-insert freshly charged warm batteries immediately for further charging as it might damage the battery. Wait at least 30 minutes before reconnecting charging cable to power source.
3. Remove batteries from the electrical device if the device is not going to be used for a long time.
4. Battery storage temperature: -20 ~ 35°C
Charger operation temperature: 0 ~ 45°C
5. Charging time may vary based on different battery capacities. (Refer to the Charging Time Table)

Caution

1. To reduce the risk of injury, it is recommended that GP Ni-MH rechargeable batteries are used.
2. Do not use non-rechargeable batteries.
3. Do not use the charger in humid conditions.
4. Do not use the charger if it has a damaged plug.
5. Do not use the charger after it has been dropped or damaged.
6. Do not open/disassemble the charger.
7. Unplug the charger before maintenance or cleaning.
8. Do not use the charger in direct sunlight.
9. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
10. Children should not play with the appliance.
11. Cleaning and user maintenance should not be made by children without supervision.

For charging conventional GP NiMH rechargeable batteries



For brand new batteries, 2 to 3 times of charging and usage cycles are required to optimize the batteries' performance.

For charging new generation NiMH rechargeable batteries(GP ReCyko[®] batteries)



1. GP ReCyko[®] batteries are pre-charged. No need to recharge prior to first use. Please recharge if the batteries cannot power up your devices.
2. GP ReCyko[®] batteries come with good capacity retention. Remove the batteries and unplug the charger once the charging is complete. Do not leave batteries in the charger for extended periods. Always unplug the charger when it is not in use.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!