


THE HEAT CONTROLLER

RADIATOR THERMOSTAT

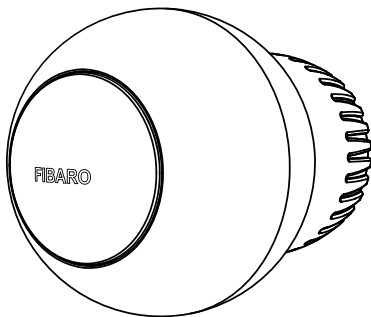

Quick Manuals. Warranty Terms

HOME INTELLIGENCE
FIBARO SYSTEM



ENGLISH	3
POLSKI	6
DEUTSCH	9
FRANÇAIS	12
ITALIANO	15
NEDERLANDS	18
SVENSKA	21
NORSK	24
РУССКИЙ	27
ČESKY	30
SLOVENSKÝ	33
EESTI	36
LIETUVIŲ	39
LATVIEŠU	42
MAGYAR	45
ROMÂNĂ	48

FIBARO Heat Controller is a remotely controlled thermostatic head to control temperature in your room. It measures the temperature and automatically adjusts the heat level.

It can be mounted without tools on three types of thermostatic radiator valves.

You can create schedules via app to easily manage temperature throughout the week.

Read the manual before attempting to install the device!

For full instruction manual and technical specification please visit our website:

manuals.fibaro.com/en/heat-controller




First launch

1. Connect the charger to the micro-USB port to charge the device.

If you have the temperature sensor:

- a. Use a coin to open the battery cover by turning it counter-clockwise.
 - b. Remove the sticker underneath the battery.
 - c. Use a coin to close the battery cover by turning it clockwise.
2. Disconnect the charger when the LED ring pulses green (device fully charged).
 3. Dismount your current thermostatic head.
 4. Depending on type of your valve:

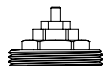


M30 x 1.5

Proceed normally



Danfoss RTD-N

Use adapter:

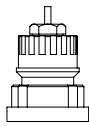


Danfoss RA-N

Use adapter:



5. Mount the device on the valve and tighten it by turning the cap clockwise.*
6. Use the included key to click the button.

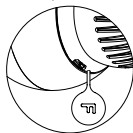

7. The LED ring will start blinking blue.

If you have the temperature sensor:

- a. Click the button on it now.
 - b. The LED ring will blink green 5 times if the connection was successful.
8. Set the main Z-Wave controller in add mode.
 9. Triple click the button on the thermostatic head. The LED ring will start blinking white.
 10. If you are adding in S2 authenticated mode, type in the device pin code (underlined part of the public key on the label).
 11. Successful adding will be confirmed by the controller.



* Install in horizontal position only!

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!