



AKAI

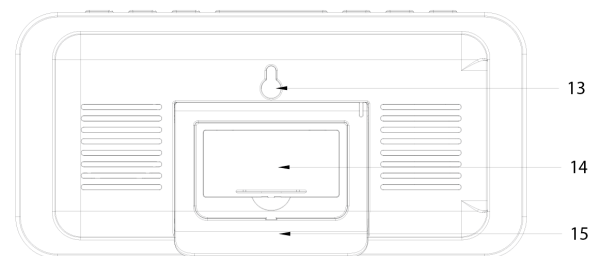

ACR-3899
USER MANUAL
MANUAL DE UTILIZARE

DESCRIPTION

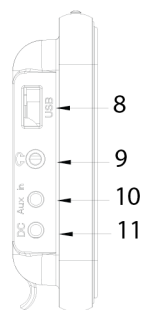

- 1. POWER/FUN
- 2. HOUR/TU-
- 3. MIN/TU+
- 4. SNOOZE/SLEEP/HIGH/LOW/OFF
- 5. TIME SET/M+
- 6. AL1/VOL-
- 7. AL2/VOL+
- 8. USB SLOT FOR CHARGING

- 9. EARPHONE JACK
- 10. AUX IN JACK
- 11. DC 5V JACK
- 12. LED DISPLAY
- 13. HOLE
- 14. BATTERY DOOR
- 15. HOLDER

CONNECTING THE RADIO

PLUG THE DC ADAPTOR INLET INTO THE DC 5V JACK (11). WHEN ELECTRICAL POWER HAS BEEN INTERRUPTED AND RESTORED, IF THERE ARE 2 AAA BATTERIES IN THE RADIO AND THE POWER OFF AND ON AGAIN, THE CLOCK DISPLAY WILL SHOW THE TIME. MAKE SURE TO RESET BOTH THE CORRECT TIME AND ALARM TIME FOR PROPER OPERATION.

TIME SETTING

PRESS AND HOLD THE TIME SET/M+ (5), THEN THE CLOCK DISPLAY WILL BLINK. PRESS THE HOUR/TU- (2) OR MIN/TU+ (3) TO SET THE CLOCK DISPLAY TO THE CORRECT TIME. PRESS TIME SET/M+ (5) AGAIN WHEN FINISHED THE SETTING, THE TIME DISPLAY WILL NOT BLINK.

DIMMER HIGH/LOW/OFF

ON TIME DISPLAY MODE, LONG PRESS HIGH/LOW/OFF (4) TO SET HIGH OR LOW OF THE LED DISPLAY OR TURN OFF THE LED DISPLAY.

RADIO OPERATION

LONG PRESS POWER/FUN (1) TO TURN ON THE RADIO.
SHORTPRESS POWER/ FUN (1) TO SELECT AM BAND OR FM BAND OR AUX.
PRESS HOUR / TU-(2) OR MIN/TU+ (3) TO ADJUST YOUR DESIRED FREQUENCY.
PRESS AL 2/VOL + (7) TO INCREASE THE VOLUME, THE MAXIMUM LEVEL UP TO LEVEL 16, THE DEFAULT VOLUME IS 12.
PRESS AL 1/VOL- (6) TO DECREASE THE VOLUME, THE MINIMUM LEVEL OF VOLUME IS LEVEL 0.

MEMORY OPERATION

THE CLOCK RADIO CAN STORE 20 AM AND 20 FM PRESETS.
ON RADIO PLAYING MODE, SELECT YOUR DESIRED BAND (FM/AM), PRESS UP MIN/TU+ (3) OR HOUR / TU-(2) TO CHOOSE YOUR DESIRED FREQUENCY.
PRESS AND HOLD TIME SET/M+ (5) TO ENTER INTO PRESET MODE, THE PRESET NUMBER WILL SHOW AND FLASH ON THE LED DISPLAY.
THEN SHORT PRESS HOUR/TU- (2) OR MIN/TU+ (3) TO SELECT YOUR DESIRED MEMORY NUMBERS FROM P1 TO P20.
PRESS THE TIME SET/M+ (2) TO CONFIRM YOUR MEMORY SETTING.
REPEAT THE ABOVE STEPS, YOU CAN STORE YOUR DESIRED STATIONS.
WHEN THE SETTING IS CORRECT, PRESS TIME SET/M+ (5) TO SELECT YOUR PRESET FREQUENCY TO ENJOY RADIO.
PRESS POWER /FUN (1) TO TURN OFF THE RADIO.

ALARM FUNCTION

SETTING ALARM 1 BY BUZZER

IN CLOCK DISPLAY MODE, PRESS AL 1/VOL- BUTTON (6) ONCE TO SELECT ALARM BY BUZZER.
THE AL1 BUZZER ICON AND ALARM TIME DISPLAY WILL FLASH.
USING HOUR/TU- BUTTON (2) AND MIN/TU+ BUTTON (3) TO SET YOUR DESIRED ALARM HOUR.

SETTING ALARM 1 BY RADIO

IN CLOCK DISPLAY MODE, PRESS AL 1/VOL- BUTTON (6) TWICE TO SELECT ALARM BY RADIO.
THE AL1 RAD ICON AND ALARM TIME DISPLAY WILL FLASH.
USING HOUR/TU- BUTTON (2) AND MIN/TU+ BUTTON (3) TO SET YOUR DESIRED ALARM HOUR.

SETTING ALARM 2 BY BUZZER

IN CLOCK DISPLAY MODE, PRESS AL 2/VOL+ BUTTON (7) ONCE TO SELECT ALARM BY BUZZER.
THE AL2 BUZZER ICON AND ALARM TIME DISPLAY WILL FLASH.
USING HOUR/TU- BUTTON (2) AND MIN/TU+ BUTTON (3) TO SET YOUR DESIRED ALARM HOUR.

SETTING ALARM 2 BY RADIO

IN CLOCK DISPLAY MODE, PRESS AL 2/VOL+ BUTTON (7) TWICE TO SELECT ALARM BY RADIO.
THE AL2 RAD ICON AND ALARM TIME DISPLAY WILL FLASH.
USING HOUR/TU- BUTTON (2) AND MIN/TU+ BUTTON (3) TO SET YOUR DESIRED ALARM HOUR.

SLEEP FUNCTION

IF YOU WANT TO LISTENING THE RADIO WHILE FALL ASLEEP. YOU CAN USE SLEEP FUNCTION BY SETTING THE SLEEP TIME.
WITH THE RADIO ON, PRESS THE SLEEP BUTTON (4) TO ENTER INTO SLEEP MODE.
THE 90 No. SHOWS ON THE LED DISPLAY.
IT STATES 90-MINUTES OF SLEEP TIME AND TO BE SETTED IN SEQUENCE 90-80-70-60-50-40-30-20-10-OFF.
PRESS THE SLEEP (4) TO CHOOSE YOUR DESIRED SLEEP TIME, THE SLEEP TIMER WILL CHANGE BY 10 MINUTES EACH TIME YOU PRESS THE SLEEP BUTTON (4). THE UNIT WILL STOP PLAYING WHEN THE TIMER COUNTDOWNS FROM THE PRESET SLEEP TIME TO THE END AND THEN SWITCH OFF BY ITSELF.

SNOOZE FUNCTION

ON ALARM SOUND MODE, PRESS POWER/FUN (1) TO STOP ALARM1 OR ALARM2, THE ALARM WILL NOT RESUME. BUT IF YOU PRESS THE SNOOZE BUTTON (4) TO STOP THE ALARM, THE AL ICON OF THE LED DISPLAY WILL BLINK, AND THE ALARM WILL RESUME AFTER 9 MINUTES.

AUX-IN JACK

FOR CONNECTING TO EXTERNAL PLAYERS, E.G. MP3 PLAYER, SMARTPHONE, TABLET PC ETC.

1. CONNECT THE EXTERNAL DEVICE TO THE AUX-IN JACK WITH A 3.5MM STEREO JACK.
2. PRESS POWER/FUN REPEATEDLY UNTIL "AUX" IS SHOWN ON THE DISPLAY.
3. YOU WILL HEAR THE SOUND PLAYBACK FROM THE EXTERNAL DEVICE THROUGH THE LOUD-SPEAKER. USE THE AL1/VOL- OR AL2/VOL+ BUTTONS TO ADJUST THE VOLUME. THE CONTROL BUTTONS ARE NOT AVAILABLE.

REMARKS: ADJUST THE VOLUME OF THE EXTERNAL DEVICE TO AN AUDIBLE LEVEL.

HEADPHONE JACK

FOR HEADPHONE OPERATION, USE HEADPHONES WITH A 3.5MM JACK PLUG THAT YOU PLUG INTO THE HEADPHONE JACK OF THE DEVICE. THE LOUDSPEAKER IS SWITCHED OFF.

CHARGING YOUR SMART PHONE OR PORTABLE DEVICE

THE UNIT FEATURES A USB PORT FOR CHARGING YOUR PORTABLE DEVICE (IPHONE, ANDROID PHONE, SMART PHONE ETC.) WHEN USED WITH USB CHARGING CORD THAT CAME WITH DEVICE.

PLUG ONE END OF THE USB CORD (NOT INCLUDED) INTO THE USB PORT LOCATED ON THE SIDE OF THE UNIT. PLUG THE OTHER END OF CORD INTO THE DEVICE YOU WISH TO CHARGE.

OBSERVE THE BATTERY CHARGE INDICATOR ON YOUR DEVICE AND THE CHARGING WILL START IMMEDIATELY.

UNPLUG THE CABLE WHEN YOUR DEVICE IS CHARGED.

CAUTION:

BEFORE CHARGING, PLEASE REFER TO THE USER MANUAL OF THE DEVICE YOU WISH TO CHARGE TO MAKE SURE THE CHARGING CURRENT REQUIRED DOES NOT EXCEED 1AMP (1,000 MA) OF CHARGING CURRENT.

OVERLOADING THE CHARGE CIRCUIT MAY DAMAGE THE RADIO UNIT.

NOTE:

- SOME SMART PHONES AND PORTABLE DEVICES USE PROPRIETARY USB CONNECTIONS AND CIRCUITRY, SO THEY MAY NOT CHARGE WHEN PLUGGED INTO THE USB PORT. PLEASE REFER TO YOUR DEVICE USER MANUAL BEFORE YOU ATTEMPT TO CHARGE THEM.

- IT IS NORMAL FOR THE RADIO UNIT TO BE WARM WHILE THE USB PORT IS IN USE AND CHARGING YOUR SMART PHONE OR PORTABLE DEVICE.

BATTERY BACKUP

THIS CLOCK HAS A BACKUP POWER SYSTEM TO ENSURE CONTINUOUS OPERATION DURING POWER FAILURE.

INSERT TWO AAA BATTERIES INTO BATTERY COMPARTMENT AND THE CLOCK MECHANISM WILL CONTINUE TO MAINTAIN THE CURRENT TIME. 2x AAA BATTERIES PROVIDE NO FUNCTION OTHER THAN THE BACKUP TIME. IT DOES NOT ALLOW YOU TO LISTEN TO RADIO, SOUND AN ALARM OR TO DISPLAY THE TIME.

SPECIFICATION

FREQUENCY RANGE:

AM: 522 ~ 1620 KHZ

FM: 87.5 ~ 108 MHZ

DC 5V $\overline{=}$, 1A

24 HOURS FORMAT

DV 3V, 2 X AAA

POWER SOURCE:

CLOCK DISPLAY:

BATTERY BACK UP:

(BATTERIES NO INCLUDED)

DRIPPING & VENTILATION WARNING

THE PRODUCT SHALL NOT BE EXPOSED TO DRIPPING OR SPLASHING AND THAT NO OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHALL BE PLACED ON THE PRODUCT. THE NORMAL VENTILATION OF THE PRODUCT SHALL NOT BE IMPEDED FOR INTENDED USE.



IMPORTANT SAFETY INSTRUCTIONS

- CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- WARNING:** Only use attachments/accessories specified or provided by the manufacturer (such as the exclusive supply adapter, battery etc).
- WARNING:** Please refer the information on exterior bottom enclosure for electrical and safety information before installing or operating the apparatus.
- WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
- WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.
- WARNING:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- WARNING:** The mains plug is used as disconnect device, the disconnect device shall remain readily operable.
- When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cord set. When put into use again, please make sure the power cord set being not damaged, If any damages found, please look for the service person to replace the power cord set specified by the manufacturer or have the same characteristics as the original one.

DISPOSAL OF ELECTRICAL AND ELECTRONIC EQUIPMENT



This symbol on the product or packaging means that the product should not be treated as household waste. Do not throw garbage at the end of its life, but take it to a collection center for recycling. In this way you will help to protect the environment and be able to prevent any negative consequences that it would have on the environment and human health.

To find your nearest collection center:

-Contact local authorities

- Access the website: www.mmediu.ro

Request additional information from the store where you purchased the product.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!