 


# AEG



**STAIN REMOVER PEN**  
**Ultrasonic wave technology**  
**Model A4WMSTPN1**



# Contents

1. Safety Information .....	3
2. Safety Instruction .....	4
3. Introduction .....	4
4. Product description .....	4
5. Getting Started .....	5
6. Using Your Product .....	6
7. Tips .....	7
8. Cleaning and Maintenance .....	7
9. What to do if... ..	8
10. Technical data .....	8
11. Environment concerns .....	8
12. GUARANTEE .....	9

## 1. SAFETY INFORMATION

For your safety and correct operation of the appliance, read this manual carefully before installation and use. Always retain a copy of these instruction in the event or re-sale or move home. Users must understand the operation and safety features of the appliance.

### 1.1 Children and vulnerable people safety

- The appliance can be used by children aged 8 years +.  
People with reduced physical, sensory or mental capabilities, or who have not used the appliance previously need to be supervised and understand the hazards involved.
- The Stain Remover Pen is not recommended for use by persons with pacemakers.
- Stop the unit immediately if you experience any physical discomfort.
- Ensure the appliance is kept out of reach of children.
- Keep all packaging away from children and dispose of it appropriately.
- Do not let children play with the appliance.
- Children shall not carry out cleaning and user maintenance of the appliance without supervision.

### 1.2 General Safety

- Do not use a damaged appliance.
- Make sure that the parameters on the Technical data are compatible with the electrical ratings of the mains power supply.
- Never attempt to attach the power adapter connector to other devices.  
This could damage the equipment.
- Never attempt to connect any other connector to the pen.  
The supplied connector is intended for use with this product ONLY and any unintended use could damage your Stain Remover Pen.
- Do not use the power cord to pull or drag the product.
- Do not place the power cord over sharp edges (e.g. a table edge) to avoid damage.
- Never pull on the power cord to remove the plug from the power outlet; remove using the mains adaptor instead.
- Do not pour water directly on the unit and never immerse it in water.
- Do not clamp, twist, stretch or tie the power cord into a knot.
- Avoid electric shock hazards. Do not pour water onto the unit or handle it with wet hands. Never immerse the unit, power cord, plug or connector in water or any other liquid or flammable material
- Use original accessories only to prevent product damage or injury.
- The appliance should only be used with the power adaptor supplied.
- Unplug the unit before any cleaning, maintenance and before changing accessories.
- Clean the appliance with a moist cloth. Use only neutral detergent.  
Do not use abrasive products, abrasive cleaning pads, solvent or metal object.
- This product is for household use only.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!