**ENGLISH** 



1.1 The appliance you have purchased is a technologically advanced product designed by one of the leading European manufacturers of high pressure washers. To obtain the best performance from your unit, read this booklet carefully and follow the instructions each time you use it. During connection, use and servicing of the appliance, take all possible precautions to protect your own safety and that of the people in the immediate vicinity. Read the safety regulations carefully and comply with them on all occasions; failure to do so may put health and safety at risk or cause expensive damage.

## 2 SAFETY SIGNS

**2.1** Comply with the instructions provided by the safety signs and symbols fitted to the appliance and in this manual.

The appliance and manual only feature the symbols relevant to the model purchased. Check that the symbols and signs affixed to the appliance are always present and legible; otherwise, fit replacements in the original positions.





E2 symbol (if symbol appears in manual)- Indicates that the appliance is intended for professional use, i.e. for experienced people familiar with the relative technical, regulatory and legislative factors and capable of performing the operations involved in using and maintaining the appliance. This appliance is not intended for use by children, persons with impaired physical, sensory or mental capabilities, or persons without the necessary experience and knowledge.

E3 symbol (if symbol appears in manual)- Indicates that the appliance is intended for non-professional (domestic) use. This appliance may be used by persons with impaired physical, sensory or mental capabilities, or who do not have the necessary experience and knowledge, if they are under supervision or have been instructed in the safe use of the appliance and understand the risks involved.

Moving parts. Do not touch.





## **ENGLISH**

(Original instructions)

O Switch "OFF" position





/ II POWER Switch "ON" positions



Guaranteed sound power level

Prohibition sign, informs users that local regulations may prohibit connection of the product to the drinking water supply system.



Danger sign, warns users not to direct the water jet at people, animals, electrical equipment or the product itself.

This product is rated in insulation class II. This means it has reinforced or double insulation (only if symbol appears on appliance).

**C** € The product complies with the relevant European directives.

E1 symbol - Indicates that the appliance must not be disposed of as municipal waste; it may be handed in to the dealer on purchase of a new appliance. The appliance's electrical and electronic parts must not be reused for improper uses since they contain substances which constitute health hazards.

- Wear ear defenders.
- Wear a protective mask.
- Wear respiratory protection.
- Wear protective gloves.
- Wear safety footwear.
- Wear protective clothing.







#### 3 SAFETY RULES/RESIDUAL RISKS

#### 3.1 SAFETY "DO NOTS"

- **3.1.1** Warning. DO NOT allow children to use the appliance; supervise them to ensure that they do not play with it.
- **3.1.2** Warning. High pressure jets may be dangerous if incorrectly used.
- **3.1.3 Warning.** DO NOT use the appliance with flammable or toxic liquids, or any products which are not compatible with its correct operation. Use of the appliance in a potentially inflammable or explosive atmosphere is forbidden.
- **3.1.4 W**ARNING. RISK OF EXPLOSION. DO NOT use the appliance to spray flammable liquids.
- **3.1.5** Warning. DO NOT point the water jet at people or animals.
- **3.1.6 Warning.** DO NOT point the water jet at the unit itself, electrical parts or other electrical equipment.
- **3.1.7** Warning. DO NOT use the appliance with people within its range of action unless they are wearing protective clothing.
- **3.1.8** Warning. DO NOT point the jet at yourself or others to clean clothing or footwear.
- **3.1.9** WARNING. DO NOT use the appliance outdoors when it is raining.
- **3.1.10** Warning. DO NOT allow children, incompetent persons or those who have not read and understood the instructions to use the appliance.
- 3.1.11 WARNING. DO NOT touch the plug and/or socket with wet hands.
- **3.1.12 Warning.** DO NOT use the appliance if the electric cable is damaged. If the electric cable is damaged, it must be replaced by the manufacturer, one of its authorised Service Centres or similarly qualified persons in order to avoid a safety hazard.
- **3.1.13 Warning.** DO NOT use the appliance if a supply cable or important parts such as the safety devices, high pressure hoses or gun are damaged.
- **3.1.14 Warning.** DO NOT jam the trigger in the operating position.
- **3.1.15 Warning.** Check that the data plate is affixed to the appliance; if not, inform your dealer. Appliances without plates must NOT be used as they are unidentifiable and potentially dangerous.
- **3.1.16 Warning.** DO NOT tamper with or adjust the setting of the safety valve or the safety devices.
- **3.1.17 Warning.** DO NOT alter the original diameter of the spray head nozzle.
- **3.1.18 Warning.** DO NOT move the appliance by pulling on the ELECTRIC CABLE.



**\P** 



# Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



### Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.
  - \*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.
- 2) Pak jsou tady "roboti", kteří se přiživují na naší práci a "vysávají" výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!