

# Manual

## Food Dehydrator G21 Mistral






**EN**

**Thank you for purchasing our product.**

Before using this unit, please read this manual in order to avoid improper handling and use of the device.

**Description:**

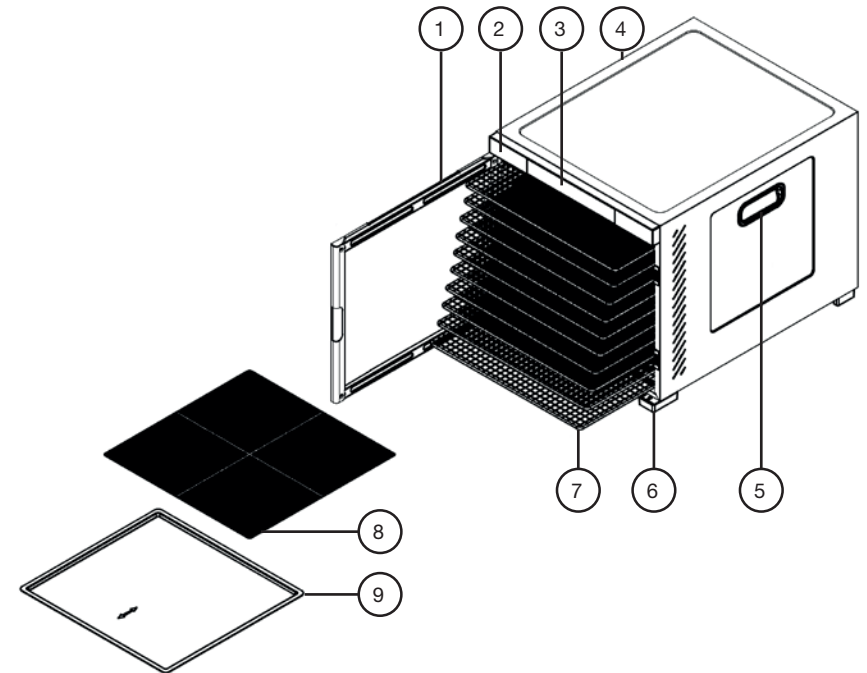

- |                  |            |                         |
|------------------|------------|-------------------------|
| 1. Door          | 4. Housing | 7. Stainless steel tray |
| 2. Panel         | 5. Handle  | 8. Mesh                 |
| 3. Control panel | 6. Feet    | 9. Fruit roll tray      |

**Optional accessories:**

**Mesh Tray**

(Put the mesh on the stainless steel tray )

Use for smaller items such as herbs and berries, and sticky items such as banana & tomatoes.

**Non-stick sheet (Fruit Roll Tray)**

Put the mesh on the stainless steel tray, makes delicious fruit rolls naturally.

When not using as Fruit Roll Tray, store it at the bottom of the unit as a crumb tray.

## Safety Instruction

The following basic precautions should always be adhered to when using the electrical appliance.

Please read this instruction carefully before use and retain for future reference.

1. This appliance is not intended for use by persons (including children) with limited physical, sensual or mental capabilities, or with lack of experience and knowledge, unless they have been given supervision or instructions regarding use of the appliance by a person responsible for their safety.
2. Do not use it for outdoors.
3. When using the food dehydrator ensures that it is on a flat, level and sturdy surface, ensure no risk that it may fall .Also that it can take the weight of the unit during use.
4. Failure to follow all the instructions listed may result in electric shock, fire or serious personal injury .The warnings, cautions and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur while the product in use.
5. Do not leave the food dehydrator unattended during use.
6. Always keep the food dehydrator out of children as they are unable to recognize the hazards associated with incorrect handling of electrical appliances.
7. Before plugging the food dehydrator into the mains electrical supply, check that the voltage and power supply comply with the specifications on the food dehydrator's rating label.
8. Make sure that the food dehydrator is switched off and remove the plug from the mains electrical supply when it is not in use; before it is cleaned and whilst it is being repaired.
9. Ensure that the food dehydrator and power cord is not hung over sharp edges and keep away from hot objects and open flames; otherwise the plastic will melt and cause a fire.
10. Under no circumstances should the food dehydrator or plug be immersed in water or any other liquid .Do not use the appliance with wet hands.
11. Check the food dehydrator and power cord regularly for damage.
12. Do not use the food dehydrator should there be damage to the plug or cord, following a malfunction, or after it has been dropped or damaged in any way.
13. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
14. Repairs to the food dehydrator should only be performed by a qualified electrician .Improper repairs may place the user at risk.
15. None of the product's parts are dishwasher safe, unless explicitly specified otherwise.
16. Always turn the power off at the power outlet before you insert or remove a plug. Remove by grasping the plug; do not pull on the cord.
17. Do not use your appliance with an extension cord unless this cord has been checked and tested by a qualified technician or service person.
18. Never use an unauthorized attachment.
19. Avoid contact with moving parts. Keep hands, hair, clothing, spatulas and other utensils away during operation to reduce the risk of injury to persons and/or damage to the machine.
20. Please don't turn the draught of engine towards others or tinder.
21. Please don't keep it beside anything heating. Please keep the plug away from pressing; otherwise it will cause a fire or electric shock.
22. If you pass this appliance on to a third party, these operating instructions must also be handed over.
23. The appliance is not intended to be operated by means of an external timer or separate remote-control system.

## Caution:

- To reduce the risk of electric shock, do not immerse or expose the product, flexible cord or plug to rain, moisture or any liquid.
- Do not use the product near baths, basins or other vessels containing water or other liquids, or when standing in or on damp or wet surfaces. Don't keep the device in the watery environment;
- Keep the device away the place of high temperature ray and wetly.
- Don't operate the device with wet hands.
- Please turn off the power supply in the watery environment.
- In the event where the appliance is dropped into the water, turn off the power at the power outlet and remove the plug immediately.

### **DO NOT REACH INTO THE WATER TO RETRIEVE IT.**

- It is important to note that the appliance will have to be inspected by a qualified technician before using it again.
- **ATTENTION!** Do not run the appliance for more than 48hours in one single use. After 48 hours. Unplug and let it cool down for at least 2 hours before operating again.
- Do not operate near gas spray cans.
- Incorrect operation and improper handling can lead to malfunction of the appliance and injuries to the user.
- The power cord can not be squeezed by something heavy or sharp, otherwise it will cause a fire or electric shock.
- The temperature of accessible surface may be high when the appliance is operating.

## Feature of Dehydrator

This unit features an automatic fan, which circulates warm air producing a nice evenly dried device!

Dried foods are a great treat to snack on because they hold almost all of their nutritional value and flavor.

Perfect way to preserve fruit, snacks, vegetables, flowers and more.

10 stainless steel trays, each tray can't over 1kg food.

It can remove one or more trays to increase the space for thicker food.

Easy to clean up of the trays.

The drip tray can collect the residue, easy for cleaning.

Close the door when drying.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!