



Manual Press Juicer G21 Active





EN

Thank you for purchasing our product.

Please read this instruction manual before using the device to avoid unprofessional handling and the device could perform all of yours expectation.

Parts name



- 1. Big cone
- 2. Small cone
- 3. Sieve
- 4. Bowl

- 5. Hand shank
- 6. Cover
- 7. Body
- 8. Power cord

Important safeguards

When using electrical appliances, basic safety precautions should always be followed including the following:

Read all instructions before using and save these instructions for future using.

1. To protect against electrical shock, do not immerse cord, plug, or citrus juicer in water or other liquid.
2. Unplug from outlet when not in use, before putting on or taking off parts and before cleaning. Remove plug by gripping plug body and pull out of the outlet. Never yank or twist cord to unplug.
3. Avoid contacting moving parts.
4. Do not operate this appliance with a damaged cord or plug, or after the appliance malfunctions, or has been damaged in any manner, return the citrus juicer to the retail location where it was purchased for repair.
5. Use this appliance only for its intended use as described by this manual. Do not use accessory attachments without recommending by the manufacturer.
6. Do not use outdoors or operate in the presence of explosive and/or flammable fumes.
7. Do not let cord hang over edge of table or counter, or touch hot surfaces.
8. This appliance is intended for household use only. It is not for commercial or industrial use.
9. Any service of the citrus juicer should be performed by the retail location where it was purchased.
10. To disconnect citrus juicer, wait until motor stops, then remove plug from electrical outlet.
11. Do not operate unattended. Make sure the motor stops completely before disassembling. Unplug after each use.
12. Warning: Potential injury from misuse.
13. Care shall be taken when emptying the bowl and during cleaning.
14. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
15. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
16. This appliance can be used and cleaned by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Keep the appliance and its cord out of reach of children aged less than 8 years.
17. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
18. Children shall not play with the appliance.
19. Regarding details on how to clean surfaces in contact with food, refer to section „Clean“.

Preparing the Citrus Juicer for Use

Always clean cone, sieve, sieve holder and spout before you use the appliance for the first time (see „Cleaning“).

How to use your appliance

1. Place the appliance on a firm, level surface out of the reach of children.
2. Plug in power cord.
3. Put the bowl on place correctly.
4. Put on the sieve.
5. Then insert the cone.
6. Switch the appliance on by pressing the halved fruit firmly onto the cone. Use the handle to press the half fruit, juice will be extracted quietly and quickly.
(For large orange you have to use big and small cones together, lemons that are too small to be squeezed and pressed with the handle, please press with your hand manually).
7. Put a vessel under spout. Flip the spout down towards the vessel, the instant flow system guides juice directly into vessel.
8. After you have finished, flip the spout up to prevent dripping and spilling juice.
9. Always clean the appliance immediately after use (see in „Cleaning“).

Clean

1. Unplug cord from electrical outlet. Remove the cone, sieve and bowl from the appliance.
2. Flip the spout down fully in order to clean it properly. The spout cannot be detached from the appliance.
3. Clean the cone, sieve and vessel by using warm soapy water. Dry all parts. Do not clean these parts in a dishwasher.
4. Clean the motor unit by using a moist cloth. Never immerse the motor unit in water or rinse it under the tap.

Technical parameters:

Rated voltage: 220-240 V~

Frequency: 50 Hz

Power: 160 W



The English version of the manual is an exact translation of the original manufacturer's instructions. Images used in this manual are for illustrational purposes only and may differ from the actual product.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!