

### 1 Insert the batteries into the Remote Control

 
Insert two **AAA/R3** or equivalent type batteries inside. Observe the correct polarity (+/-) when inserting batteries and replace the battery cover.




### 2 Connect the antenna to your TV

*\* The back connection options may differ depending on the model*

#### REAR SIDE OF THE TV

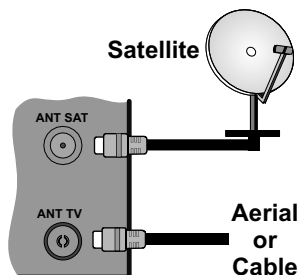

### 3 Connect the TV to the mains socket

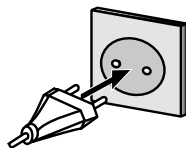 

### 4 To switch the TV on (depending on the model)

After connecting the power cord to the mains socket, the standby LED lights up.

To switch on the TV from standby mode either;

 
1. Press the **Standby** button, a numeric button or **Programme +/-** button on the remote control.

----- or -----

2a. Press the middle of the side function switch on the TV in.

2b. Press the control button on the TV.

*\* The appearance of the remote control buttons and the position of the control buttons on the TV may differ depending on the model*

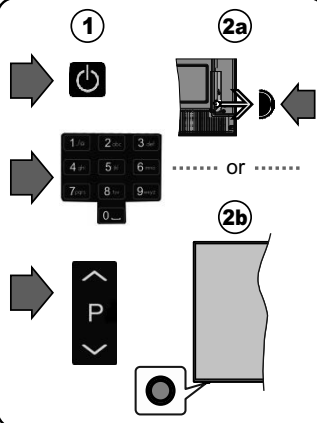

## 5 HDMI input

PLEASE ENSURE BOTH UNITS ARE SWITCHED OFF BEFORE CONNECTING. Use a HDMI to HDMI cable to connect the two units together. To select the HDMI input, press the **Source** button on the remote control. Each time it is pressed the on-screen menu confirms your selection.

*\* The appearance of the **Source** button may differ depending on the model of the remote control*



To HDMI connection  
on the device



## 6 Auto Setup procedure

When turned on for the first time, the language selection screen is displayed. Select the desired language and press **OK**.

On the next screen set your country preference. Then press **OK** to continue.

Select **Home Mode** for home use. You can activate **Store Mode** option at this point if necessary, however, this option is only intended for store use.

Depending on the model of your TV and the country selection **Privacy Settings** menu may appear at this point. Using this menu you can set your privacy privileges. Highlight a feature and use Left and Right directional buttons to enable or disable. If the **Internet Connection** option is disabled **Network/Internet Settings** screen will be skipped and not displayed.

Highlight **Next** and press **OK** button on the remote control to continue and the **Network/Internet Settings** menu will be displayed.

Refer to **Connect your TV to the internet** section to configure a wired or a wireless connection. After the settings are completed highlight **Next** and press **OK** button to continue.

Broadcast Search;

On the next screens set your preferences.

Scan Encrypted Channels                      On  
Select favourite network type                Satellite

D.Aerial    ○  
D.Cable    ○  
Satellite     ●  
Analogue    ○

When finished, highlight **Next** and press **OK** to start channel scan.

After the initial settings are completed TV will start to search for available broadcasts of the selected broadcast types.

While the search continues a message may appear, asking whether you want to sort channels according to the LCN(\*). Select **Yes** and press **OK** to confirm.

(\*) LCN is the Logical Channel Number system that organizes available broadcasts in accordance with a recognizable channel number sequence (if available).

After the channel scan has been completed the **Choose Region** menu may appear. Select the appropriate settings for your location using the directional buttons then press **OK**.

After all the available stations are stored, **Channels** menu will be displayed. You can edit the channel list according to your preferences using the **Edit** tab options or press the **Menu** button to quit and watch TV.

**Note:** Do not turn off the TV while initializing first time installation. Note that, some options may not be available depending on the country selection.

## 7 Connect your TV to the Internet

 
Connectivity feature allows you to connect your TV to the home network wired or wirelessly. You can use this networking system to connect to internet or to access photo, video and audio files that are stored on a Media server connected to the network and play/display them on the TV.

However, if your TV does not have Wireless USB dongle or doesn't support internal WLAN feature, you should use wired connection type. Add your TV to your home network by connecting it to the modem/router via an LAN cable (not supplied) as illustrated.


To use your TV with your wireless network, you may need a WLAN USB dongle. You should connect it to one of the USB inputs on the TV. If your TV supports internal WLAN feature you won't need a wireless LAN adaptor.

Press the **Menu** button to open the main TV menu. Select **Settings** by using the directional buttons, highlight **Network** and press **OK**. While **Network Type** is highlighted, press Left or Right buttons to select connection type. Wired connection will be established automatically. If wireless connection is selected, highlight **Scan Wireless Networks** and press **OK**. The TV will search for the available wireless networks and list them when finished. Select one and press the **OK** button to connect. If the wireless network is password-protected you should enter the correct password to access the network.

### Wireless Connection

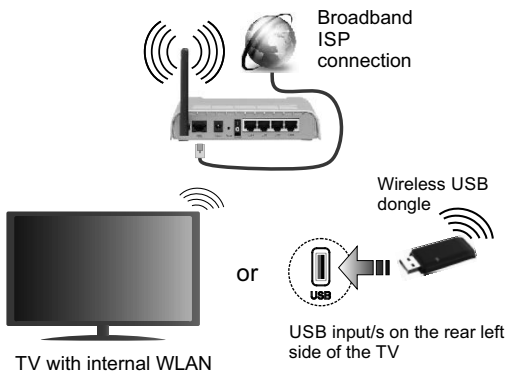

### Wired Connection

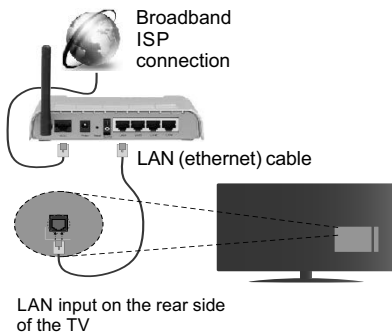 

## 8 E-Manual

This manual is not meant to be comprehensive and should not be taken as such. You can find detailed instructions for your TV's features in the E-Manual. To access the E-Manual, enter **Settings** menu, select **Manuals** and press **OK**. For quick access press **Menu** button and then **Info** button.

By using the directional buttons select a desired category. Every category includes different topics. Select a topic and press **OK** to read instructions. To close the E-Manual screen press the **Exit** or **Menu** button.

**Note:** The content of the E-Manual may vary according to the model.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!