

AKAI

Turntable with Built-In Speakers



ATT-09

INSTRUCTION MANUAL

INSTRUCTIUNI IMPORTANTE DE SIGURANTA

1. Cititi instructiunile – Toate instructiunile de siguranta si de operare trebuie citite inainte de utilizarea produsului.
2. Retain Instructions — The safety and operating instructions should be retained for future reference.
3. Heed Warnings — All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions — All operating and use instructions should be followed.
5. Water and Moisture — The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands — The appliance should be used only with a cart or stand that is recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting — The product should not be mounted to a wall or ceiling.
8. Heat — The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
9. Power Sources – This product should be operated only from the type of power source indicated on the rating label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company. For products intended to operate from battery power, or other sources, refer the operating instructions.
10. Power-Cord Protection — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to the cord in correspondence of plugs, convenience receptacles, and the point where they exit from the appliance.
11. Cleaning - The appliance should be cleaned only as recommended by the manufacturer. Clean by wiping with a cloth slightly damp with water. Avoid getting water inside the appliance.
12. Non-use Periods — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
13. Object and Liquid Entry—Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
14. Damage Requiring Service—The appliance should be serviced by qualified service personnel when:
 - A. The power-supply cord or the plug has been damaged; or
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
15. Servicing — The user should not attempt any service to the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.
16. Ventilation – Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is the manufacturer's instructions have been adhered to.
17. Attachments – do not use attachments not recommended by the product manufacturer as they may cause hazards.
18. Accessories – Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.
19. Lightning – For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.
20. Replacement Parts – When replacement parts are required, be sure the service technician has used

replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

20. Safety Check – Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

SPECIFICATIONS

GENERAL

Model:	ATT-E10
Dimensions:	420 (W) x 376(D) x 62(H)mm
Weight:	3.10Kg
Power supply:	Dual Voltage: DC 115V~60Hz/230V~50Hz, User Selectable
Power consumption:	5W
Standard test condition:	Ambient Temperature: 23 +/- 2 degC
Relative Humidity:	65% +/- 5%

NOTE: Measurements can be carried out between 5 degC to 35 degC and 45% to 85% relative humidity.

TURNTABLE SECTION:

Type	3-speed full manual
Motor	DC motor
Driving Method	Belt drive
Turntable Platter (Plastic)	198mm dia.
Speeds	33 1 / 3, 45, 78rpm
S/N Ratio	More than 50dB
Starting Time	Less than 1 sec with 33 1 / 3
Braking Time	Less than 1 sec. with 33 1 / 3
Time for Speed Change	Less than 1 sec. from 33 1 / 3 to 45 rpm Less than 1 sec. from 45 to 78 rpm

STONE ARM SECTION:

Type	Ceramic stereo cartridge with ruby stylus
Applicable Cartridge Weight	3.5~8.5g
Anti-skating Range	0-4g
Frequency Response	20Hz-20KHz
Channel Separation	More than 15dB
Recommended stylus pressure	4 to 6 grams
Channel Separation	More than 15dB
Channel balance (at 1kHz)	below 1 dB
Tracking Force adjustment Range	3~4g

FUNCTIONS:

1. Playback speed: 33.3, 45,78 RPM
2. Built-in Stereo Speaker
3. RCA audio out
4. Plays 7", 10" & 12" Records

MAIN TECHNICAL SPECIFICATIONS

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!