

# DENON<sup>®</sup>

## DRA-800H

NETWORK STEREO RECEIVER

# Owner's Manual

[Front panel](#)[Display](#)[Rear panel](#)[Remote](#)[Index](#)

<b>Accessories</b>	<b>8</b>	<b>Connecting a TV</b>	<b>32</b>
Inserting the batteries	9	Connection 1 : TV equipped with an HDMI connector and compatible with the ARC (Audio Return Channel)	33
Operating range of the remote control unit	9	Connection 2 : TV equipped with an HDMI connector and incompatible with the ARC (Audio Return Channel)	34
<b>Features</b>	<b>10</b>	<b>Connecting a playback device</b>	<b>35</b>
High quality sound	10	Connecting a set-top box (Satellite tuner/cable TV)	36
High performance	10	Connecting a DVD player or Blu-ray Disc player	37
Easy operation	14	Connecting a turntable	38
<b>Part names and functions</b>	<b>15</b>	<b>Connecting a USB memory device to the USB port</b>	<b>39</b>
Front panel	15	<b>Connecting a DAB/FM antenna</b>	<b>40</b>
Display	18	<b>Connecting to a home network (LAN)</b>	<b>41</b>
Rear panel	19	Wired LAN	41
Remote control unit	22	Wireless LAN	42
<b>Connections</b>		<b>Connecting an external control device</b>	<b>43</b>
<b>Speaker installation</b>	<b>26</b>	REMOTE CONTROL jack	43
<b>Connecting speakers</b>	<b>27</b>	<b>Connecting the power cord</b>	<b>44</b>
Before connecting speakers	27		
Connecting 2.1-channel speakers	29		
Second pair of speaker	30		
Bi-wiring connection	31		



## Playback

<b>Basic operation</b>	<b>46</b>
Turning the power on	46
Selecting the input source	46
Adjusting the volume	47
Turning off the sound temporarily (Muting)	47
Playback a DVD player/Blu-ray Disc player	47
<b>Playing a USB memory device</b>	<b>48</b>
Playing files stored on USB memory devices	49
<b>Listening to music on a Bluetooth device</b>	<b>52</b>
Playing music from Bluetooth device	53
Pairing with other Bluetooth devices	54
Reconnecting to this unit from a Bluetooth device	55

<b>Listening to FM/DAB broadcasts</b>	<b>56</b>
Listening to FM broadcasts	57
Tuning in by entering the frequency (Direct Tune)	59
RDS Search	59
PTY Search	60
TP Search	61
Radio text	61
Changing the tune mode (Tune Mode)	62
Tuning in to stations and presetting them automatically (Auto Preset)	62
Listening to DAB broadcasts	63
Auto scanning DAB broadcast stations (Auto Scan)	64
Checking the reception intensity of stations (Tuning Aid)	65
Setting the order of broadcasting station (Station Order)	65
Compressing the dynamic range (DRC)	66
Resetting the DAB settings (DAB Initialize)	66
Checking the current DAB version (DAB Version)	67
Presetting the current FM/DAB broadcast station (Preset Memory)	68
Listening to preset stations	69
Specify a name for the preset broadcast station (Preset Name)	69
Skipping preset broadcast stations (Preset Skip)	70
Cancelling Preset Skip	71



# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!