

[www.blackanddecker.eu](http://www.blackanddecker.eu)

**BXIR2401E-BXIR2411E**

BG

RO

RU

EL

PL

NL

PT

 
 
 
 
 
 
 
 
ES

IT

DE

FR

EN

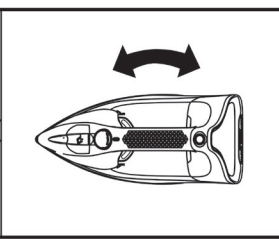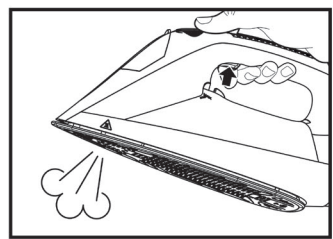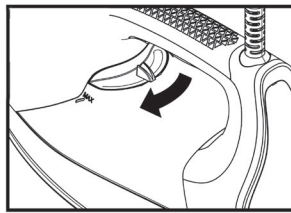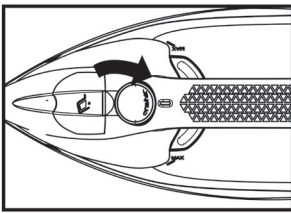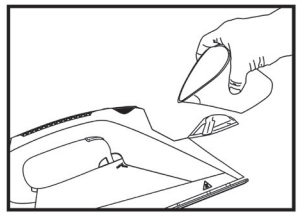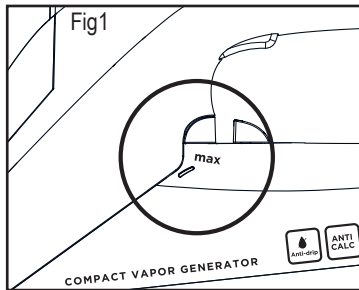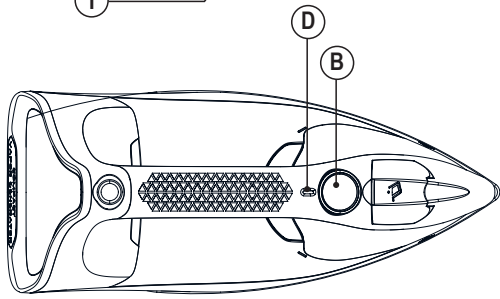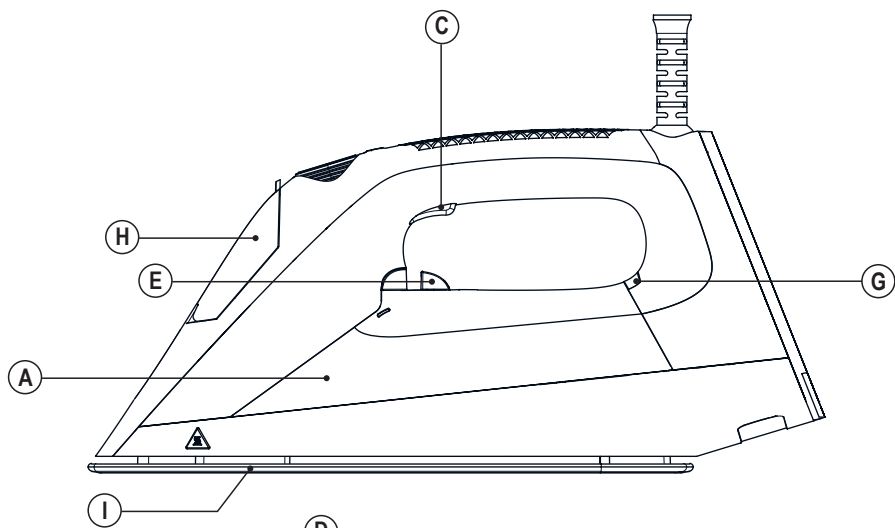

## Compact steam generator BXIR2401E-BXIR2411E


### Dear customer,

Many thanks for choosing to purchase a BLACK+DECKER brand product.

Thanks to its technology, design and operation and the fact that it exceeds the strictest quality standards, a fully satisfactory use and long product life can be assured.

Read these instructions carefully before switching on the appliance and keep them for future reference. Failure to follow and observe these instructions could lead to an accident.

## SAFETY ADVICE AND WARNINGS

- ◆ The appliance should be used and placed on a flat and stable surface.
  - ◆ When the appliance is placed on its support, make sure that the surface on which it is placed is stable.
  - ◆ Do not leave the appliance unattended while it is connected to the mains supply.
  - ◆ This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervisor or supervision concerning use of the appliance in a safe way and understand the hazards involved.
  - ◆ Cleaning and user maintenance must not be done by children -unless supervised.
  - ◆ Keep the appliance and its cord out of reach of children less than 8 years of age when it is energized or cooling down.
  - ◆ This appliance is not a toy. Children should be supervised to ensure that they do not play with the appliance.
  - ◆ Do not use the appliance if it has been dropped, if there are visible signs of damage or if it has a leak.
  - ◆ If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similar qualified persons in order to avoid a hazard.
  - ◆ This appliance is for household use only, not professional or industrial use.
  - ◆ The temperature of the accessible surfaces may be high when the appliance is in use.
-  This symbol indicates that the surface may heat up during use.
- ◆ Unplug the appliance from the mains before refilling the water tank.
  - ◆ Connect the appliance to an earthed socket rated at 16 amperes or more.
  - ◆ The appliance's plug must fit into the mains socket properly. Do not alter the plug. Do not use plug adaptors.
  - ◆ Do not use or store the appliance outdoors.
  - ◆ Do not leave the appliance out in the rain or exposed to moisture. If water gets into the appliance, this will increase the risk of electric shock.
  - ◆ Do not tug on the power cord. Never use the power cord to lift, carry or unplug the appliance.
  - ◆ Do not wrap the power cord around the appliance.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.**

**Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!