 


SHARP

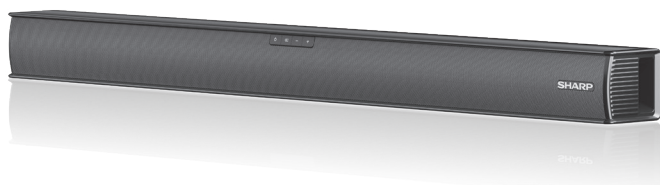

Quick start guide

HT-SBW182

2.1 Soundbar Home Theatre System

EN

DE

FR

IT

ES

PT

NL

PL

NO

SV

DK

SU

LT

LV

ET

CZ

SK

HU

RO

BG

HR

SR

SL

 
 
 
EL

RU

TR

UA

HE

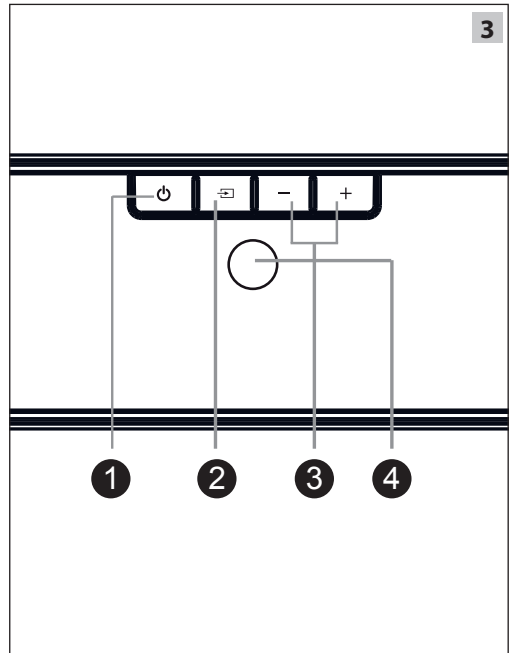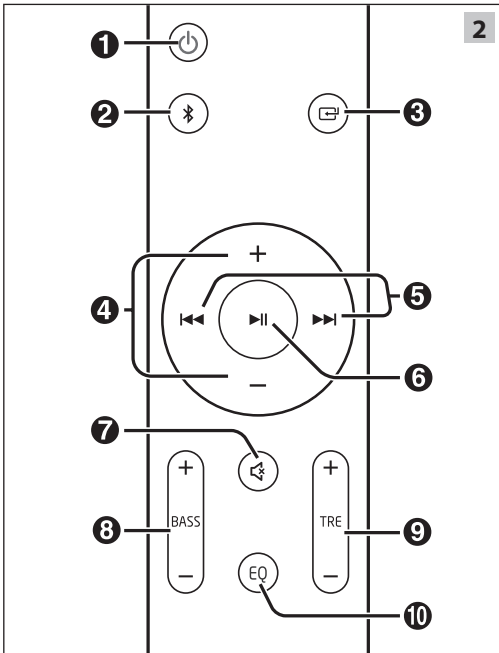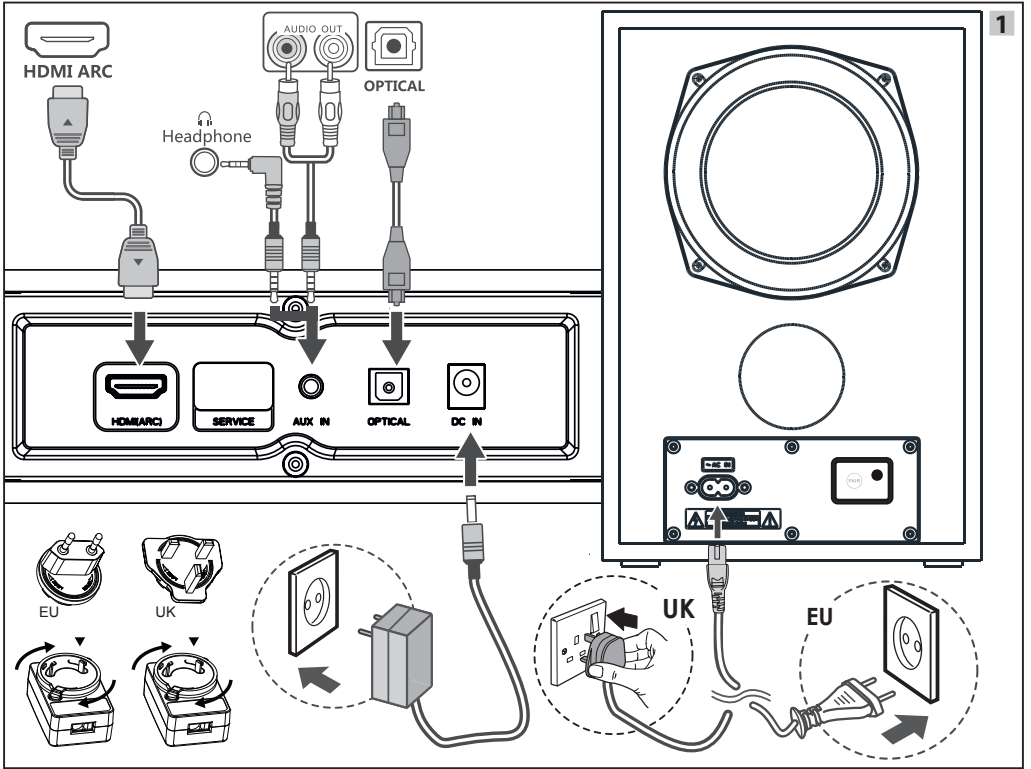





ENGLISH

Before using your product, read all safety instructions. For full instructions please refer to the user guide available to download from the website sharpconsumer.eu.


 





1) Getting started - initial set up

1. Use the inputs on the rear panel of the soundbar to connect external audio and video devices equipped with the corresponding outputs (Pic. 1). You will achieve the best sound quality by using the digital inputs OPTICAL and HDMI.

Caution! Turn all devices off and disconnect them from the power supply before starting any connection.

2. Connect power adapter to the DC IN socket of the unit and then connect it into a mains socket.
3. Use the power cord to connect the subwoofer to the mains socket.
4. Insert the batteries into the remote control.
5. Press the  button on the remote control to switch the main unit ON or OFF.
6. Press the  button on the unit repeatedly or press the  /  buttons on the remote control to select the desired mode.

2) Remote control

1.  – Switch the unit between ON and STANDBY mode.
2.  – Select the Bluetooth mode.
Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
3.  – Select the play function.
4. **VOL +/-** – Increase/decrease the volume level.
5.  /  – Skip to previous/next track in Bluetooth/USB mode.
6.  – Play/pause/resume playback in Bluetooth/USB mode.
7.  – (MUTE) Mute or resume the sound.
8. **BASS +/-** – Adjust bass level.
9. **TRE +/-** – Adjust treble level.
10. **EQ** – Select a preset sound mode.

3) Controls

1. **power button**
Switch the unit between ON and STANDBY mode.
2. **source button**
Select the source.
3. **+/- buttons**
Increase/decrease the volume level.
4. **Indicator light**
 - **Red:** In STANDBY mode.
 - **Blue:** In Bluetooth mode.
 - **Green:** In LINE IN mode.
 - **Yellow:** In Optical mode.
 - **Purple:** In HDMI ARC mode.

Pairing the Wireless Subwoofer with the Main Unit

Automatic pairing


The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash fast.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

NOTE:

- Do not press the Pair button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.



Manual pairing

1. Ensure that all the cables are well connected and the main unit is in Standby mode.
2. Press and hold the **Pair** button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press  the button on the main unit or on the remote control to switch the main unit on.
4. After the wireless connection succeeded, the Pair Indicator will light up.
5. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.

Bluetooth Operation

Pair Bluetooth-enabled Devices

The first time you connect your Bluetooth device to this player, you need to pair your device to this player.

1. Turn on the soundbar by pressing the standby button.
2. Press the  button on the unit repeatedly or  button on the remote control to select Bluetooth mode. Bluetooth mode is activated when the indicator light turns blue.
3. Enter the Bluetooth search mode on the device you wish to connect to the soundbar.
4. Select SHARP HT-SBW182 from the list
5. Enter password "0000", if required.
6. Begin playing music from the connected Bluetooth device.





DEUTSCH

Lesen Sie sich vor der Verwendung des Produkts alle Sicherheitshinweise durch. Vollständige Instruktionen finden Sie im Benutzerhandbuch, dass Sie sich auf unserer Webseite sharpconsumer.eu herunterladen können.








1) Erste Schritte - Ersteinrichtung

1. Nutzen Sie die Eingänge an der Rückseite der Soundbar, um externe Audio- und Video-Geräte, die mit den entsprechenden Ausgängen ausgerüstet sind, anzuschließen (Abb. 1). Die beste Tonqualität erreichen Sie mit den digitalen Eingängen OPTICAL und HDMI.

Vorsicht! Schalten Sie alle Geräte aus und trennen Sie sie von der Stromversorgung, bevor Sie irgendeine Verbindung herstellen.

2. Schließen Sie den Stromadapter an den DC-IN-Anschluss des Geräts und anschließend an eine Netzsteckdose an.
3. Schließen Sie den Subwoofer mit dem Netzkabel an die Steckdose an.
4. Legen Sie die Batterie in die Fernbedienung ein.
5. Drücken Sie die  Taste auf der Fernbedienung, um die Haupteinheit ein- oder auszuschalten (ON/OFF).
6. Drücken Sie mehrmals die  Taste auf der Einheit oder die Tasten  /  auf der Fernbedienung, um den gewünschten Modus auszuwählen.

2) Fernbedienung

1.  – zwischen ON (EIN) und STANDBY-Modus wechseln.
2.  – wählen Sie den Bluetooth-Modus.
Drücken und halten, um die Funktion Koppeln im Bluetooth-Modus zu aktivieren oder um das bestehende gekoppelte Bluetooth-Gerät zu trennen.
3.  – wählen Sie die Play-Funktion (Wiedergabe).
4. **VOL+/VOL-** – Lautstärke regulieren.
5.  /  – im Bluetooth-/USB-Modus zum vorherigen/nächsten Track springen.
6.  – Wiedergabe im Bluetooth-/USB-Modus abspielen/pausieren/weiter abspielen.
7.  – (STUMM) Stumm schalten oder Ton erneut einschalten.
8. **BASS +/-** – Basspegel einstellen.
9. **TRE +/-** – Höhenpegel einstellen.
10. **EQ** – Wählen Sie einen voreingestellten Sound-Modus.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!