

SHARP



Quick start guide

HT-SBW800

5.1.2 Dolby Atmos Home Theatre System with wireless subwoofer

EN

DE

FR

IT

ES

PT

NL

PL

NO

SV

DK

SU

LT

LV

ET

CZ

SK

HU

RO

BG

HR

SR

SL




EL

RU

TR

UA

HE

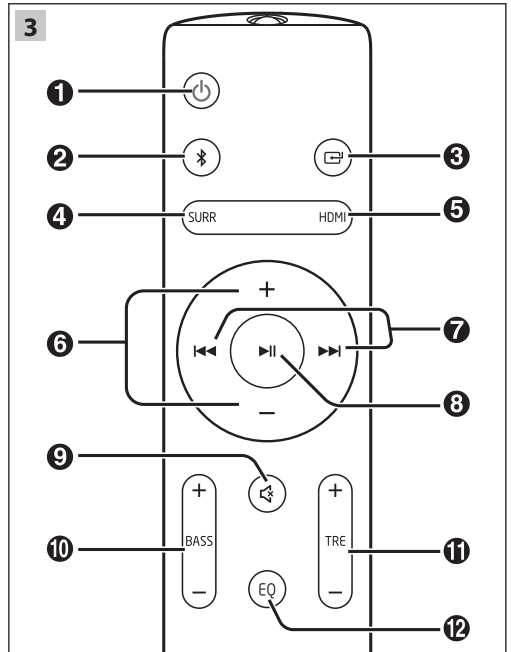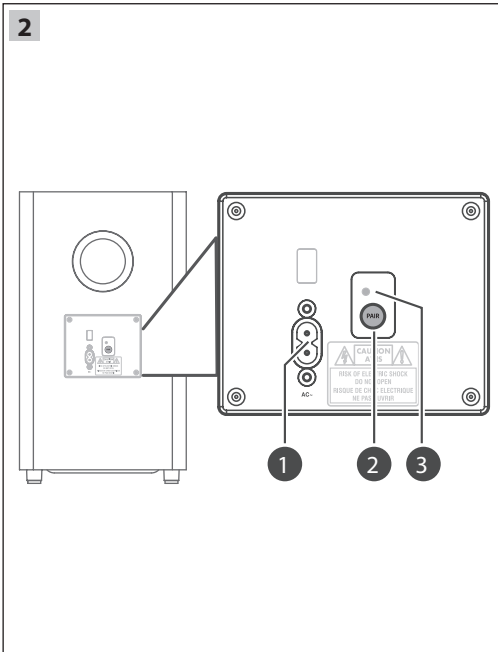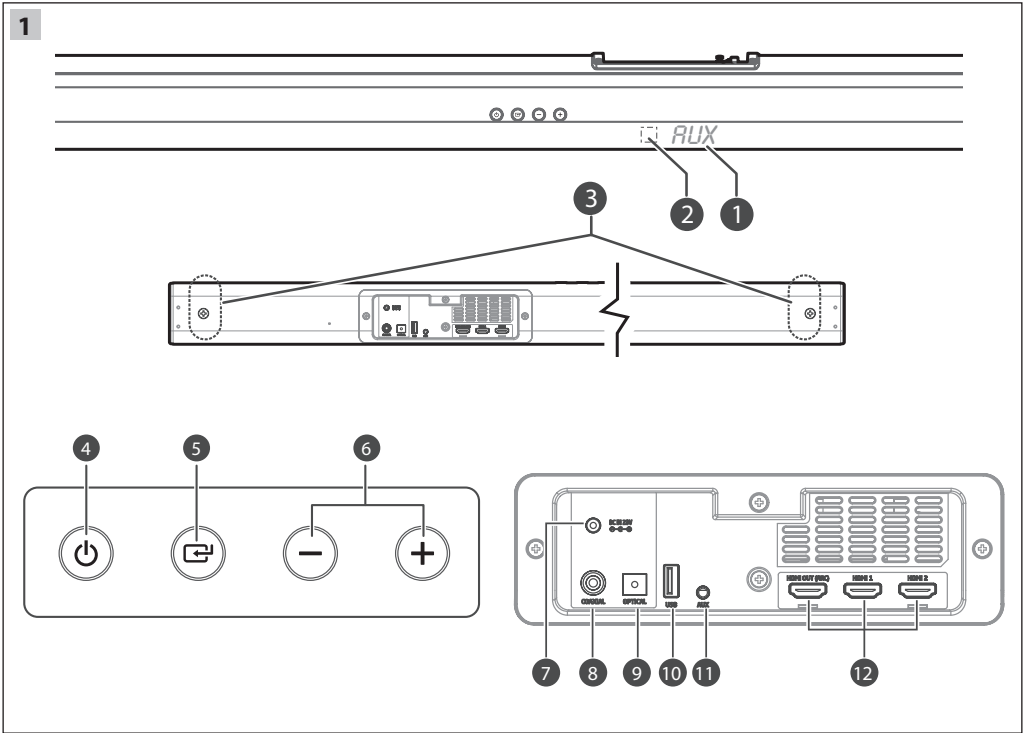

ENGLISH

Before using your product, read all safety instructions. For full instructions please refer to the user guide available to download from the website sharpconsumer.eu.

Getting started - initial set up

1. Use the inputs on the rear panel of the soundbar to connect external audio and video devices equipped with the corresponding outputs.

Caution! Turn all devices off and disconnect them from the power supply before starting any connection.

2. Connect power cord to the power adapter, then connect power adapter to the DC IN socket of the unit and as last step connect power adapter into a mains socket.
3. Connect the mains cable to the **AC~** Socket of the Subwoofer and then into a mains socket.
4. Insert the batteries supplied into the Remote control. Press the **⏻** button on the remote control to switch the main unit ON or OFF.
5. Press the **⏻** button repeatedly on the unit or press the **⏻** button on the remote control to select the desired mode.

1 Main Unit

1. **Display Window** – Show the current status.
2. **Remote Control Sensor** – Receive signal from the remote control.
3. **Wall bracket screws**
4. **⏻ (ON/OFF) button** – Switch the unit between ON and Standby mode.
5. **⏻ (SOURCE) button** – Select the play function.
6. **VOL+/VOL- buttons** – Increase/decrease the volume level.
7. **DC IN 23V Socket**
8. **COAXIAL Socket**
9. **OPTICAL Socket**
10. **USB Socket** – Insert the USB device to play music.
11. **AUX Socket** – Connect to an external audio device.
12. **HDMI (1/2/ARC) Sockets** – Connect to a TV via HDMI cable.

2 Wireless Subwoofer

1. **AC~ Socket** – Connect to power.
2. **PAIR button** – Press activate the pairing function between the main unit and the subwoofer.
3. **PAIR Indicator** – Light up solidly when the pairing succeed.

3 Remote Control

1. **⏻** – Switch the unit between ON and STANDBY mode.
2. **⌘** – Select the Bluetooth mode. Press and hold to activate the pairing function in Bluetooth mode or disconnect the existing paired Bluetooth device.
3. **⏻** – Select the play function.
4. **SURR** – Turn the surround ON/OFF.
5. **HDMI** – Select the HDMI 1/2/ARC mode.
6. **VOL +/-** – Increase/decrease the volume level.
7. **⏮/⏭** – Skip to previous/next track in Bluetooth/USB mode.
8. **⏮** – Play/pause/resume playback in Bluetooth/USB mode.
9. **🔇** – (MUTE) Mute or resume the sound.
10. **BASS +/-** – Adjust bass level.
11. **TRE +/-** – Adjust treble level.
12. **EQ** – Select a preset sound mode.

For using Dolby Atmos®

Dolby Atmos® is available only in HDMI mode.

1. To use Dolby Atmos® in HDMI 1 / HDMI 2 / HDMI ARC mode, your TV has to support Dolby Atmos®.
2. Make sure that "No Encoding" is selected for bitstream in the audio output of the connected external device (e.g. Blu-ray DVD player, TV etc.).
3. While entering Dolby Atmos / Dolby Digital / PCM format, the soundbar will show DOLBY ATMOS / DOLBY AUDIO / PCM AUDIO.

4. While the soundbar is using Dolby Atmos audio, you can only adjust the bass level of the subwoofer.

NOTE:

- The full Dolby Atmos experience is only available when the Soundbar is connected to the source via a HDMI 2.0 cable.

Pairing the Wireless Subwoofer with the Main Unit

Automatic pairing

The subwoofer and soundbar will automatically pair when both units are plugged into the mains sockets and turned on. No cable is needed for connecting the two units.

- When the subwoofer is pairing with the main unit, the Pair Indicator will flash fast.
- When the subwoofer is paired with the main unit, the Pair Indicator will light up.

NOTE:

- Do not press the Pair button on the rear of the subwoofer, except for manual pairing.
- If the automatic pairing fails, pair the subwoofer with the main unit manually.

Manual pairing

1. Ensure that all the cables are well connected and the main unit is in Standby mode.
2. Press and hold the **Pair** button on the rear of the subwoofer for a few seconds. The subwoofer will enter the pairing mode and the Pair Indicator will blink quickly.
3. Press **⏻** the button on the main unit or on the remote control to switch the main unit on.
4. After the wireless connection succeeded, the Pair Indicator will light up.
5. If the Pair indicator blinks, the wireless connection has failed. Unplug the cable of the subwoofer and then reconnect the main cable after 4 minutes. Repeat step 1 ~ 4.

Bluetooth Operation

Pair Bluetooth-enabled Devices

The first time you connect your bluetooth device to this player, you need to pair your device to this player.

1. During ON mode, press the **⏻** button repeatedly on the unit or the **⌘** button on the remote control to select Bluetooth mode. "**NO BT**" will show on the display if the unit is not paired to any Bluetooth device.
2. Activate your Bluetooth device and select the search mode. "**HT-SBW800**" will appear on your Bluetooth device list.
 - If you cannot find the unit, press and hold the **⌘** button on the remote control to be searchable. The display will show "**PAIR**" and you will hear "**Pairing**" from the unit.
3. Select "**HT-SBW800**" in the pairing list. After successful pairing, you will hear "Paired" from the unit, and the display panel shows "**BT**".
4. Play music from the connected Bluetooth device.

USB Operation

1. Insert the USB device.
2. Press the **⏻** button repeatedly on the unit or press the **⏻** button on the remote control to select **USB** mode.
3. During playback:
 - To pause or resume play, press the **⏮** button on the remote control or on the unit.
 - To skip to the previous/next file, press the **⏮/⏭** buttons on the remote control.

DEUTSCH

Lesen Sie sich vor der Verwendung des Produkts alle Sicherheitshinweise durch. Vollständige Instruktionen finden Sie im Benutzerhandbuch, dass Sie sich auf

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!