

LAMAX

E L E C T R O N I C S

EN – USER MANUAL

LAMAX S7 Dual



CONTENT

INTRODUCTION	2
FEATURES AND FUNCTIONS	2
PACK CONTENTS.....	2
PRODUCT LAYOUT.....	3
PRODUCT INSTALLATION	3
QUICK FUNCTIONS.....	3
ICON KEY	4
OPERATING THE CAMERA.....	4
DASHCAM SETTINGS.....	6
CAR CAMERA PARAMETERS	9

INTRODUCTION

Thank you for purchasing the LAMAX S7 Dual car camera. You are now the proud owner of a reliable travel companion on your car journeys. Throughout most of the EU you can now capture valuable footage to protect yourself and your property.

FEATURES AND FUNCTIONS


- Full HD video 1920×1080 – front camera
- HD video 1280×720 – rear camera
- G-Sensor
- Loop Recording
- Motion Sensor
- Parking Mode
- Parking Camera

PACK CONTENTS

- LAMAX S7 Dual dashcam
- Rear camera
- GPS module
- Cable to connect front and rear camera
- USB power cable to cigarette lighter
- Rubber rearview mirror mounts
- Cable clips
- Manual
- MicroSD-USB adapter

PRODUCT LAYOUT

1. ON/OFF
2. Mode
3. Menu
4. Left arrow
5. Right arrow
6. OK
7. Power connector (mini USB)
8. Rear camera connector
9. Micro SDHC card slot
10. GPS module connector

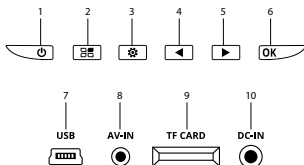

PRODUCT INSTALLATION

- 1) Guide the power cable to the cigarette lighter around the windscreen so as to ensure it does not obstruct the driver's view and then fix it securely in place with the cable clips. Connect one end of the cable to the front camera and the other end to the car charger. Attach the front camera to the rearview mirror using the rubber mounts. Adjust the camera so it is pointing straight ahead in the car.
- 2) Install the rear camera on the rear windscreen using the 3M adhesive pads.
- 3) Connect the front and rear cameras using the connecting cable. Guide the cable along the chassis of the car so as to be unobtrusive and to avoid possible damage when operating the vehicle. To use the parking camera feature, connect the red cable from the rear camera's connecting cable to the reversing lights.
- 4) When using the device for the first time, the battery may be low. If you cannot switch on the device due to low power, manually connect the external power cable to charge the battery.
- 5) Use only a high-quality micro SDHC card of class 10 or higher. For optimal recording use, we recommend cards with a capacity of at least 8 GB up to a maximum of 32 GB. If this is the first use of the card, we recommend formatting it in a PC and then in the camera.

QUICK FUNCTIONS

- 1) **Screen on/off** – tap ON/OFF button
- 2) **Manual video lock/unlock** – tap MODE button whilst recording to lock current video
- 3) **Toggle display preview between front and rear camera** – tap LEFT arrow
- 4) **Turn audio recording on/off** – long press LEFT arrow
- 5) **Take a quick photo** – whilst recording tap RIGHT arrow
- 6) **Activate parking mode** – long press RIGHT arrow

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!