

GB DESCRIPTION

1. Transparent lid
2. Start button
3. Housing

CZ POPIS

1. Průhledné víko
2. Ovládací tlačítko
3. Těleso spotřebiče

PL OPIS

1. Przezroczysta pokrywa
2. Przycisk sterujący
3. Obudowa

UA ОПИС

1. Прозора кришка
2. Кнопка керування
3. Корпус

EST KIRJELDUS

1. Läbipaistev kaas
2. Juhtimisnupp
3. Korpus

LT APRAŠYMAS

1. Skaidrus dangtelis
2. Valdymo mygtukas
3. Korpusas

KZ СИПАТТАМА

1. Мөлдір қақпақ
2. Басқару ноқаты
3. Тұлға

CR СИПАТТАМА

1. Prozirni poklopac
2. Upravljačka tipka
3. Tijelo

RUS УСТРОЙСТВО ИЗДЕЛИЯ

1. Прозрачная крышка
2. Кнопка управления
3. Корпус

BG ОПИСАНИЕ

1. Прозрачен капак
2. Бутон на управление
3. Корпус

RO DESCRIERE

1. Capac transparent
2. Buton de comanda
3. Corp

SCG ОПИС

1. Провидан поклопац
2. Дугме управљања
3. Кућиште

LV APRAKSTS

 
1. Caurspīdīgais vāciņš
2. Vadības poga
3. Korpus

H LEÍRÁS


1. Átlátszó fedél
2. Vezérlőgomb
3. Készülékház

D GERÄTEBESCHREIBUNG


1. Transparenter Deckel
2. Knopfschalter
3. Gehäuse

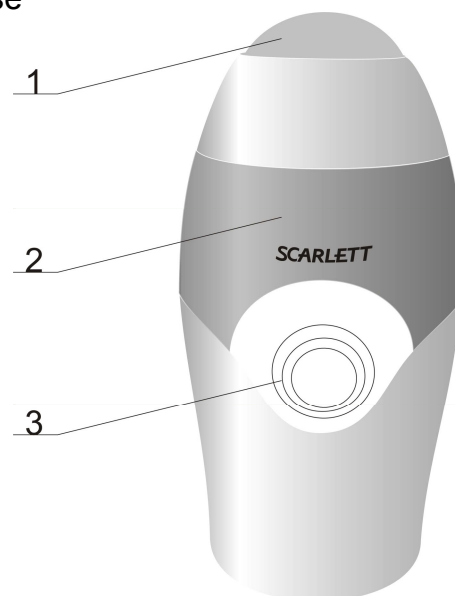


220-240 V / ~ 50 Hz	150 W	0.7 / 0.8 kg	210 107 107 mm
------------------------	-------	--------------	---

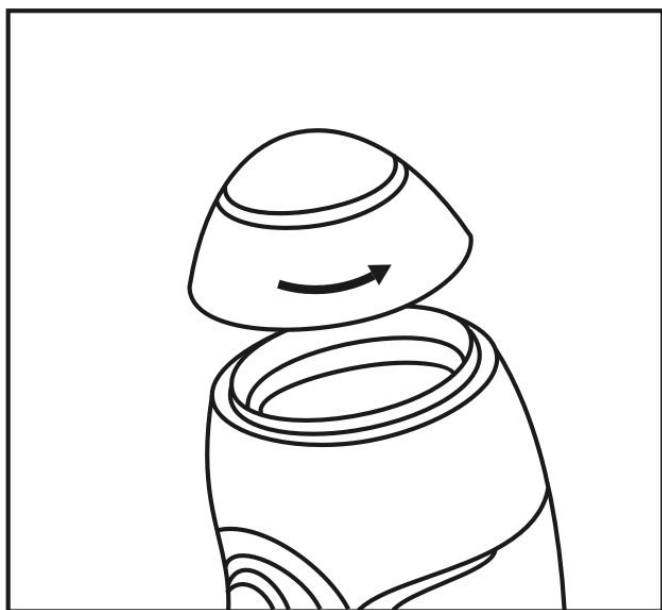 


1

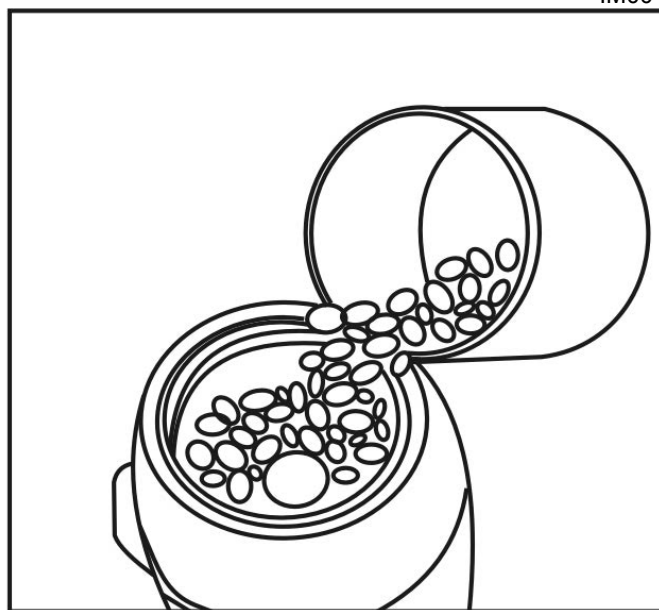 


2

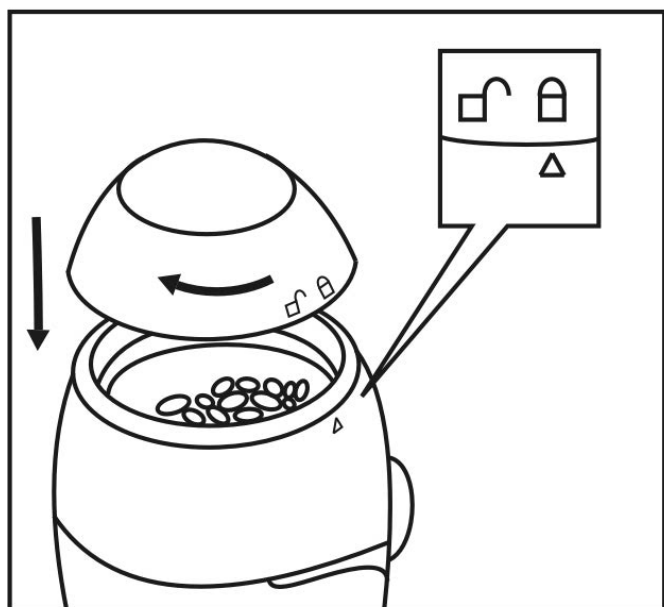 


3

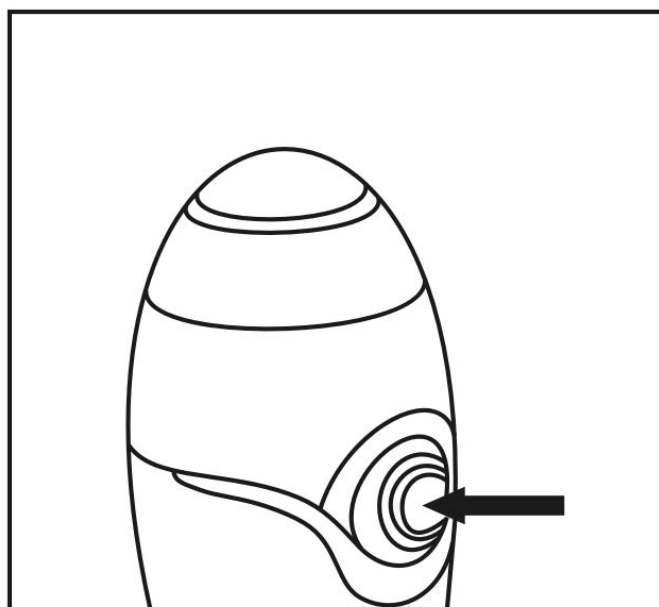 

4

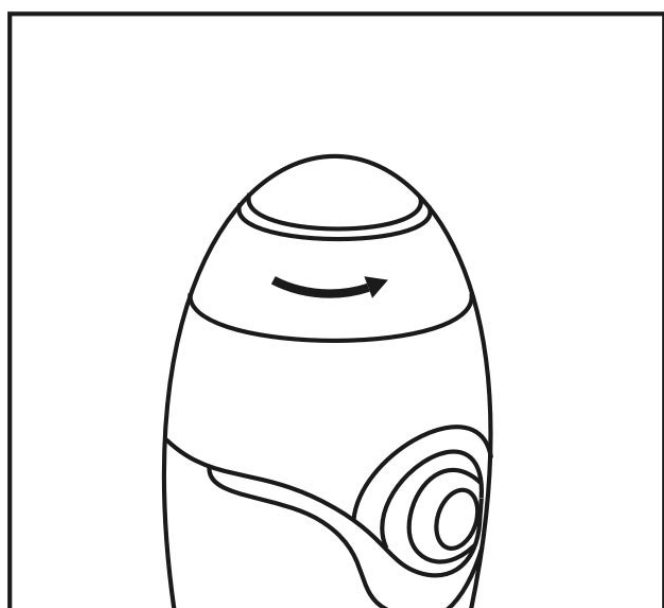 

5

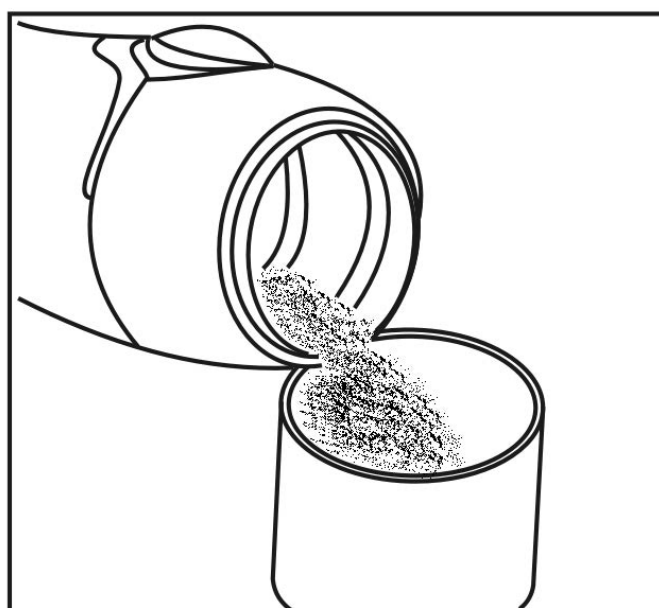 

6

GB INSTRUCTION MANUAL

IMPORTANT SAFEGUARDS

- Before the first connecting of the appliance check that voltage indicated on the rating label corresponds to the mains voltage in your home.
- For home use only. Do not use for industrial purposes. Do not use the appliance for any other purposes than described in this instruction manual.
- Do not use outdoors.
- **Do not disassemble the appliance when it is plugged to the power supply.** Always unplug the appliance from the power supply before cleaning and when not in use.
- To prevent risk of electric shock and fire, do not immerse the appliance in water or in any other liquids. If it happened, unplug it immediately and check in service center.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliances by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not leave the appliance switched on when not in use.
- Do not use other attachments than those supplied.
- Do not operate after malfunction or cord damage.
- Do not attempt to repair, adjust or replace parts in the appliance. Check and repair the malfunctioning appliance in the nearest service center only.
- Keep the cord away from sharp edges and hot surfaces.
- Do not pull, twist, or wrap the power cord around any subjects.
- Do not place the appliance near gas or electric oven or stand at heated surface.
- Avoid contacting with moving parts.
- The blade is very sharp, so handle it with care.

- Check hopper for presence of foreign objects before using.
- **Do not run coffee grinder continuously longer than 30 seconds. Switch off and let it rest for at least 1 minute to cool down the motor.**
- Switch off and unplug the appliance after each use. Make sure the motor stops completely before opening the lid.

INSTRUCTIONS

- This appliance is for grind coffee beans only.
- Open the transparent lid, turning it counterclockwise (fig. 1).
- Load the coffee beans in the coffee bean container (fig. 2).
- Close the cover, and turn it until the mark on cover fits the mark on housing (fig. 3).
- Fully unwind the cord and plug to the power supply.
- To grind coffee, press the start button and retain it **(not longer than 30 sec.)** – fig. 4.
- Once the desired consistency of grinding has been reached, switch off and unplug grinder, accurately open the transparent lid and take ground coffee out (fig. 5, 6).

SHORT CORD INSTRUCTIONS

- A short power supply cord is provided to reduce the risk of personal injury resulting from becoming entangled in or tripping over a longer cord.

CLEANING AND CARE

- Always unplug the unit before cleaning.
- The grinder should be cleaned after each using with a soft, damp cloth.

STORAGE

- Complete all requirements of Chapter CLEANING AND CARE.
- The cord can be wrapped around the base area for storage.
- Keep the appliance in a dry cool place.

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!