

- EN The manufacturer reserves the right to make changes to the product, release firmware updates, and update this manual at any time. Visit www.segway.com or check the App to download the latest user materials. You must install the App, activate your KickScooter, and obtain the latest updates and safety instructions.
- FR Le fabricant se réserve le droit d'apporter des modifications au produit, de publier des mises à jour du microprogramme et de réviser ce manuel à tout moment. Visitez www.segway.com ou consultez l'application pour télécharger les derniers contenus utilisateur. Vous devez installer l'application, activer votre KickScooter et obtenir les dernières mises à jour et consignes de sécurité.
- DE Der Hersteller behält sich jederzeit das Recht von Produktänderungen, der Herausgabe von Firmware-Updates und der Aktualisierung dieses Handbuchs vor. Besuchen Sie www.segway.com oder schauen Sie auf der App nach, um sich die neuesten Benutzermaterialien herunterzuladen. Sie müssen die App installieren und Ihren KickScooter aktivieren, um die neuesten Updates und Sicherheitshinweise zu erhalten.
- IT Il produttore si riserva il diritto di apportare modifiche al prodotto, aggiornare gli aggiornamenti del firmware e aggiornare questo manuale in qualsiasi momento. Visitare www.segway.com o controllare l'applicazione per scaricare l'ultimo manuale utente e materiali. È necessario installare l'App, attivare il proprio KickScooter e ottenere gli ultimi aggiornamenti e le istruzioni di sicurezza.
- ES El fabricante se reserva el derecho a realizar cambios en el producto, actualizaciones del firmware y modificaciones de este manual en cualquier momento. Visita www.segway.com o revisa la app para descargar los materiales de usuario más recientes. Debes instalar la app, activar tu KickScooter y obtener las actualizaciones e instrucciones de seguridad más recientes.
- PL Producent zastrzega sobie prawo do wprowadzania zmian w produkcie, aktualizacji oprogramowania i aktualizacji tej instrukcji obsługi w dowolnym momencie. Odwiedź stronę www.segway.com lub sprawdź aplikację, aby pobrać najnowsze materiały użytkownika. Musisz zainstalować aplikację, aktywować swojego KickScootera i uzyskać najnowsze aktualizacje i zasady bezpieczeństwa.

Ninebot KickScooter


- EN Product Manual
- FR Manuel de Produit
- DE Produkt-Handbuch
- IT Manuale del prodotto
- ES Manual del producto
- PL Instrukcja produktu



CE.00.0095.0A-A1



Diagram

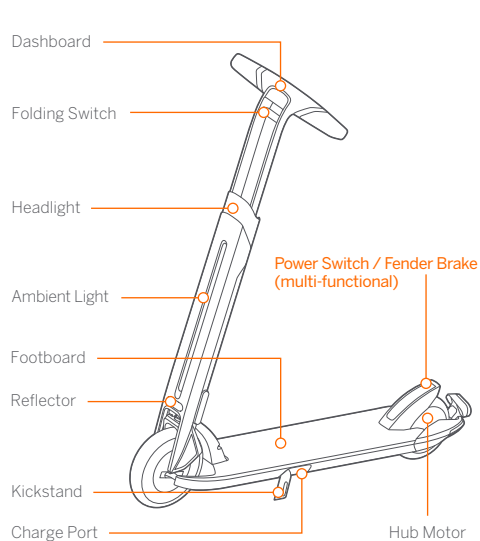

Power Switch / Fender Brake:

- Step on the Power Switch / Fender Brake to **power on**.
- When power-on and speed is less than 1.9 mph (3 km/h), step on to **turn on/off the headlight and rear light**.
- When power-on, step on twice to **switch speed modes**.
- Step on the Power Switch / Fender Brake 3 secs to **power off**.

The rear fender can be used as a brake when riding. It is recommended to use together with the electronic brake.


Ambient Light:

The color of ambient light can be customized via the Segway-Ninebot App.


Electric Honk:

Press the electronic throttle and electronic brake together to honk.

Original instructions

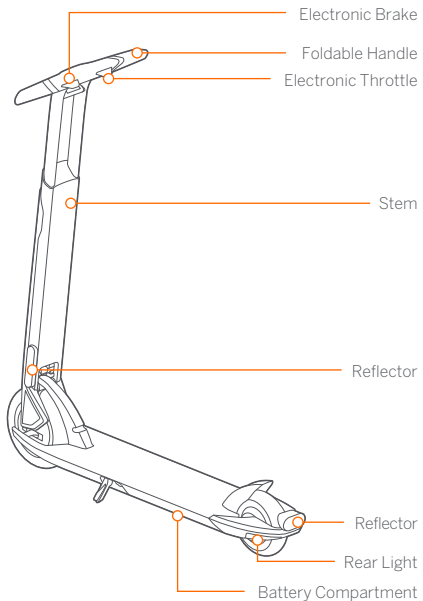

Dashboard

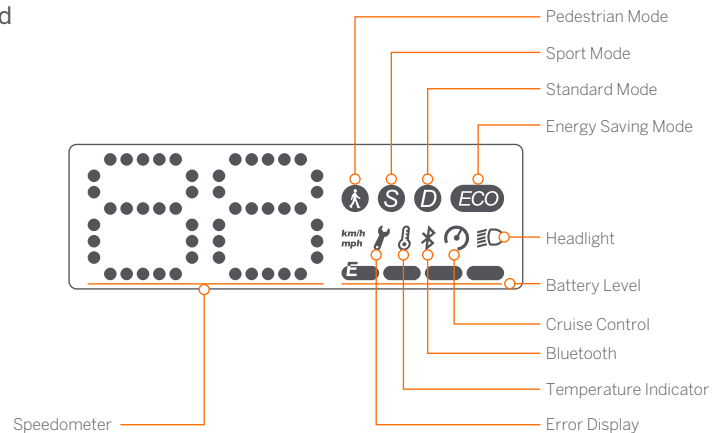

Speedometer: Display the current speed of the KickScooter, as well as error codes.

Speed Modes: Step on the Power Switch / Fender Brake twice to switch between the modes.

ECO: Energy saving mode [Max speed is 6.2 mph (10 km/h) with smooth acceleration, suitable for beginners];

D: Standard mode [Max speed is 9.3 mph (15 km/h)];

S: Sport mode [Max speed is 12.4 mph (20 km/h), powerful, only recommended for skilled riders].

Pedestrian Mode: Max. speed is 3.7 mph (6 km/h) with flashing rear light.

* How to enable in App: Tap the slide menu > **Settings** > **Pedestrian Mode**.

Error Display: The lit wrench icon indicates the KickScooter error.

Cruise Control: Enabled when riding at a constant speed for 5 secs. Exit the mode by braking.

* This feature is off by default. Please turn it on via the Segway-Ninebot App.

Temperature Indicator: The thermometer icon blinking indicates that the battery temperature has reached 122°F (50°C) or is below 32°F (0°C), or motor temperature has reached 194°F (90°C).

* At this point, the vehicle cannot accelerate normally and may not be charged.

Bluetooth: A solid Bluetooth icon indicates that the vehicle is connected to a mobile device.

Battery Level: The total battery level equals to 4 bars.

* The battery power is very low when the first battery bar is red. Please charge your KickScooter immediately.

Specifications

	Item	Parameter
Product	Name	Ninebot KickScooter
	Model	Air T15E
	Net Weight	Approx. 23.2 lbs (10.5 kg)
Dimensions	Length x Width x Height	Approx. 40.1 × 15.7 × 36.9 in (1019 × 398 × 936 mm)
	Folded: Length x Width x Height	Approx. 40.5 × 8.0 × 8.8 in (1028 × 202 × 223 mm)
Rider	Payload	66.1–220.5 lbs (30.0–100.0 kg)
	Recommended Age	14–60 years
	Required Height	4'3"–6'6" (130–200 cm)
Machine	Max. Speed	Approx. 12.4 mph (20 km/h)
	Typical Range ^[1]	Approx. 7.5 miles (12 km)
	Max. Slope	Approx. 15%
	Traversable Terrain	Asphalt/flat pavement
	Operating Temperature	14–104°F (-10–40°C)
	Storage Temperature	14–122°F (-10–50°C)
	IP Rating	IPX4
Battery	Duration of Charging	Approx. 4 h
	Nominal Voltage	36 V ---
	Max. Charging Voltage	42 V ---
	Charging Temperature	32–104°F (0–40°C)
	Nominal Capacity	4650 mAh
	Nominal Energy	167 Wh
Motor	Battery Management System	Over-heating, short circuit, over-current, over-discharge, and over-charge protection
	Nominal Power	0.25 kW, 250 W
Charger	Output Power	0.071 kW, 71 W
	Input Voltage	100–240 V \sim
	Output Voltage	42 V ---
	Output Current	1.7 A
Features	Brake Light	LED rear light
	Riding Modes	Pedestrian mode, Energy saving mode, Standard mode and Sport mode
Tire	Front Tire	Hollow tires. Material: NR + SBR + SILICA+C.B. Size: 6 inches. Without nozzle.
	Rear Tire	Hollow tires. Material: NR + SBR + SILICA+C.B. Size: 7.5 inches. Without nozzle.

[1] Typical Range: tested while riding under full power, 165.3 lbs (75.0 kg) load, 77°F (25°C), 7.5 mph (12 km/h) on average on pavement.

* Some of the factors that affect range include: speed, number of starts and stops, ambient temperature, etc.

Certifications

Important WEEE information



WEEE Disposal and Recycling Information Correct Disposal of this product. This marking indicates that this product should not be disposal with other household wastes throughout the EU.

To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsible to promote the sustainable reuse of materials resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

Battery recycling information for the European Union



Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC and amendment 2013/56/EU concerning batteries and accumulators and waste batteries and accumulators. The Directive determines the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC and amendment 2013/56/EU, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may also include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury, and Cd for cadmium). Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances.

Before placing electrical and electronic equipment (EEE) in the waste collection stream or in waste collection facilities, the end user of equipment containing batteries and/or accumulators must remove those batteries and accumulators for separate collection.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!