




Russell Hobbs



- GB
- DE
- FR
- NL
- IT
- ES
- PT
- DK
- SE
- NO
- FI
- RU
- CZ
- SK
- PL
- HR
- SI
- GR
- HU
- TR
- RO
- BG
- AE

26095-56

 www.russellhobbs.com

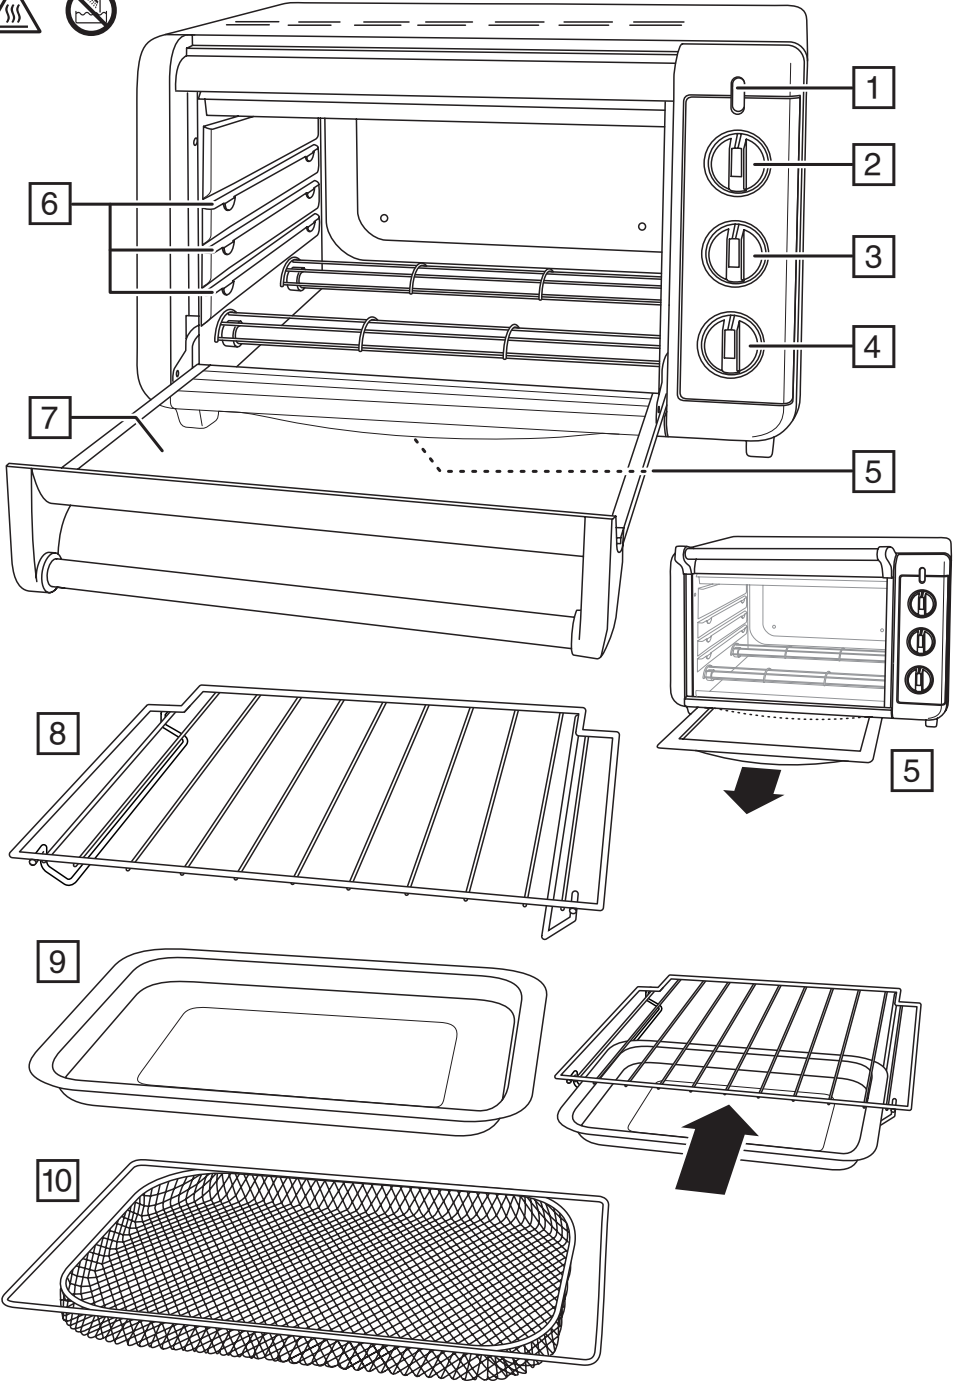

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.



IMPORTANT SAFEGUARDS

Follow basic safety precautions, including:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved.

Children shall not play with the appliance.

Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised.

Keep the appliance and cable out of reach of children under 8.

Don't connect the appliance via a timer or remote control system.

Food can burn. Don't use the appliance near or below curtains or other combustible materials and watch it while in use.

Do not leave the appliance unattended while it is in use.

 The surfaces of the appliance will get hot. Residual heat will keep the surfaces hot after use.


Remove, empty and clean the crumb tray regularly. Do not use without the crumb tray fitted.

If the cable is damaged, return the appliance, to avoid hazard.

Don't use the appliance for any purpose other than those described in these instructions.

In the event of food flare up, keep the door closed and unplug the appliance.

HOUSEHOLD USE ONLY

-  Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- Do not use outdoors.
- Always use the appliance's handles or use oven gloves as some parts will be hot.
- Route the cable so it doesn't overhang, and can't be tripped over or caught.
- Unplug the appliance when not in use and always allow it to completely cool before cleaning and storing.
- Sit the appliance on a stable, level, heat-resistant surface.
- Do not place any of the following materials in the oven: paper, cardboard, plastic, or anything similar.
- NEVER use the open glass door as a shelf to rest food on as this can cause the oven to tip over.

PARTS

- | | |
|---|-----------------------|
| 1. Light | 6. Shelf supports |
| 2. Temperature/Cooking function control | 7. Glass door |
| 3. Timer 1 - Warm/Bake/Grill/Air fry | 8. Wire shelf |
| 4. Timer 2 - toast | 9. Bake pan/drip tray |
| 5. Crumb tray | 10. Air fry mesh rack |

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!