


EN STICK BLENDER	2	LV KĀTVEIDA BLENDERIS	34	TR EL BLENDERİ	65
HR ŠTAPNI MIKSER	6	LT RANKINIS TRINTUVAS	37	UK РУЧНИЙ БЛЕНДЕР	70
CS TYČOVÝ MIXÉR	9	NO STAVMIKSER	40	AR خلاط	76
DA STAVBLENDER	12	PL BLENDER RĘCZNY	43		
ET SAUMIKSER	15	RO STICK BLENDER	46		
FI VARSISEKOITIN	18	RU ПОГРУЖНОЙ БЛЕНДЕР	49		
FR MIXEUR PLONGEANT	21	SR ШТАПНИ БЛЕНДЕР	53		
DE MIXSTAB	25	SK TYČOVÝ MIXÉR	56		
HU BOTMIXER	28	SL PALIČNI MEŠALNIK	59		
IT FRULLATORE A IMMERSIONE	31	SV STAVMIXER	62		

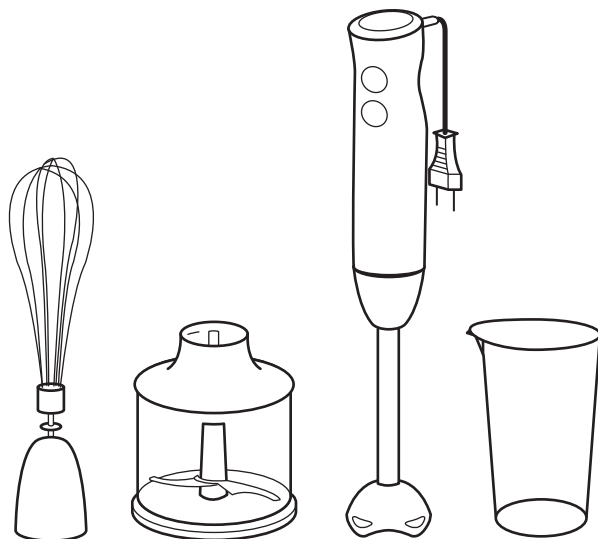


1. ⚠ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

- This appliance is designed for mixing food.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Cleaning and user maintenance shall not be made by children without supervision. Children shall not play with the appliance.
- The appliance can only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always switch off and disconnect the appliance from the mains when left unattended and before assembling, disassembling, cleaning, changing accessories or approaching parts that move during use.
- **WARNING:** The blades and inserts are very sharp. Care shall be taken when assembling, disassembling after use or during cleaning.
- The appliance cannot be used for chopping ice or blending hard and dry substance, such as nut, candy; except with specific accessories provided with the appliance.

- Do not immerse the blender handle, cord or plug in water or any other liquid.
- Do not let the blender run for more than 30 seconds at a time using heavy loads. Allow to cool down before restarting.
- Do not use this appliance to stir paint. It may cause an explosion.
- Do not let the power cord touch or hang over hot surfaces.
- Use only accessories or parts recommended for this appliance.
- This appliance is intended for domestic use only. It must not be used for other purposes.

2. GENERAL OVERVIEW

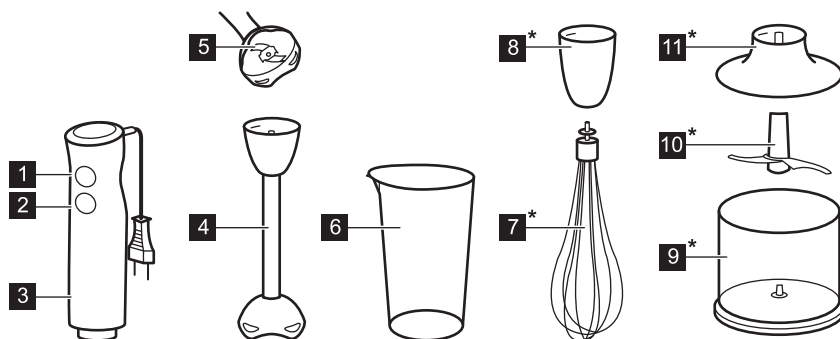

- 1** Standard speed button
- 2** Turbo speed button
- 3** Blender handle
- 4** Blending arm
- 5** Blade
- 6** Measuring cup

- 7** Whisk*
 - 8** Whisk base*
 - 9** Chopper bowl*
 - 10** Chopper bowl blade*
 - 11** Chopper bowl lid*
- * - selected models only

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!