


EN BLENDER	2	LV BLENDERIS	43	TR BLENDER	83
HR BLENDER	7	LT TRINTUVAS	47	UK БЛЕНДЕР	88
CS MIXÉR	11	NO BLENDER	51	AR مخلوط	94
DA BLENDER	15	PL BLENDER	55		
ET BLENDER	19	RO BLENDER	59		
FI TEHOSEKOITIN	23	RU БЛЕНДЕР	63		
FR MIXEUR	27	SR БЛЕНДЕР	67		
DE MISCHER	31	SK MIXÉR	71		
HU TURMIXGÉP	35	SL BLENDER	75		
IT FRULLATORE	39	SV BLANDARE	79		

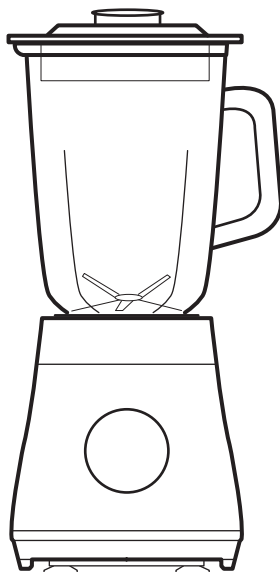

1. ⚠️ SAFETY INFORMATION

Before the installation and use of the appliance, carefully read the supplied instructions. The manufacturer is not responsible for any injuries or damage that are the result of incorrect installation or usage. Always keep the instructions in a safe and accessible location for future reference.

- This appliance is designed for mixing food.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children. Cleaning and user maintenance shall not be made by children without supervision. Children shall not play with the appliance.
- The appliance can only be connected to a power supply whose voltage and frequency comply with the specifications on the rating plate.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Always place the appliance on a flat surface.
- Always switch off and disconnect the appliance from the mains when left unattended and before assembling, disassembling, cleaning, changing accessories or approaching parts that move during use.
- **WARNING:** The blades and inserts are very sharp. Care shall be taken when assembling, disassembling after use or during cleaning.
- Do not let the blender run for more than 2 minutes at a time using heavy loads. After running for 2 minutes with heavy loads, the appliance should be left to cool for at least 10 minutes.

- Do not exceed the maximum filling volume as indicated on the appliance.
- Never operate appliance without lid.
- Do not immerse the appliance body, cord or plug in water or any other liquid.
- Do not use this appliance to stir paint. It may cause an explosion.
- Do not let the power cord touch or hang over hot surfaces.
- Use only accessories or parts recommended for this appliance.
- The appliance cannot be used for blending or grinding hard and dry substance, except for the ice cubes.
- Keep hands and utensils out of the appliance during operation to avoid the risk of severe injury or damage to the appliance.
- This appliance is intended for domestic use only. It must not be used for other purposes.
- This appliance is intended to be used in household and similar applications such as: staff kitchen areas in shops, offices and other working environments, farm houses, by clients in hotels, motels and other residential type environments or bed and breakfast type environments.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!