

PHILCO®



Famous for Quality the World Over

SLOW JUICER
ŠNEKOVÝ ODŠŤAVŇOVAČ
ŠNEKOVÝ ODŠŤAVOVAČ
SOKOWIRÓWKA ŚRUBOWA
CSIGÁS GYÜMÖLCSPRÉS



PHJE 5030

User's Manual
Návod k obsluze
Návod na obsluhu
Instrukcja obsługi
Használati utasítás

CONTENTS

1. IMPORTANT SAFEGUARDS	3
2. PARTS NAME AND ACCESSORIES	4
3. CAUTIONS BEFORE USE	5
4. ASSEMBLY METHOD	5
5. FUNCTIONAL DESCRIPTION	7
6. USAGE	7
7. DISASSEMBLY METHOD	8
8. ICE CREAM MAKING METHOD	9
OPERATING STEPS.....	9
MANGO AND BANANA ICE CREAM.....	9
DRAGON FRUIT ICE CREAM (MAY ADD IN YOGHURT OR MILK ACCORDING TO PERSONAL TASTE)	9
PEACH ICE CREAM	10
9. CARE AND CLEANING	10
CLEANING.....	10
MAINTENANCE	11
10. PRODUCT TECHNICAL PARAMETERS	11

Dear customer,

Thank you for buying a PHILCO brand product. So that your appliance serves you well, please read all the instructions in this user's manual.

1. IMPORTANT SAFEGUARDS

Read the instructions, keep them safe, pass them on if you pass the appliance on. Remove all packaging before use.

Follow basic safety precautions, including:

1. Don't put the main unit in liquid, don't use it in a bathroom, near water, or outdoors.
2. Unplug before fitting or removing an attachment.
3. Household use only.
4. Don't use the appliance unless the lid is in place.
5. Don't fill with anything hotter than you can comfortably handle (i.e. below 40°C).
6. Don't put spoons, spatulas, or any other object into the jug while the appliance is plugged in.
7. Don't leave the appliance unattended while plugged in.
8. Sit the main unit on a dry, firm, level surface.
9. Route the cable so it doesn't overhang, and can't be tripped over or caught.
10. Don't let the jug overflow. If liquid gets under the main unit, it may be sucked into the motor, damaging it.
11. Don't use the appliance for any purpose other than those described in these instructions.
12. Don't use the appliance if it's damaged or malfunctions.
13. Children should be supervised to ensure that they do not play with the appliance.
14. When the machine has overload protection, do not touch the machine, to stay in continue to use when machine is back to normal.
15. This appliance shall not be used by children.
Keep the appliance and its cord out of reach of children.
16. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
17. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
18. Always disconnect the appliance from the supply if it is left unattended and before assembling, disassembling or cleaning.
19. Do not use the appliance if the rotating sieve is damaged.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
21. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.



Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!