

PHILCO®



Famous for Quality the World Over

AIR FRYER
HORKOVZDUŠNÁ FRITÉZA
TEPLOVZDUŠNÁ FRITÉZA
FRYTOWNICA NISKOTŁUSZCZOWA
FORRÓLEVEGŐS FRITŐZ



PHAF 5000

User's Manual
Návod k obsluze
Návod na obsluhu
Instrukcja obsługi
Használati utasítás

CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS	3
2. PARTS DESCRIPTION	5
3. KNOW YOUR SMART FRYER	6
BEFORE THE FIRST USE.....	6
USEFUL HINTS FOR USE.....	6
FUNCTION BUTTONS.....	6
USING THE APPLIANCE	7
SETTINGS	8
4. CLEANING AND MAINTENANCE.....	9
5. TROUBLESHOOTING.....	10

1. IMPORTANT SAFETY INSTRUCTIONS

READ CAREFULLY AND STORE FOR FUTURE USE.

- This appliance may be used by children 8 years of age and older and by persons with physical or mental impairments or by inexperienced persons, if they are properly supervised or have been informed about how to use the product in a safe manner and understand the potential dangers. Cleaning and user maintenance must not be performed by children unless they are older than 8 years of age and under supervision. Children must not play with the appliance. Keep this appliance and the power cord out of reach of children that are younger than 8 years of age.
- This appliance is designed for household use only. It is not intended for use in locations such as:
 - staff kitchens in stores, offices and other workplaces;
 - agricultural farms;
 - hotel or motel rooms and other living areas;
 - bed and breakfast establishments.
- This appliance serves to process food by heat. Do not use it for any other purpose than for which it was designed.
- Do not place the appliance on window sills, sink drainboards, unstable surfaces, on electric or gas stoves, or in their vicinity. Only place the appliance on a stable, even, dry surface.
- Before connecting the appliance to a power socket, check that the voltage on its rating label matches the electrical voltage in the power socket. Connect the appliance only to a properly grounded socket.
- The appliance is equipped with a removable power cord. Before disconnecting the power cord from the appliance, always first remove the plug from the power socket.

Attention:

This appliance is not designed to be controlled using a programmed device, external timer switch or remote control.

- Only use the appliance with the original accessories from the manufacturer.
- Do not use the appliance near flammable materials such as curtains, kitchen towels, etc.
- To ensure sufficient air circulation during operation, there must be a clearance of at least 15 cm on all sides of the appliance. Do not place any items on to the appliance and do not cover the ventilation openings.
- Avoid contact with hot steam, which is released from the ventilation openings while the appliance is running.
- Do not overfill the removable basket with a large amount of food. Make sure that the food placed in the removable basket does not come into contact with the heating element.
- Do not place your hands into the internal area of the appliance while it is running.
- Do not fill the removable pan with oil. Filling the pan with oil could result in a dangerous situation arising. This healthy frying method is based on the principle of circulating hot air that does not require the use of oil. A small amount of oil can be added purely for the purpose of flavouring the food.
- Do not use the appliance to fry foods with a high fat content.

Obsah je uzamčen

Dokončete, prosím, proces objednávky.

Následně budete mít přístup k celému dokumentu.



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!