



CANYON
YOU CAN

Smartwatch
Sandy KW-34

QUICK GUIDE v1

DEVICE SPECIFICATION:

Model: Sandy KW-34

Chip: MTK2503, 260MHz

Memory: RAM 32MB, ROM 32MB

Screen: 1.44" 128x128px fulltouch TN screen, single touch

Battery: removable Li-Polymer 3.7V 400mAh

Camera: 0.08Mpx

Geolocation types: GPS (L1, 1575.42MHZ), LBS (cell towers location, GPRS Class12)

Network type: GSM 2G 850/900/1800/1900

Sim card type: Nano-SIM (sim card not included)

Working temperature: 0°C to +40°C

Working humidity: 0% to 80%

Waterproof: Non-waterproof

Standby time: up to 4 days

Charging cable type: USB Type A to Micro USB

Size: body 52.9mm x 40.3mm x 14.8 mm, belt 20mm x 230mm

Weight: 42g

This device is not intended for children under 4 years old.



INTRODUCTION

Dear customer, thank you for choosing Canyon kids watch! KW-34 will help you in caring on your kid – it's support 2-way calls, GPS location, a lot of features to track the child and it's harder to lose or break. More of all, your kid will like it because of useful tools and game! Please read this Guide carefully prior to use, that you may start to use the device quickly and correctly.

1. PREPARATION BEFORE USING


1.1 Charge the device before use.

Plug Micro-usb side of the USB-cable into the power connector of the watch and the other side to a power source (power source parameters: DC 5V 1A). For better charging compatibility, it is advisable to use a Power Bank or wall charger produced by Canyon.

The charging process should be indicated at the screen. Full charging indicates by the following icon: 


1.2 Check that all the accessories are included (smartwatch, user manual, USB cable, label with registration code).

1.3 Choose the 2G Nano-SIM card which matches your GSM network, as recommended by your dealer (Turn the watch off before you insert the

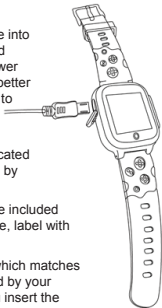

Nano-SIM card). Disable PIN code request of your SIM-card. Please check that the Nano-Sim card is activated, there is available credit, 2G data transmission is supported and activated.

1.4. Open the battery cover and remove the battery, install Nano-SIM card as the pic shows.

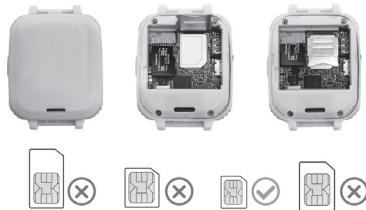

1.5. Press and hold Power/SOS key to turn on the device

Note. After successful registration in Canyon Life APP, turning off the watch in normal usage mode is possible only from APP. So the kid can't turn it off to hide his location position. But anyway there're ways how to turn it off (low battery, remove battery, GSM signal is absent)

Obsah je uzamčen

**Dokončete, prosím, proces objednávky.
Následně budete mít přístup k celému dokumentu.**



Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:

- 1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

**) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

- 2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!