

# Rowenta®



---

EN  
FR  
ES  
DE  
NL  
IT  
PT  
RO  
BG  
SL  
SR  
EL  
BS  
PL  
LT  
CS  
SK  
HU  
TR  
HR  
LV

1800135493/01 - 23/15

**SILENCE COMFORT - SO5115**

[www.rowenta.com](http://www.rowenta.com)

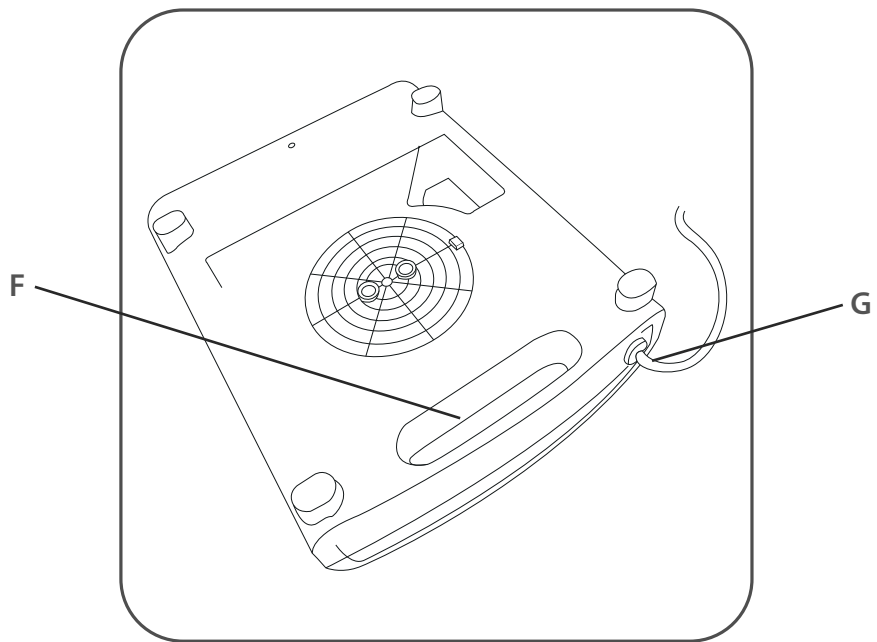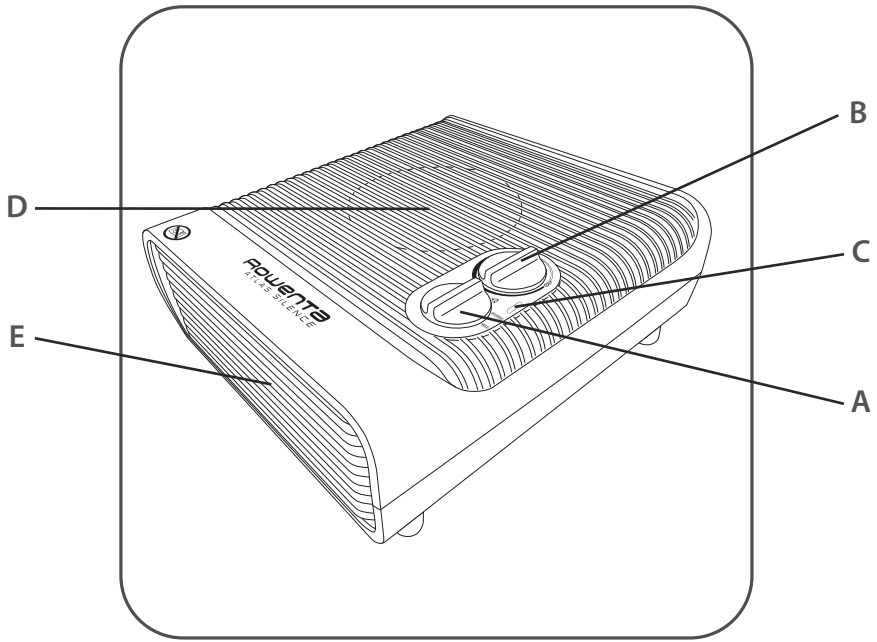

## **DESCRIPTION**

EN

- |   |                     |
|---|---------------------|
| A. Function select switch                 | D. Air intake grid  |
| B. Temperature-control switch :Thermostat | E. Air outlet grid  |
| C. On/Off indicator                       | F. Transport handle |
|   | G. Power Cord       |

**Please read the instruction manual and safety instructions carefully before using the appliance and keep the instruction manual for reference.**

## **SAFETY INSTRUCTIONS**

### **WARNING:**

Before use, always check that the appliance, plug and power cord are in good condition.

The appliance must be used under normal working conditions as defined in this notice.

To avoid overheating, **NEVER COVER THE APPLIANCE** .

Certain parts of this product may become very hot and could cause burns. Please be particularly vigilant in the presence of children and vulnerable people when the appliance is in use. It is recommended that children under three years of age keep a safe distance from the appliance, unless they are under continuous supervision.

Children between 3 years and 8 years of age must only start or stop the appliance when it has been placed or installed in its normal standard operating position and if they are under supervision or have received instructions about using the appliance in complete safety and understand the potential dangers. Children aged between 3 years and 8 years of age must not plug in the appliance, adjust the settings, clean it or carry out maintenance.

This appliance may be used by children aged eight or older and by persons lacking experience or knowledge or with reduced physical, sensory or mental capabilities, provided they have received instructions and training on how to use the appliance safely and are fully aware of the dangers. Children should not be allowed to play with the appliance. Children aged 8 years or older may not clean or carry out maintenance unless they are supervised by an adult.

This appliance is not designed to be used by persons (including children) with reduced physical, sensory or mental capacities, or lacking experience or knowledge, unless they are supervised, or given prior instructions relating to the use

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.  
Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!