



**PHILIPS**

HR7510 HR7520  
HR7530











EN	User manual	7	LV	Lietotāja rokasgrāmata	65
BG	Ръководство за потребителя	14	PL	Instrukcja obsługi	72
CS	Příručka pro uživatele	22	RO	Manual de utilizare	80
ET	Kasutusjuhend	29	RU	Руководство пользователя	87
HR	Korisnički priručnik	36	SK	Príručka uživatela	95
HU	Felhasználói kézikönyv	43	SL	Uporabniški priročnik	102
KK	Қолданушының нұсқасы	51	SR	Korisnički priručnik	109
LT	Vartotojo vadovas	58	UK	Посібник ко ристувача	116






 


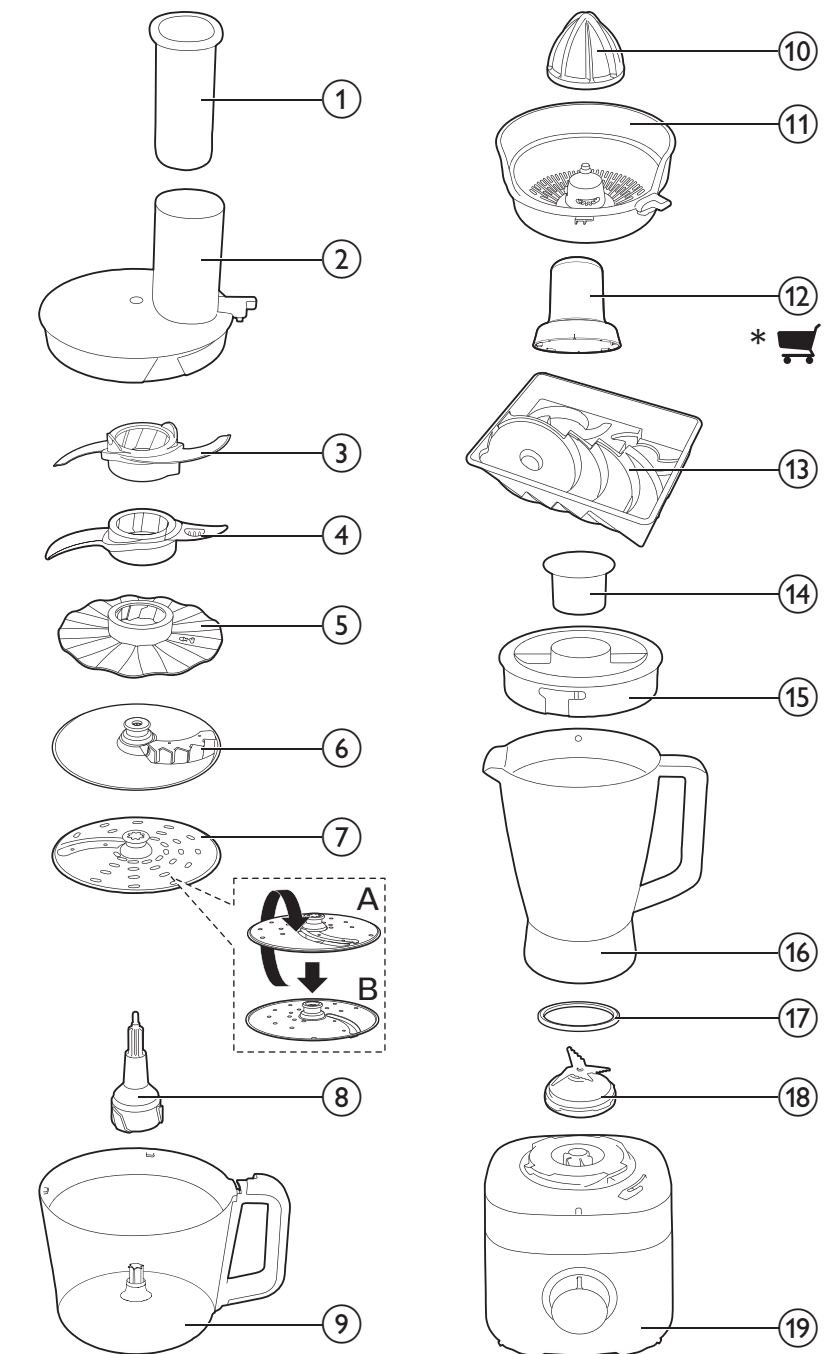

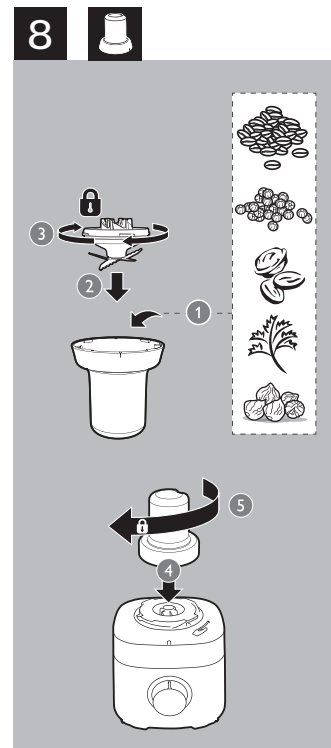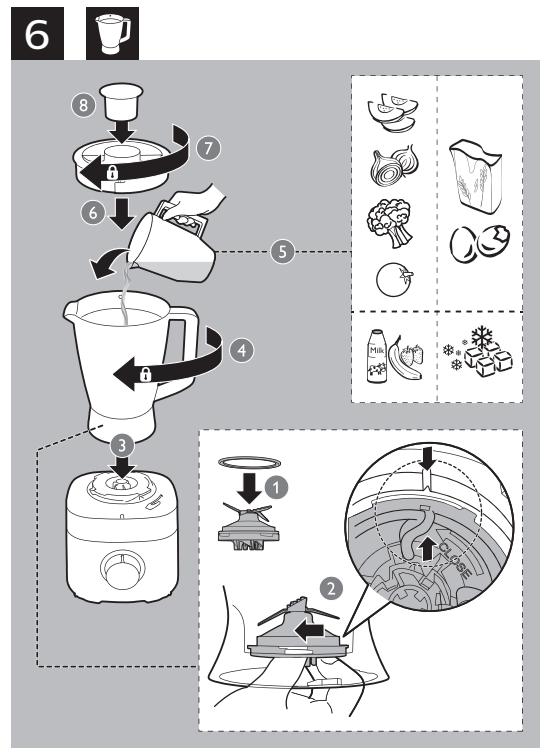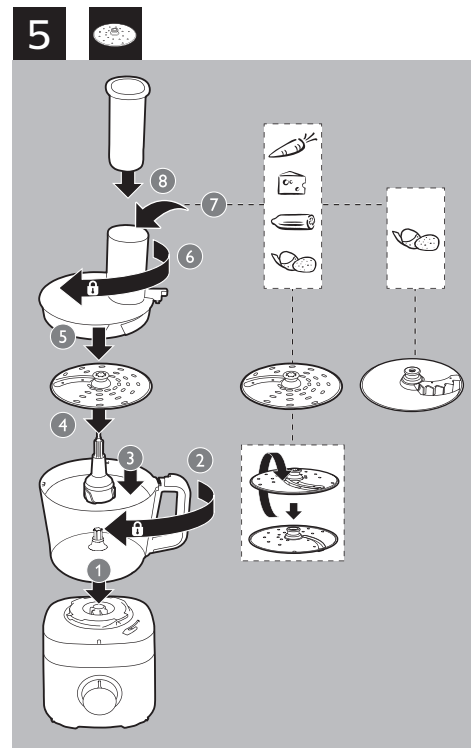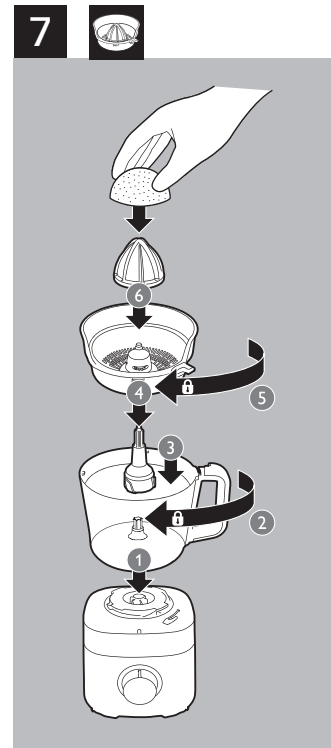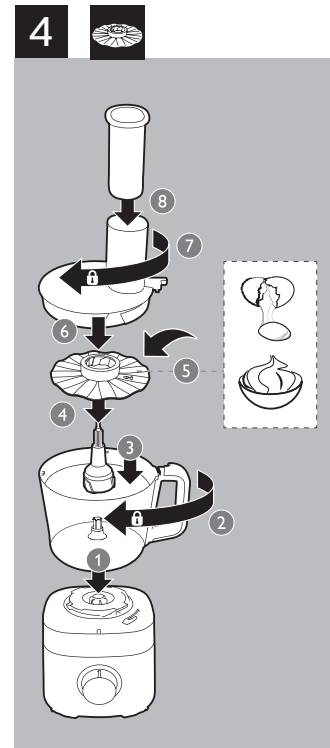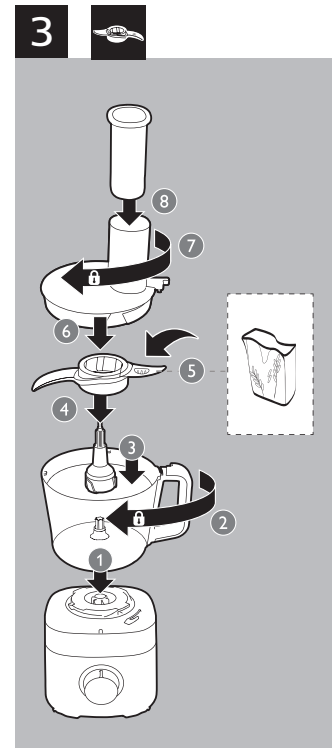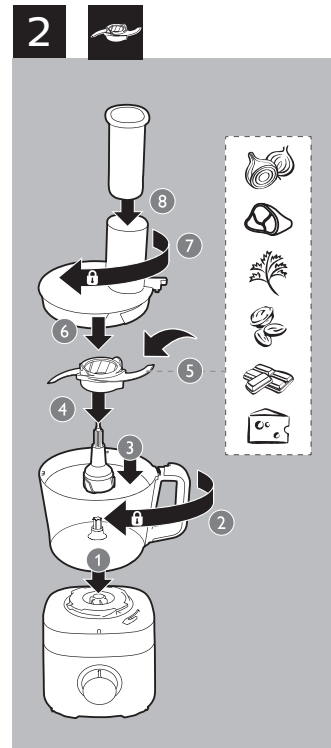




 































- EN \* If you want to purchase an additional accessory, please contact Philips Consumer Care Center in your country.
- BG \* Ако искате да закупите допълнителен аксесоар, моля, свържете се с Центъра за обслужване на потребители на Philips във Вашата държава.
- CS \* Chcete-li zakoupit další příslušenství, obraťte se na Středisko péče o zákazníky společnosti Philips ve své zemi.
- ET \* Lisatarviku ostmise soovi korral võtke ühendust oma riigi Philipsi klienditeeninduskeskusega.
- HR \* Ako želite kupiti dodatni dio, obratite se centru za korisničku podršku tvrtke Philips u svojoj državi.
- HU \* Ha további tartozékot szeretne vásárolni, vegye fel a kapcsolatot a helyi Philips vevőszolgálattal.
- KK \* Қосымша керек-жарақты сатып алу үшін өз еліңізде Philips сатып алушыларына қызмет көрсету орталығына жүгініңіз.
- LT \* Jei norite nusipirkti papildomą priedą, susisiekite su „Philips“ klientų aptarnavimo centru savo šalyje.
- LV \* Ja vēlaties iegādāties papildu piederumus, lūdzu, sazinieties ar Philips klientu apkalpošanas centru savā valstī.
- PL \* Jeśli chcesz zakupić dodatkowe akcesoria, skontaktuj się z lokalnym Centrum Obsługi Klienta firmy Philips.
- RO \* Dacă dorești să achiziționezi un accesoriu suplimentar, te rugăm să contactezi centrul de asistență pentru clienți Philips din țara ta.
- RU \* Если вы хотите приобрести дополнительный аксессуар, обратитесь в центр поддержки потребителей Philips в вашей стране.
- SK \* Ak chcete zakúpiť dodatočné príslušenstvo, obráťte sa na Stredisko starostlivosti o zákazníkov spoločnosti Philips vo svojej krajine.
- SL \* Če želite kupiti več dodatne opreme, se obrnite na Philipsov oddelek za pomoč uporabnikom v svoji državi.
- SR \* Ako želite da kupite dodatni deo, obratite se centru za korisničku podršku kompanije Philips u svojoj zemlji.
- UK \* Якщо Ви бажаєте придбати додатковий аксесоар, звертайтеся до Центру обслуговування клієнтів Philips у своїй країні.





1









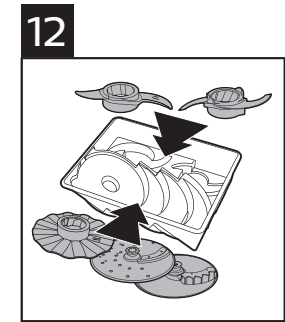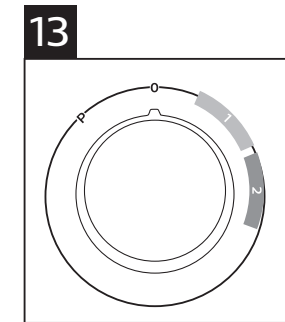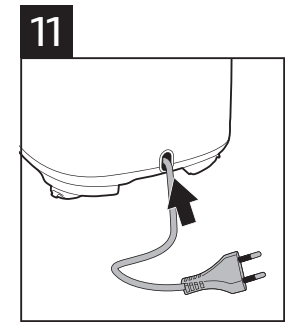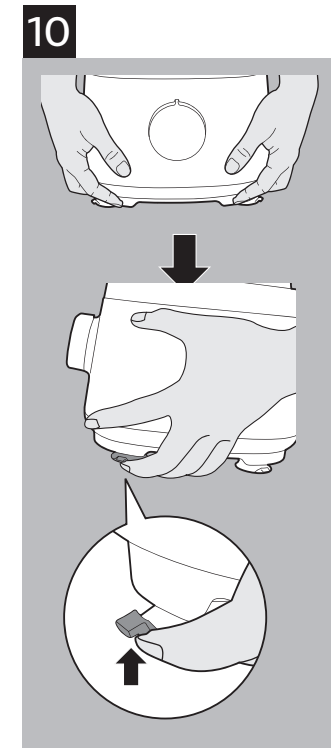











**9**

		 (MAX)	 (MAX)	
		5 x 1 sec	500 g	P
		5 x 1 sec	500 g	P/2
		30 sec	50 g	P
		60 sec	250 g	2
		45 sec	250 g	2
		30 sec	200 g	2
		2-3 min	500 g 280 ml	1
		60-180 sec	350 ml	1
		60-180 sec	4 pcs	1
		30 sec	500 g	1
		30 sec	200 g	1
		30 sec	2 pcs	1
		30 sec	500 g	1
		30 sec	500 g	1
		1 min	1 L	2
		1 min	1 L	2
		1 min	1 L	2
		P x 9	6 x * 400 g	P
		2 min	600 ml 400 g	2
		2 min	500 g	1
		5 sec	25 g	2



**14**

							
	✓	✓	✗		✓	✓	✓
	✓	✓	✓		✓	✓	✓
	✓	✓	✓		✓	✓	✓
	✓	✓	✗		✓	✓	✓
	✗	✗	✓		✓	✓	✓

# 1 Important

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

Read this user manual carefully before you use the appliance, and save the user manual for future reference.

## Danger

- Do not immerse the motor unit in water nor rinse it under the tap.

## Warning

- Never use your fingers or an object to push ingredients into the feeding tube while the appliance is running. Only use the pusher.
- Before you connect the appliance to the power, make sure that the voltage indicated on the bottom of the appliance corresponds to the local power voltage.
- Never connect this appliance to a timer switch, to avoid a hazardous situation.
- Do not use the appliance if the power cord, the plug, protecting cover or any other parts are damaged or has visible cracks.
- If the power cord is damaged, you must have it replaced by Philips, a

service center authorized by Philips, or similarly qualified persons to avoid a hazard.

- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved.
- Never let the appliance run unattended.
- If food sticks to the wall of the blender jar or bowl, switch off the appliance and unplug it. Then use a spatula (not provided) to remove the food from the wall.
- Be careful when you are emptying the bowl, handle or clean the discs, the blade units and the juicer sieve. The cutting edges are very sharp.
- Do not touch the blades, especially when the appliance is plugged in. The blades are very sharp.

# Obsah je uzamčen

**Dokončete, prosím, proces objednávky.  
Následně budete mít přístup k celému dokumentu.**



**Proč je dokument uzamčen? Nahněvat Vás rozhodně nechceme. Jsou k tomu dva hlavní důvody:**

1) Vytvořit a udržovat obsáhlou databázi návodů stojí nejen spoustu úsilí a času, ale i finanční prostředky. Dělali byste to Vy zadarmo? Ne\*. Zakoupením této služby obdržíte úplný návod a podpoříte provoz a rozvoj našich stránek. Třeba se Vám to bude ještě někdy hodit.

*\*) Možná zpočátku ano. Ale vězte, že dotovat to dlouhodobě nelze. A rozhodně na tom nezbohatneme.*

2) Pak jsou tady „roboti“, kteří se přiživují na naší práci a „vysávají“ výsledky našeho úsilí pro svůj prospěch. Tímto krokem se jim to snažíme překazit.

A pokud nemáte zájem, respektujeme to. Urgujte svého prodejce. A když neuspějete, rádi Vás uvidíme!